

GIANNI INDUSTRIES MOD-AD500DB Interlock Module Instruction Manual


[Home](#) » [GIANNI INDUSTRIES](#) » [GIANNI INDUSTRIES MOD-AD500DB Interlock Module Instruction Manual](#) 

Contents


- [1 GIANNI INDUSTRIES MOD-AD500DB Interlock Module](#)
- [2 Jumper Setting](#)
- [3 Instructions](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

GIANNI INDUSTRIES

GIANNI INDUSTRIES MOD-AD500DB Interlock Module

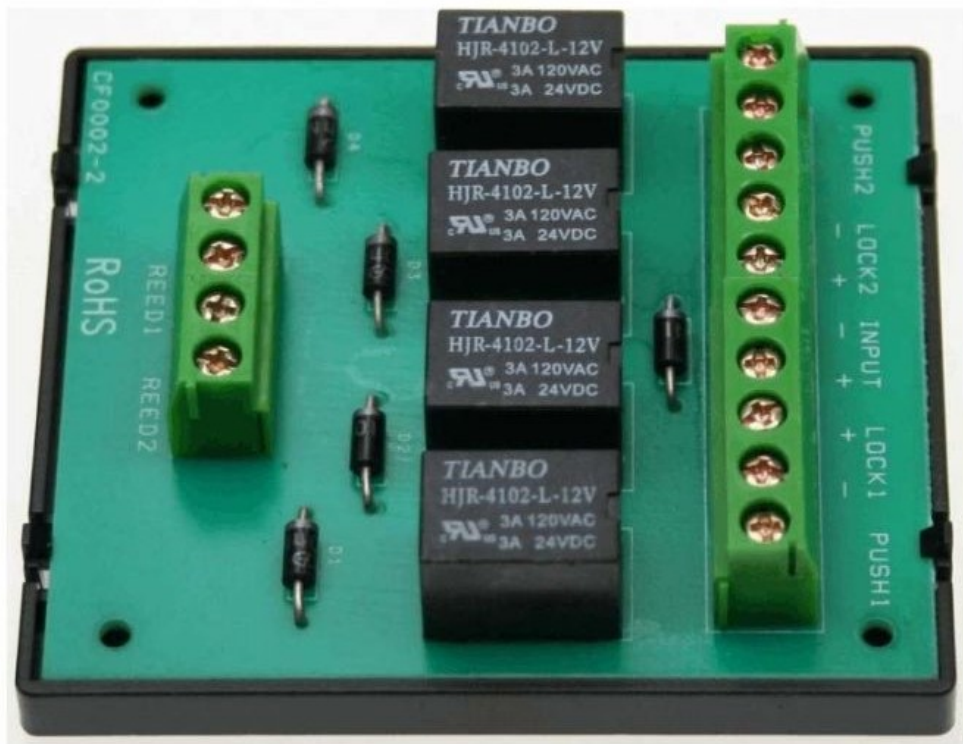


Jumper Setting

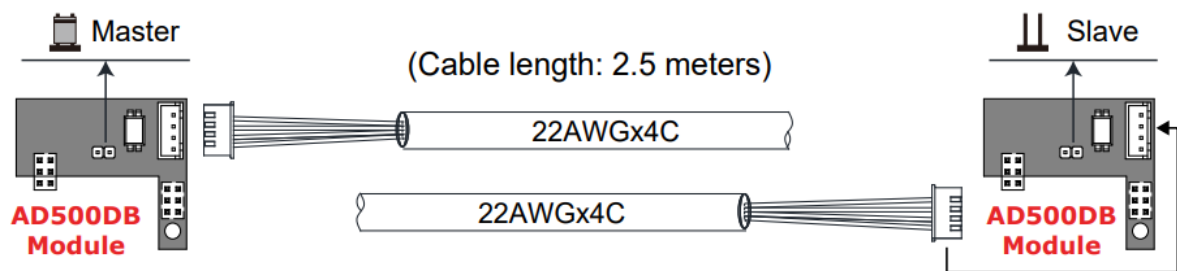


Instructions

Install the AD500DB Interlock Module on the AD500 Control Unit per shown in the diagram. Configure 'Master' and 'Slave' through jumper setting for the system to recognise the order in which the doors will open.


1. Master door opens first

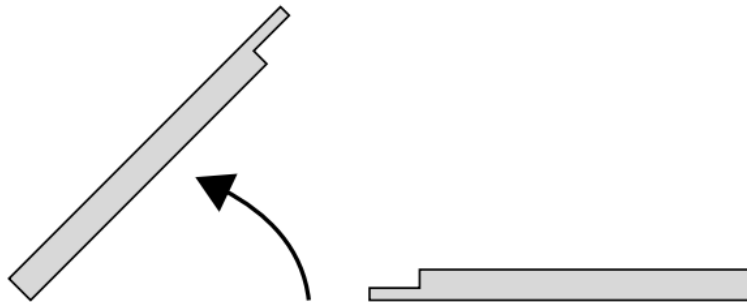


2. Once master door opens, slave door follows.

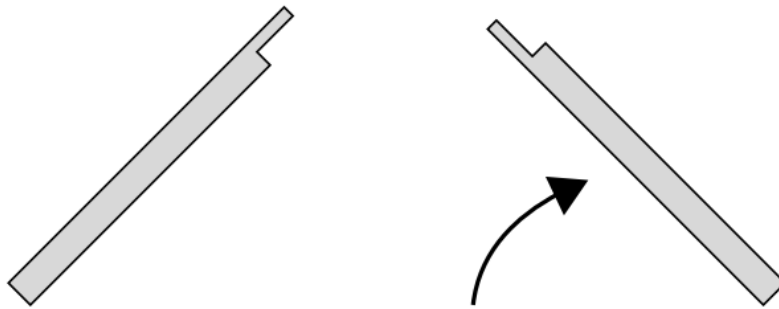

3. Slave door closes first.

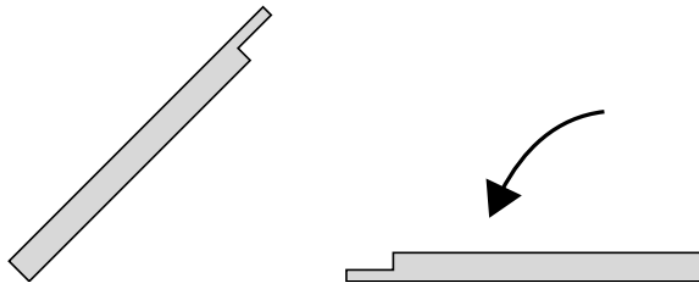

4. slave door is closed, master door will start to close.

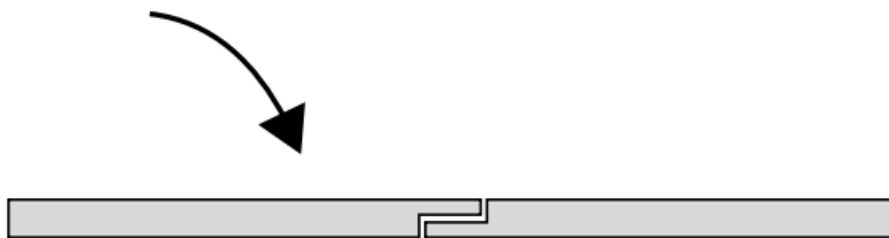

Documents / Resources

	GIANNI INDUSTRIES MOD-AD500DB Interlock Module [pdf] Instruction Manual MOD-AD500DB Interlock Module, MOD-AD500DB, Interlock Module, Module
--	--