

GIGABYTE Aorus Sensor Panel and Display User Guide

Home » Gigabyte » GIGABYTE Aorus Sensor Panel and Display User Guide 🖫

GIGABYTE Aorus Sensor Panel and Display



Contents

- 1 How To Load the AORUS Sensor Panel Skin?
- 2 Documents / Resources
 - 2.1 References
- 3 Related Posts


How To Load the AORUS Sensor Panel Skin?

To use the AORUS sensor panel and display it on your secondary screen, follow the steps below to complete the required settings.


1. Set up the secondary display

Once you have connected the secondary screen, make sure to arrange your displays correctly.

Right-click on the taskbar at the bottom of the screen and select Taskbar Settings. Under Taskbar behaviors, uncheck Show my taskbar on all displays.

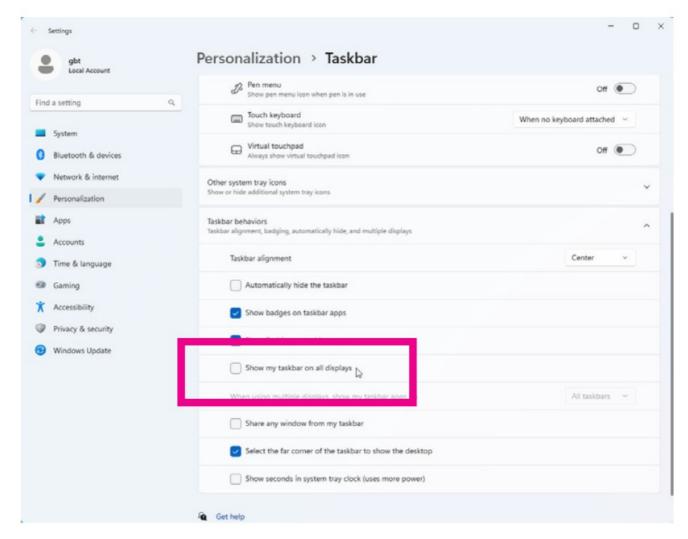

Then, right-click on the desktop and select Display settings. Drag and drop each display to rearrange them according to their physical layout on your desktop. Make sure Extend these displays is selected.

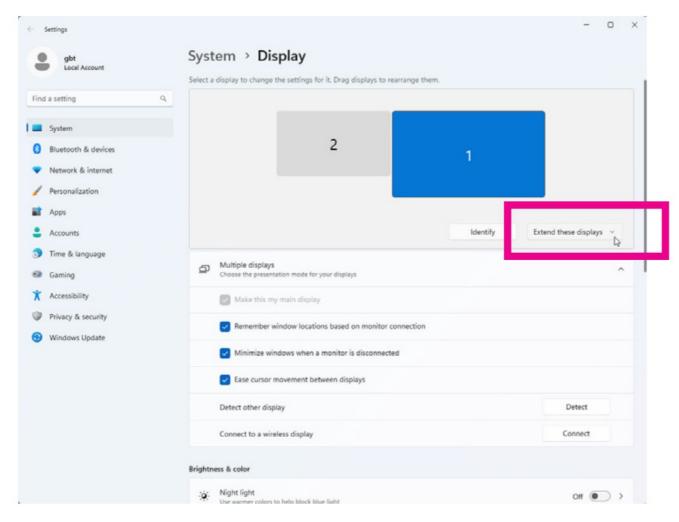

Tip: You can use a third-party app to lock the mouse to your primary screen .

2. Download, install, and tune HWiNFO and Rainmeter

Before installing the AORUS Sensor Panel, install the two applications first. Visit the official websites of the three applications and download the latest version.

HWiNFO (https://www.hwinfo.com/)






Configure HWiNFO64

Open the System tray on the taskbar corner, right-click on the "HWiNFO64" icon and then select Settings. Configure HWiNFO64 with the recommended options as shown. Note: You need to re-enable the Shared Memory Support option in HWiNFO64 every 12 hours or you can install HWiNFO64 Pro.

eneral / User Interface Safety SMBus / I2C	Driver Management License Management	nt
Show System Summary on Startup	Wake disabled GPUs	
Show Sensors on Startup	─ Wake disabled GPUs (Extended)
Minimize Main Window on Startup	Poll Sleeping GPUs	
Minimize Sensors on Startup	Reorder GPUs	
Minimize Sensors instead of closing	Prefer AMD ADL	
Show Welcome Screen and Progress		
✓ Validate Window Positions	Remember Preferences	
✓ Auto Start		Color Mode
✓ Automatic Update	Backup User Settings	O Default (Grey)
✓ Flush Buffers on Start		O Default (Black)
Snapshot CPU Polling	Reset Preferences	Oisabled (Light)
Shared Memory Support [12-HOUR LIMIT]		Theme:
anguage:		GIGABYTE AORUS
English	Check for Updates	didn't TENOTIOS


Rainmeter

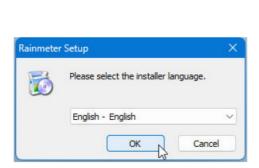




Configure Rainmeter

Open the System tray on the taskbar corner, right-click the "Rainmeter" icon to display the Manage Rainmeter window. Before you load the AORUS Sensor Panel skin, you can clear the default skins in the top-right corner. Unload the default skins by right-clicking on each of the windows and selecting Unload skin.

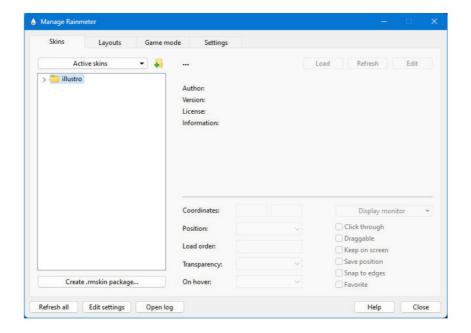


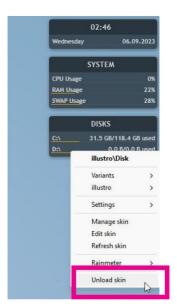


3. Download and install the AORUS Sensor Panel Skin

Visit the GIGABYTE website and download the AORUS Sensor Panel skin (https://www.gigabyte.com/FileUpload/Global/KeyFeature/2496/innergigabyte/download/AORUS-Sensor-Panel.rmskin.zip).

Install the AORU Sensor Panel and you will see the installed AORUS skin listed on the left-hand side panel of the Manage Rainmeter window.

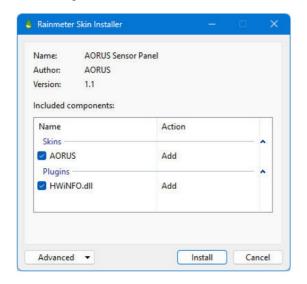


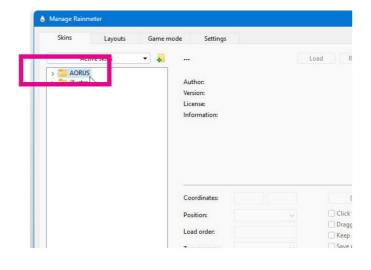


4. Load the AORUS Sensor Panel Skin on Rainmeter

To correctly display the AORU Sensor Panel, be sure to do the following steps.

Step 1: Open HWiNFO64. Go to Documents\Rainmeter\Skins\AORUS\@Resources, launch HWiNFOSharedMemoryViewer.exe and open the Notepad file named Titles, Meters and Icons.

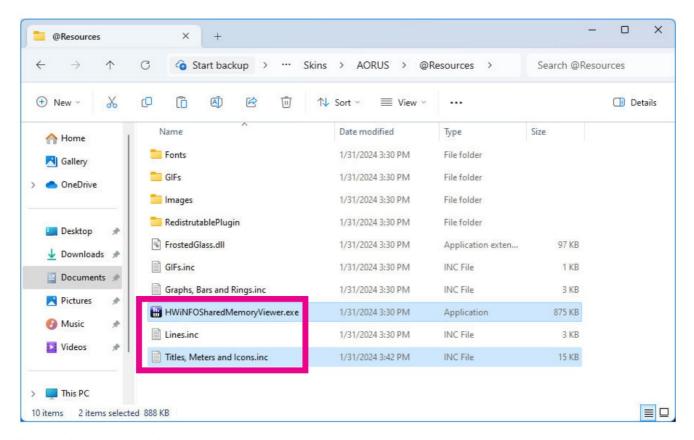


Step 2: On the HWiNFO Shared Memory Viewer window, look for and select the GPU sensor. Under the Sensor Details section, copy the ID in the Instance column and paste it to replace the original value in "GPUHWiNFOSensorInstance" on the Notepad window. Save the changes to Notepad and close.

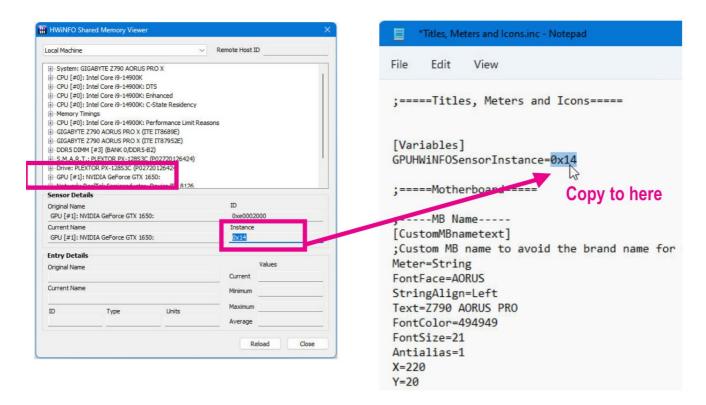

Step 3: On the Manage Rainmeter window, double-click the AORUS skin folder to expand and select the ".ini" file.

Click the Load button on the right to load AORUS Sensor Panel skin.

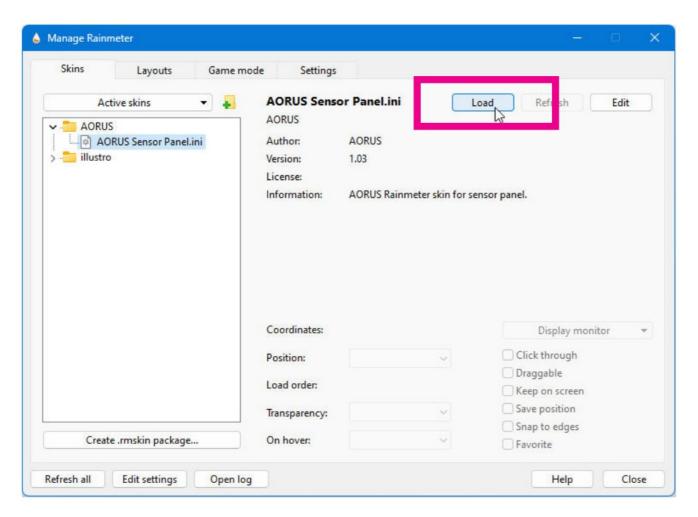

Step 4: Once the AORUS Sensor Panel appears on the desktop, you can drag it to your secondary display



Documents / Resources



GIGABYTE Aorus Sensor Panel and Display [pdf] User Guide Aorus Sensor Panel and Display, Sensor Panel and Display, Panel and Display, Display

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.