 


GiiKER JKSD001 Smart Sudoku Puzzle Games

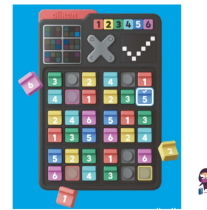

GiiKER JKSD001 Smart Sudoku Puzzle Games User Guide

 
[Home](#) » [GiiKER](#) » GiiKER JKSD001 Smart Sudoku Puzzle Games User Guide 

Contents

- [1 GiiKER JKSD001 Smart Sudoku Puzzle Games](#)
- [2 GiiKER Smart Sudoku](#)
- [3 How to Play](#)
- [4 Quick Start](#)
- [5 Specifications](#)
- [6 FAQ](#)
- [7 Limited Warranty](#)
- [8 EUROPEAN UNION-DISPOSAL INFORMATION](#)
- [9 FCC STATEMENT](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)



GiiKER JKSD001 Smart Sudoku Puzzle Games

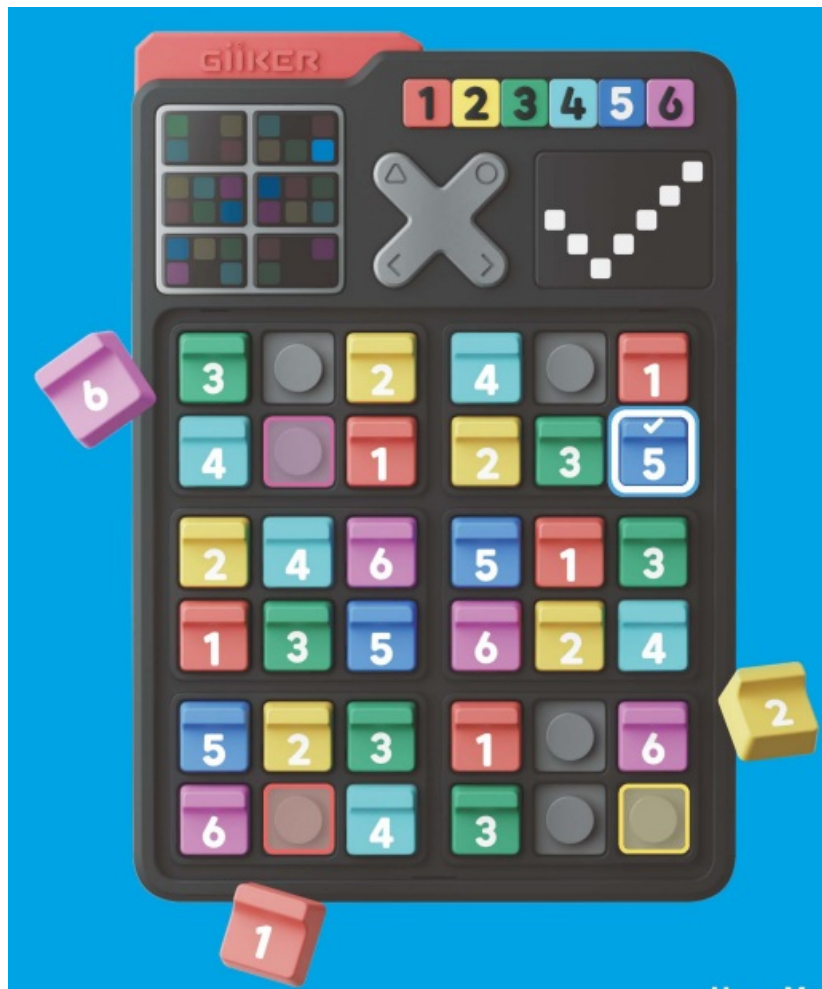


User Manual


Read this manual carefully before use and retain it for future reference.

GiiKER Smart Sudoku

 Smart Sudoku is an interactive number-placement game console supporting auto timer, hints and 1v1 battle. Follow the puzzle screen to set a game, the goal is to fill in the spaces so that the number does not repeat in each column, row and box. Explore the 2500+ leveled up puzzles and enjoy the game like never before!

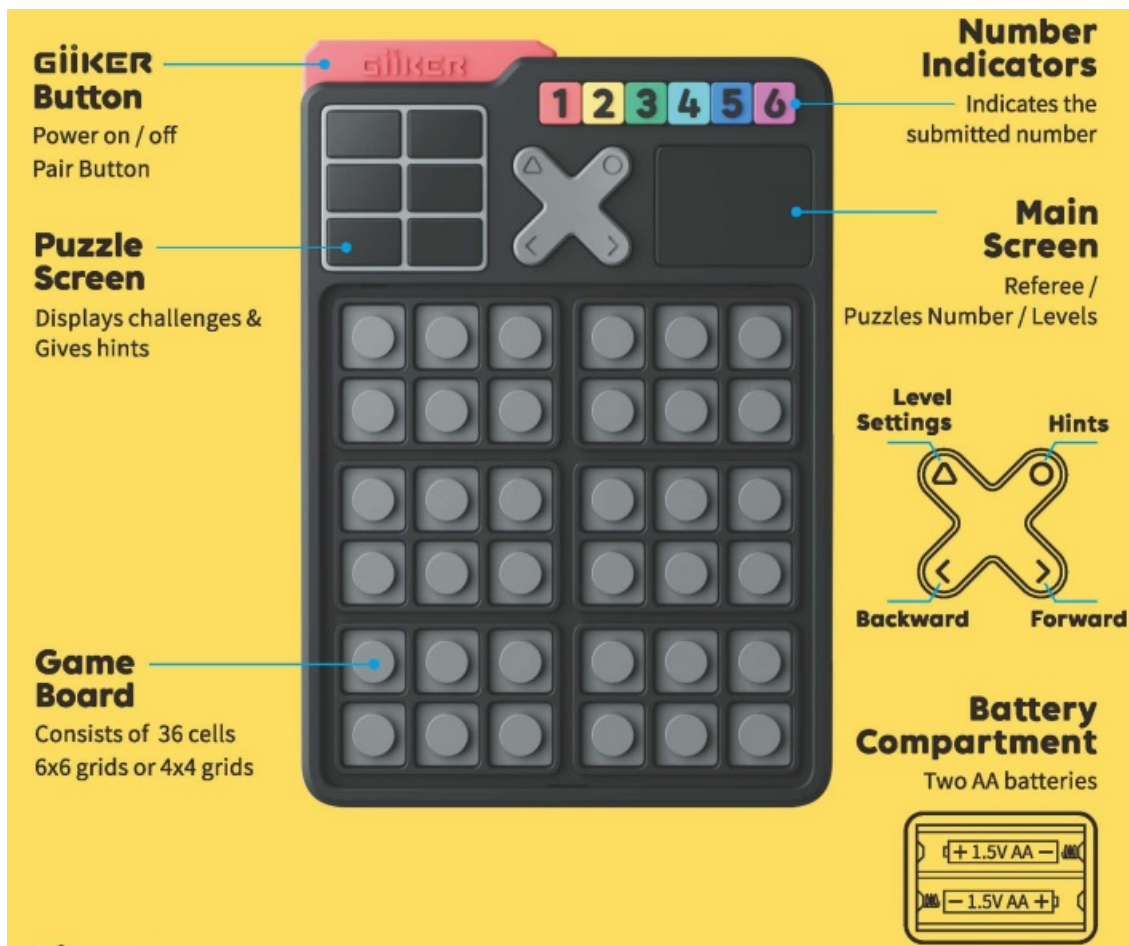

Pieces

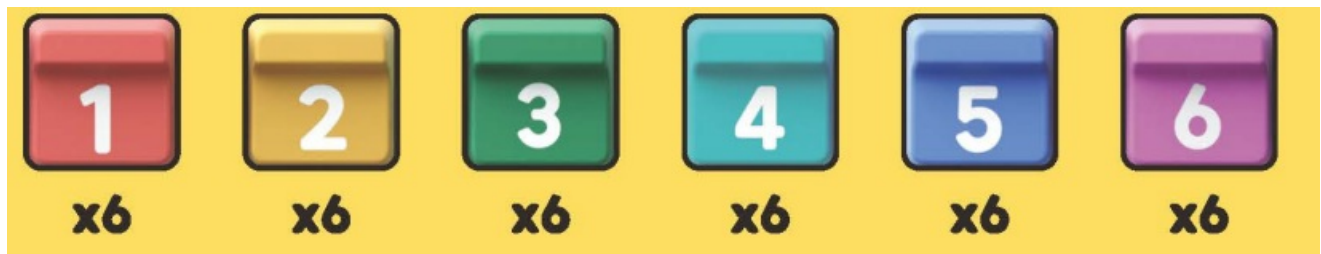 


How to Play

Smart Sudoku offers two grid formations: 6x6 Sudoku and 4x4 Sudoku, switch between the modes using the included cover.


6x6 Sudoku

 In each column, row, and 2x3 regions, the numbers 1 to 6 can only appear once.

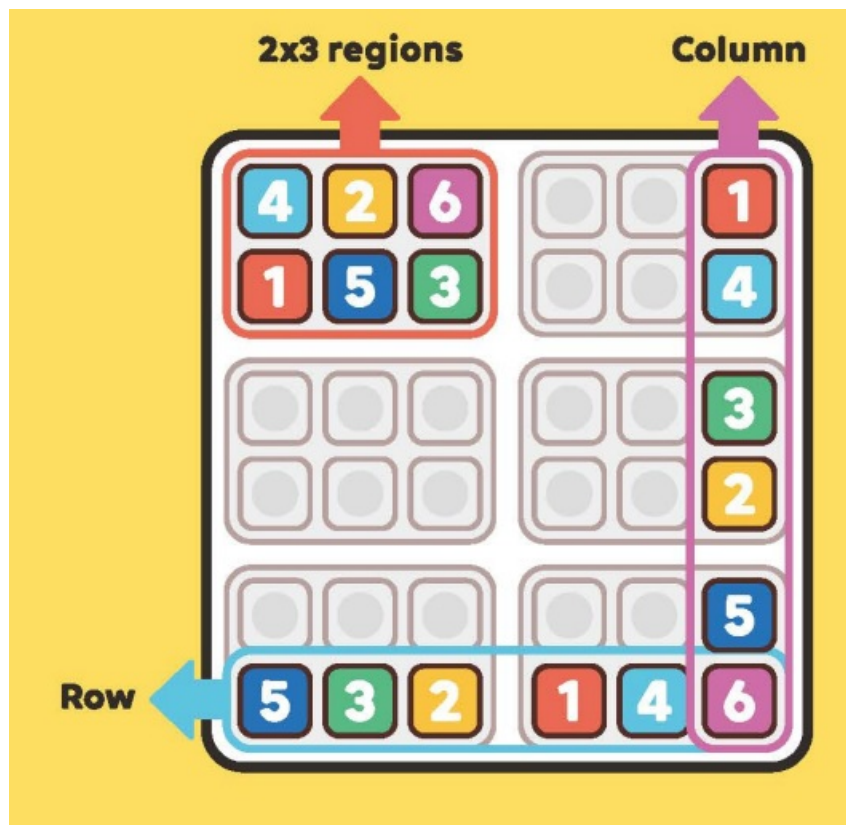

4×4 Sudoku

 In each column, row, and 2×2 square, the numbers 1 to 4 can only appear once. * To switch to 4×4 Sudoku mode, insert the cover into the game board.

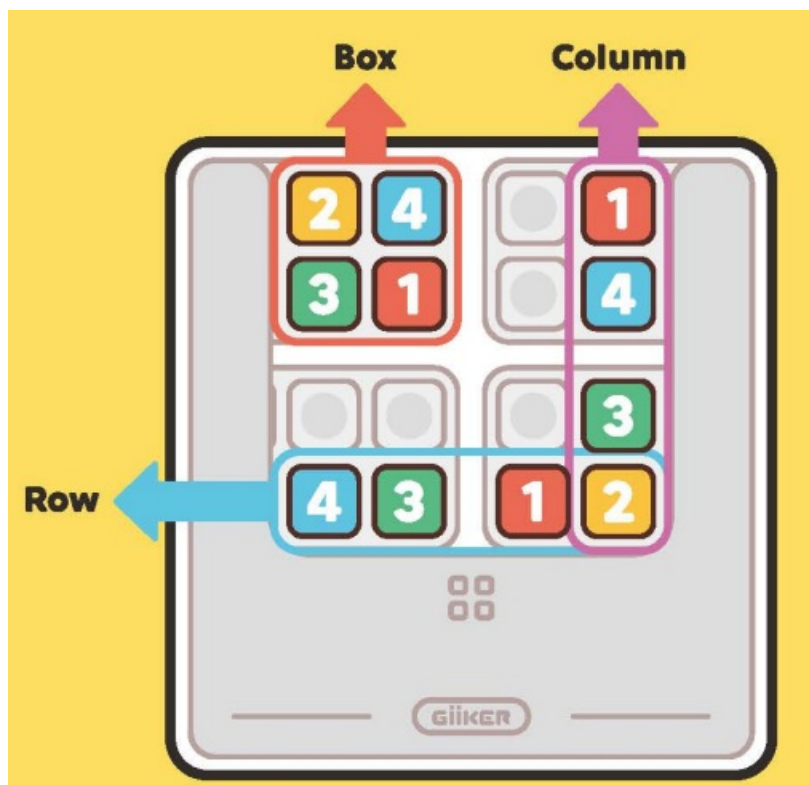

Quick Start

1. Power on

Long press GilKER button to turn on. Short press < or > to select a challenge.

 
2. Set a game

Set a game according to the puzzle screen, tap the cell to clear the corresponding pixel.



3. Solve

Place the number in the empty cell and tap the number of times to select the corresponding number indicator. The Main screen will give Correct / Wrong indication instantly.

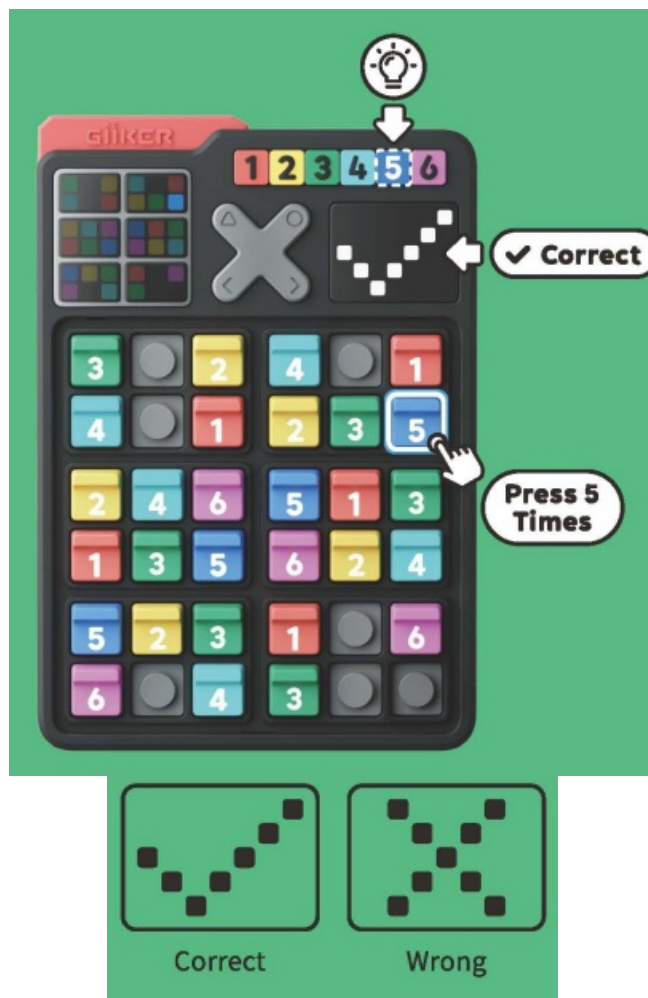












4. Complete

When all the spaces are filled in correctly, the puzzle screen plays animation to indicate completion and the function screen gives finish time instantly. You can clear the board and short press > to the next game. * The timer will display 59:59 for completion time over an hour.





Level Settings

- Short press  to enter Level Settings
- Short Press  to select the level.
- Short Press  again to confirm the level.

6x6 Sudoku					4x4 Sudoku		
L1	L2	L3	L4	L5	L1	L2	L3
							
Beginner	Intermediate	Advanced	Expert	Master	Beginner	Intermediate	Advanced
50 puzzles	450 puzzles	700 puzzles	500 puzzles	500 puzzles	50 puzzles	100 puzzles	150 puzzles

Hints Function

- **Step1:** Press  to show the hinting position according to the current status.
- **Step2:** Press  again to show the hinting solution.



* Whenever you place a number, you exit the hinting function.

1v1 Battle

Smart Sudoku offers head to head battle mode. When pairing, two devices should be as close as possible.

- Short press the GilKER button: Invite / Accept/ Surrender/Next
- Long press the GilKER button: Decline/ Exit

1. Invite Battle

 
- Short press the GilKER button, pair up with the other Smart Sudoku nearby.

2. Select Level


- Select the level by Initiator.


3. Battle Starts

- Battle time includes game set up.
- If wrong for 3 times, you lose.
- Surrender: Short press the GilKER button.

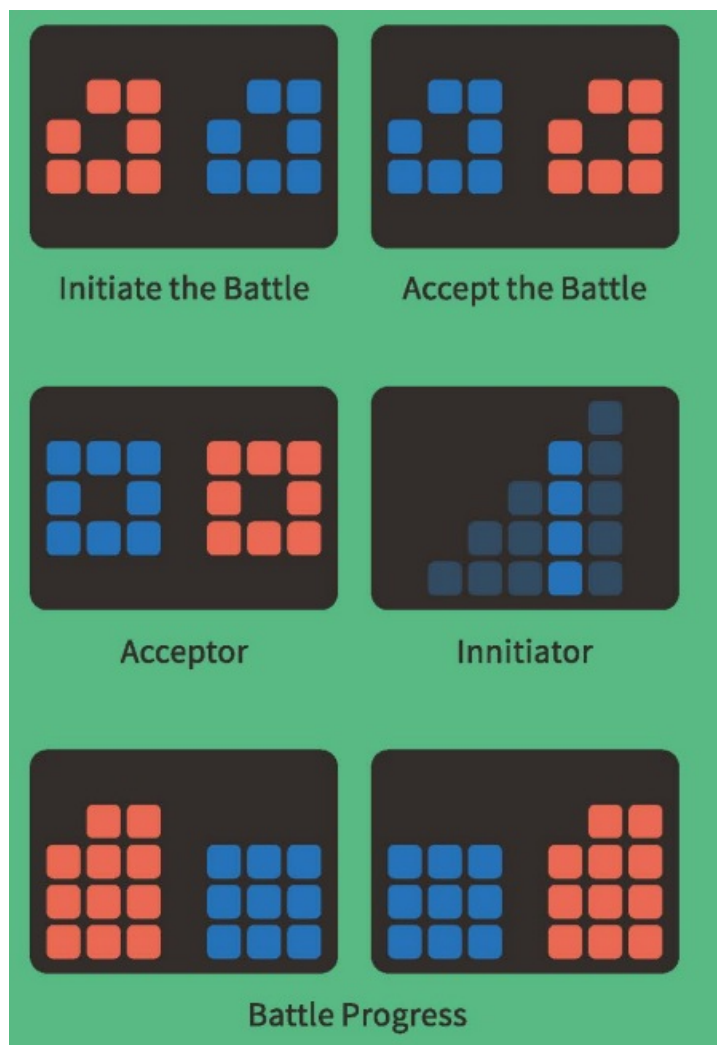


4. Next

 - Play Next Round (Without Changing difficulty level): Either player presses the GilKER button.
- To change difficulty level: Either player presses  the A button.
- Long press the GilKER button to exit the battle mode.

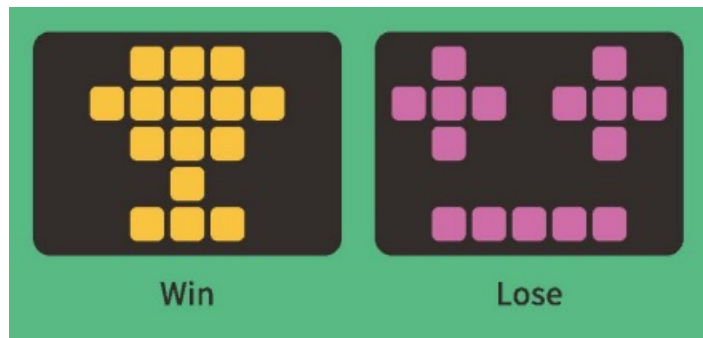

Mute Setting

Long press the  button at the same time, to set mute on/off.



Power Off

Long press the GilKER Button, automatically turn off if no operations within 30 mins.

Specifications

Name	Smart Sudoku		
Model	JKSD001		
Material	ABS	Age	4+
Battery Type	1.5V AA Battery		

FAQ

- **Q: Why can't I clear the pixels on the screen when I place the number correctly?**
Make sure you place the correct number and tap to confirm.
- **Q: When I enter a number, why there's no reaction of the corresponding number indicator?**
Check the puzzle screen, if the pixel flashes to report error, that means the corresponding cell should have been filled with number piece, which was taken away accidentally.
- **Q: When all the numbers were placed, why isn't there animation to indicate completion?**
It's possible that some cells were not tapped after being placed. Please check the completion progress of the puzzle screen, re-tap to fill in the empty/ unlit pixel.
- **Q: When bluetooth pairing, why the other device cannot be found?**
Check if:
 1. Both devices are on but not paired with another device.

2. Both devices are in the same game mode.
3. It has to be one device to initiate the battle, the other one to accept. If both initiate together, neither cannot be paired.

Notes

1. Never abuse, throw, drop, puncture, violently kick or step on the product. This can damage the product.
2. The product is not water resistant. Do not drop the product into water. Do not leave the product out in the rain or near a source of moisture.
3. Do not place the product near a source of heat. Operate and store the product between 0 °C and 40 °C.
4. Leakage of battery acid can cause personal injury as well as damage to your Super Blocks. If battery leakage occurs, thoroughly wash the affected skin and cloths. Keep battery acid away from your eyes and mouth.
Leaking batteries may make popping sounds. To avoid battery leakage: Do not mix different brands of batteries; do not mix different types of batteries (alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd) batteries; Do not leave used batteries in the Super Blocks; Do not leave batteries in the Super Blocks for long periods of time of non-use; Do not put the batteries backwards. Make sure the positive (+) and negative (-) ends are facing the correct direction. Do not dispose of batteries in a fire.
5. The supply terminals are not to be short-circuited.
6. Not suitable for children under 3 years. Small parts. Choking hazard.

Limited Warranty

GiiKER warrants that your GiiKER hardware products ("the Product") will be free from defects in materials and workmanship for a period of 90 days from the date of purchase ("the Warranty Period"). If a defect in the Product arises under normal and intended use within the Warranty Period, please contact the authorized GiiKER dealer in your country. The authorized GiiKER dealer in your country will, at its opinion and subject to applicable laws, replace or repair the Product with the new or reconditioned parts. This warranty is only valid to the original retail purchaser, accompanied by a receipt or proof of purchase. GiiKER does not warrant that the operation of the Product will be uninterrupted or error-free. This Warranty does not apply to: a) Products you purchase from unauthorized dealer; b) Defects in consumables, such as stickers or protecting coatings designed to diminish over time; c) defects caused by misuse or failure to follow the product directions, improper or unauthorized repair; d) Defects caused by accidents, neglect, fire, water, lightning, or other acts of nature; e) Normal wear and tear or otherwise due to the normal aging, other cause beyond GiiKER's reasonable control.

Declaration of Conformity

GilKER Technology Co.,Ltd. declares that this product is in compliance with the relevant requirements of Directive 2009/48/EC, Directive 2011/65/EU, Directive 2014/53/EU. This declaration of conformity is published on our website www.gilker.com/pages/compliance.



EUROPEAN UNION-DISPOSAL INFORMATION

The symbol above means that according to local laws and regulations your product should be disposed of separately from household waste. When this product reaches its end of life, take it to a collection point designated by local authorities. Some collection points accept products for free. The separate collection and recycling of your product at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. Keep these instructions for future reference as they contain important

information.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.



RF exposure

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



Manufacturer: FS GiiKER Technology Co., Ltd. **Website:** www.giiker.com Email: support@giiker.com Made in China This content is subject to change without prior notice.



Documents / Resources

--	--



[GiiKER JKSD001 Smart Sudoku Puzzle Games](#) [pdf] User Guide
JKSD001 Smart Sudoku Puzzle Games, JKSD001, Smart Sudoku Puzzle Games, Sudoku Puzzle Games, Puzzle Games, Games

References

- [User Manual](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.