



GiiKER KM Smart Rubiks Cube With The Application User Manual

[Home](#) » [GiiKER](#) » GiiKER KM Smart Rubiks Cube With The Application User Manual 

GiiKER

SUPERCUBE
User Manual

 
Read the User Manual before use and retain it for future reference.

Contents


- [1 Meet SUPERCUBE](#)
- [2 Specifications](#)
- [3 Charging the Cube](#)
- [4 Supercube App](#)
- [5 Features:](#)
- [6 Connecting to App](#)
- [7 FAQ](#)
- [8 Limited Warranty](#)
- [9 Declaration of Conformity](#)
- [10 EUROPEAN UNION- DISPOSAL INFORMATION](#)
- [11 Technical Specification](#)
- [12 BATTERY INFORMATION](#)
- [13 Statements](#)
- [14 Documents / Resources](#)
 - [14.1 References](#)
- [15 Related Posts](#)

Meet SUPERCUBE

'SUPERCUBE is a smart connected 3X3 puzzle cube equipped with motion sensors and MCU, it will record and track your moves in Real Time and wirelessly sync to the Supercube app on your smart phone o tablet, enabling an interactive way to learn, solve, improve and battle others online like never before!

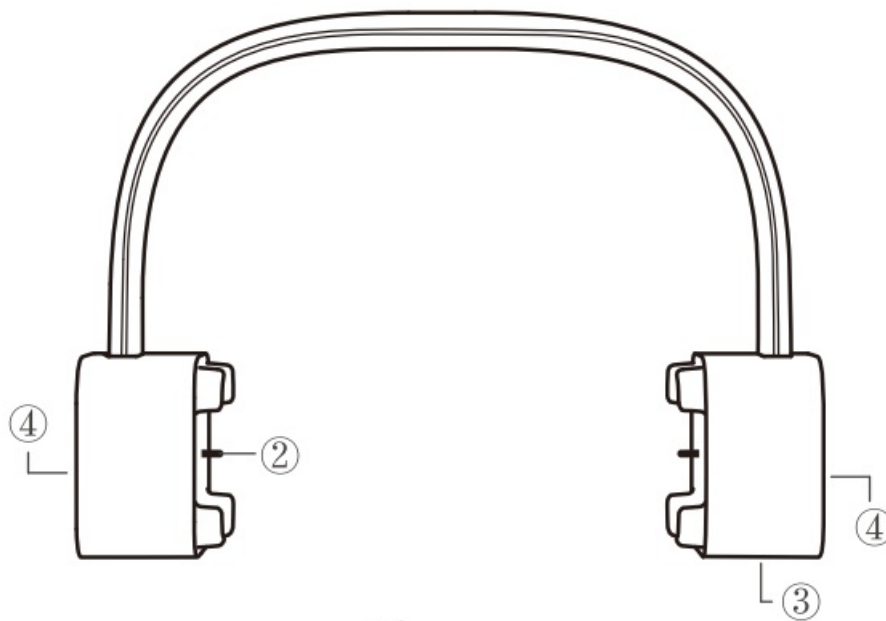

Charger

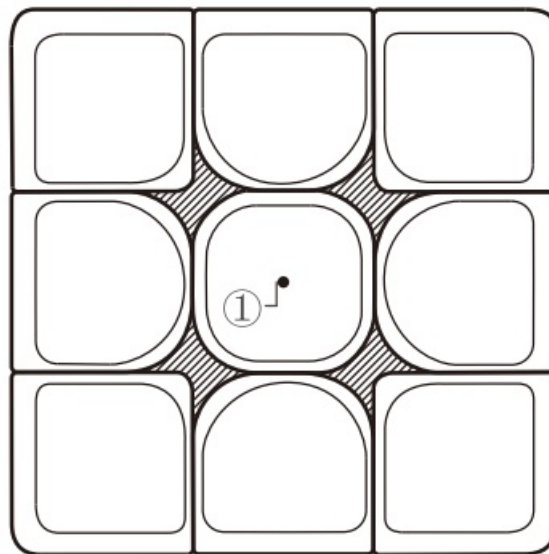 

Supercube

1. Charging Port
2. SCharging Contact Micro
3. USB Porc
4. Power Indicator

Specifications

Model	SUPERCUBE i3S	Cube Dimension	56.5mm
Battery	3.7V lithium battery	Cube Weight	102g
Charging Time	90 min	Working Time	90 days*
Ages	6 years+	Material	ABS
Package contents	1 SUPERCUBE i3S, 1 charger, 1 charging cable, 1 user manual		

*Working time is based on one hour use per day after fully charged. This value is tested under laboratory environment and should be taken for reference only.

Charging the Cube

Please fully charge the cube before your first time use.

1. Put on the Charger

 
Make sure the Charger is fastened on the correct charging face of the cube.

2. Connect to power adapter

Use the provided charging cable to connect the Charger to a qualified USB power adapter.

3. Power on to charge

The Charger lights up and the cube beeps when charge starts. The battery is fully charged when the cube beeps again, it takes approximately 90 minutes.

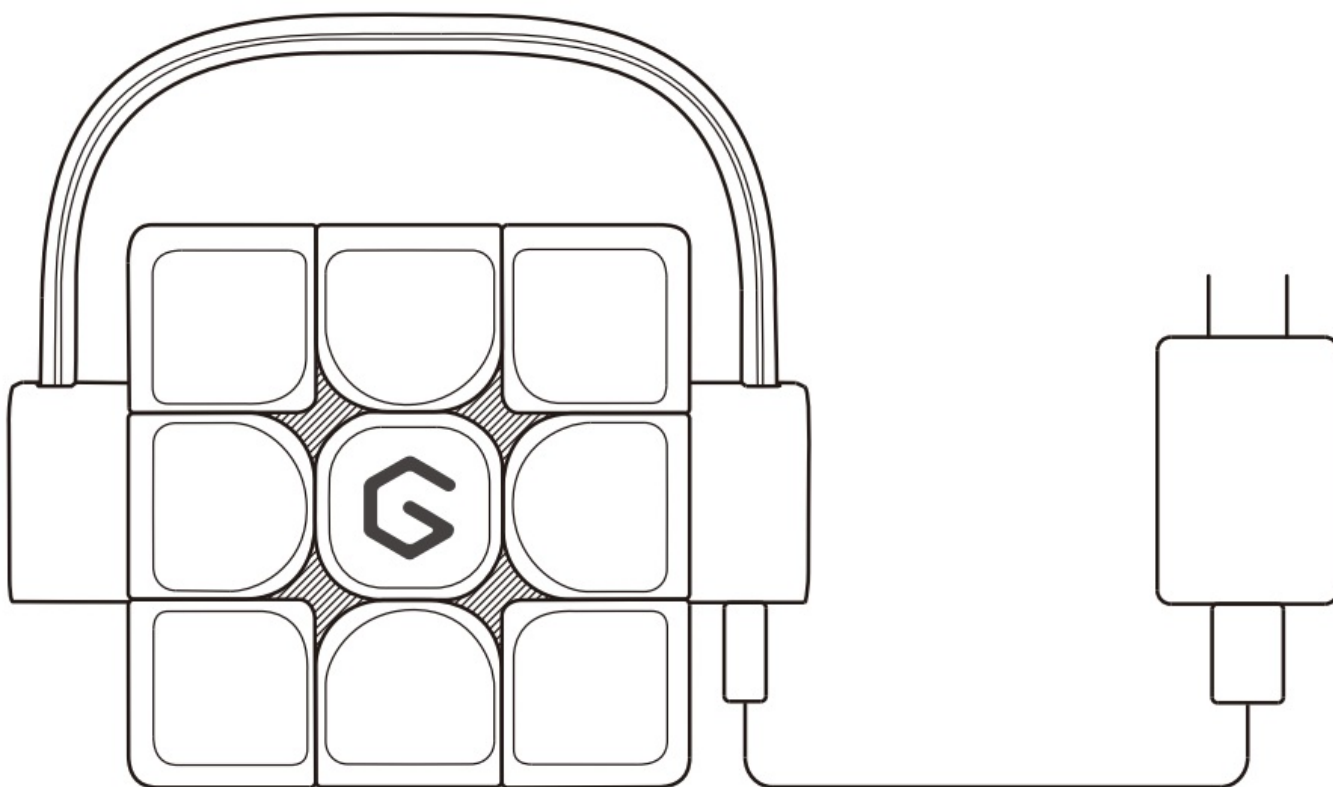

Supercube App

Scan the QR code or search for 'Supercube' in iOS or Android app stores to download the Supercube app.



<https://manage.giiker.cn/pc/superuser/toDow>

Minimum System Requirements 105 10.0 or later, Android 6.0 or later.
Devices must support Bluetooth 4.0 and later.

Features:



Quick Solver



Interactive Tutorial



Timer Function



Detailed Statistics



Bluetooth Ready



Real-time Tracking

 


Online Battle



Mini Games

Connecting to App

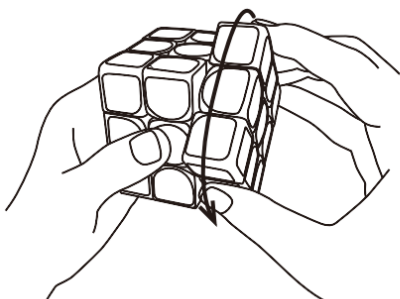

① Twist to wake
the cube



② Launch
Supercube App



③ Connect Cube

Notes:

1. The cube will enter sleep mode after 10 minutes of inactivity, twist any layer to wake it, otherwise the app can not find your cube.
2. Make sure the cube is fully charged and disconnected from previous devices before connecting.
3. Only connect the cube within the Supercube app. Do not pair it in your device's Bluetooth list. According to Android 6.0 requirements, apps must have location permission in order to use fast Bluetooth scanning connection function.
4. If you use an Android device, please make sure the location service(GPS) is enabled and authorized before connecting, otherwise the app can not find your cube.

Notices

1. Read the User Manual before use. The user takes full responsibility for all operations and usage.
2. Never disassemble the product in any way or it may lead to permanent damage.
3. Do not rotate corner pieces or edge pieces separately or it may lead to unsolvable cube state. The product may experience difficulty and/or memory loss when subjected to any electrostatic discharge, radio frequency interference. The user is encouraged to reset the product should any of these occur.
4. Never abuse, throw, drop, puncture, violently kick or step on the product, This can damage the product.
5. The product is not water resistant. Do not drop the product into water. Do not leave the product out in the rain or near a source of moisture.
6. Operate and store the product in a place where the temperature is between 0° and 40°C.
7. Do not place the product near a source of heat. Never store the product in environments higher than 60°C.
8. Discharge and charge the battery completely once every 3 months to keep it in good condition.
9. Do not store the product fully discharged for long periods of time, otherwise it will over discharge and lead to permanent damage.
10. Examine the charger regularly for damage to the cord, plug, enclosure or other parts. Never use a damaged charger or power adapter.
11. Keep the product away from sand and dust to protect the sensors in the center pieces. Clean only with cloth.
12. Not suitable for children under 3 years. Small parts. Choking Hazards,

FAQ

Q1: What should I do if the app can not find my cube?

The cube could be in sleep mode. Twist any layer to wake it. The cube will beep when waken. Make sure the cube is fully charged and disconnected from previous devices. For Android device, please check if the location service(GPS) is enabled and authorized to the app.

Q2: What should I do if the cube state is not correct?

Press Reset button in My Cube page, then follow the app's instructions to reset cube state.

Q3: What should I do if the cube state is unsolvable?

Double check if the entered state same as the real one on hand. If they are the same, then it means your

cube is disassembled and reassembled in an unsolvable state, you have to reassemble it in a correct state.

Qa:What should I do if there's no beep when I charge the cube?

If the Power Indicator is on, be sure that the Charger is on the correct charging face (with a small charging port in the center piece) and fastened.

Limited Warranty

GIKER warrants that your GIKER hardware product ("the Product") will be free from defects in materials and workmanship for a period of one (1) year from the date of purchase ("the Warranty Period").

If a defect in the Product arises under normal and intended use within the Warranty Period, please contact the authorized GIKER dealer in your country. The authorized GIKER dealer in your country will, at its option and subject to applicable laws, replace or repair the Product with new or reconditioned parts. This warranty is only valid to the original retail purchaser, accompanied by a receipt or proof of purchase. GIKER does not warrant that the operation of the

Product will be uninterrupted or error-free. This Warranty does not apply to a) Products you purchase from unauthorized dealer; b) Defects in consumables,

such as stickers or protective coatings designed to diminish over time; c) Defects.

caused by misuse or failure to follow the product directions, improper installation; product alteration or modification; improper or unauthorized repair; d) Defects caused by accidents, neglect, fire, water, lightning, or other acts of nature; incorrect electrical line voltage, fluctuations or surges; e) Normal wear and tear or otherwise due to the normal aging, other causes beyond GIKER's reasonable control.

Declaration of Conformity

GIKER Technology Co, Ltd. declares that this product is in compliance with the relevant requirements of Directive 2014/53/EL. This declaration of conformity is published on our website www.giker.cn/compliance.



EUROPEAN UNION- DISPOSAL INFORMATION

The symbol above means that according to local laws and regulations your product should be disposed of separately from household waste. When this product reaches its end of life, take it to collection point designated by local authorities. Some collection points accept products for free. The separate collection and recycling of your product at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. Keep these instructions for future reference as they contain important information.

Technical Specification

Bluetooth: BLE4.0

Frequency band(s) in which the radio equipment operates 2402-2480 Hz.

Maximum radio-frequency power transmitted in the frequency band(s) in which the radio equipment operates: <10 dBm.

BATTERY INFORMATION

Each SUPERCUBE has a lithium polymer battery, which should only be re-charged using

the included charger. Attempting to remove the battery will void the warranty and may result in injury. Protect the environment by not disposing of this product with household waste. Check your local authority for recycling advice and facilities.

Statements

The Bluetooth* word mark and logos are registered trademarks owned by Bluetooth SIG, . and any use of such marks by GIKER is under icense.

Apple and the Apple logo are trademarks of Apple Inc, registered n the U, and other countries. App Store is a service mark of Apple Inc (Google lay s a trademark of Google Inc.

GIKER and the GIKER logo are registered trademarks of Giker Limited: Al other trademarks. mentioned i this manual are the propertyof thei respective owners

Manufacturer: FS GIKER Technology Co.,Ltd

Website: www.giiker.cn

Email:support@giiker.cn

Address:No.1 Sanle

North Road Beijiao Shunde District,Foshan 528311,

 
Guangdong Province, China

CN patent: ZL201610664325.9 PCT/CN2016/104510

This content is subject to change without prior notice.

Documents / Resources



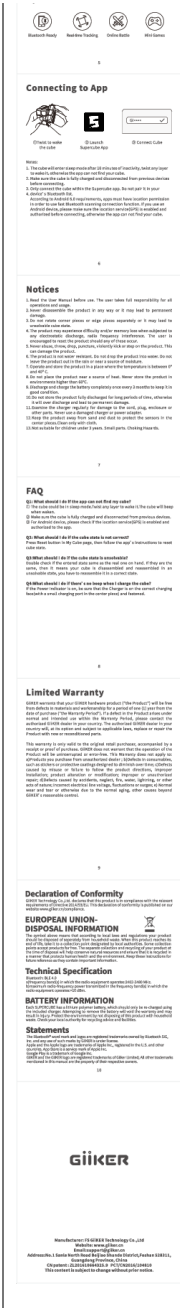

GiiKER KM Smart Rubiks Cube With The Application [pdf] User Manual
KM Smart Rubiks Cube With The Application, KM, Smart Rubiks Cube With The Application, R
ubiks Cube With The Application, Cube With The Application, Application

References

- [User Manual](#)