



GILL 1086-PS-0050 Wind Displays Speed Indicator and Wind Display User Manual

[Home](#) » [GILL](#) » GILL 1086-PS-0050 Wind Displays Speed Indicator and Wind Display User Manual 

Contents

- 1 GILL 1086-PS-0050 Wind Displays Speed Indicator and Wind Display
- 2 Product Information
- 3 Product Usage Instructions
- 4 Commissioning
- 5 Introduction
 - 5.1 Display Part Numbers
- 6 PACKING LIST
- 7 GENERAL
- 8 INSTALLATION
 - 8.1 Cable and Layout
- 9 Commissioning
- 10 Maintenance
- 11 Appendix/Drawings
- 12 General Assembly
- 13 Cable information
- 14 Electrical connections
- 15 Daisy chain connections
- 16 Rear view of WindDisplay
- 17 WindDisplay Dimmer Switch Connection
- 18 Dimmer Switch Dimensions
- 19 Documents / Resources
 - 19.1 References

GILL



Product Information

WindDisplay

Document No: 1086-PS-0050

Issue: 08 July 2021

Page: 1

FOREWORD

The WindDisplay is a product designed to display wind-related information. This manual provides instructions on how to install and commission the WindDisplay. Introduction

The WindDisplay is available in two designs and has specific characteristics that make it suitable for monitoring wind conditions.

Display Part Numbers

The part numbers for the WindDisplay are not mentioned in the provided text.

Product Usage Instructions

PACKING LIST

No information is provided about the packing list in the given text. Please refer to the product packaging or contact customer support for details.

SUMMARY OF ABBREVIATIONS USED

No summary of abbreviations is mentioned in the provided text.

GENERAL

The WindDisplay has specific characteristics that make it suitable for monitoring wind conditions.

Principal Characteristics

No specific details about the principal characteristics of the WindDisplay are provided in the given text. Please refer to the product documentation for more information.

INSTALLATION

Display Bench Test

To ensure proper functionality, perform a display bench test before installation. Follow the instructions provided in the product manual for conducting this test.

Mechanical

No information about mechanical installation is mentioned in the provided text. Please refer to the product manual for mechanical installation instructions.

Electrical

Power Supply

Ensure the WindDisplay is connected to a suitable power supply according to the specifications provided in the product manual.

Cable and Layout

Follow the cable and layout instructions provided in the product manual for proper connection and positioning of the WindDisplay.

Anemometer Connections

Connect the appropriate anemometer to the WindDisplay based on the type of anemometer being used. Refer to the product manual for specific instructions on connecting WindSonic or WindObserver anemometers.

WindSonic

Follow the instructions provided in the product manual to connect a WindSonic anemometer to the WindDisplay.

WindObserver

Refer to the product manual for detailed instructions on connecting a WindObserver anemometer to the WindDisplay.

Daisy Chain Connections

For daisy chain connections, follow the instructions provided in the product manual to connect multiple WindDisplays together.

RS232 PC Connection

To establish a connection with a PC via RS232, refer to the product manual for instructions on connecting the WindDisplay to the PC.

Commissioning

Anemometer Settings

Configure the settings of the connected anemometer by following the instructions provided in the product manual.

Wind Speed Indicator & Wind Displays
(Parts 1086-PK-XXX)
Doc No: 1086-PS-0050
Issue 8

FOREWORD

This manual refers to the WindDisplay supplied by Gill Instruments.

The WindDisplay is a sophisticated instrument and to achieve optimum performance, we recommend that you read the whole of this manual before proceeding to use the equipment.

Gill products are in continuous development and therefore specifications may be subject to change without prior notice.

The information contained in this manual remains the property of Gill Instruments and as such, it should not be copied or re-produced for commercial gain.

Introduction

The Gill digital WindDisplay is a combined wind speed and direction indicator. The WindDisplay comprises two, 3 digit LED arrays to provide instantaneous wind speed and maximum or minimum gust data. A double ring of 36 LEDs is used to indicate instantaneous and average direction information.

A second 3 digit display at the lower right hand corner provides gust information.

The front panel provides three buttons “MENU”, “▲” and “▼” which may be used to adjust the brightness of the LEDs, enter a display mode or enter a set up mode.

The WindDisplay will accept RS422 data output (see Para 4.3.3 for display input format) directly from Gill WindObserver and Gill WindSonic anemometers without the need for additional interfaces. It provides the power supply to the anemometer and “daisy-chain” connections are available for additional WindDisplays. See Appendix 4.

The display is housed in a 144mm x 144mm DIN-size casing suitable for flush mounting and must be mounted in a console or display panel. Unit depth is 77 mm.

The WindDisplay may be user-configured to display the wind speed in various scales, i.e. miles per hour (mph), metres per second (m/s), knots (kn), kilometres per hour (km/h) and Beaufort (Bft).

Display Part Numbers

Part Numbers for Meteorological Displays, 0° – 359° scale

Gill Part	Supply Voltage	Data Format	Baud Rate	Analogue Output
1086-PK-073	220v AC	Gill ASCII	9600	No
1086-PK-086	110v AC	Gill ASCII	9600	No
1086-PK-093	220V AC	Gill ASCII	9600	4-20mA, 0-60m/s

Part Numbers for Marine Displays 0° – 180° – 0° scale

Gill Part	Supply Voltage	Data Format	Baud Rate	Analogue Output
1086-PK-083	220v AC	NMEA	4800	No
1086-PK-085	110v AC	NMEA	4800	No
1086-PK-072	220v AC	Gill ASCII	9600	No
1086-PK-084	110v AC	Gill ASCII	9600	No

PACKING LIST

- WindDisplay
- Mounting lugs

SUMMARY OF ABBREVIATIONS USED

- ac..... Alternating current
- Bft Beaufort scale
- dc..... Direct current
- km/h Kilometres per hour
- kn Knots

- LED..... Light Emitting Diode
- mA Milliamp
- mph Miles per hour
- m/s Metres per second
- PCB..... Printed Circuit Board

GENERAL

The WindDisplay is available in two designs.



Principal characteristics

Characteristic	Detail
Power supply	220Vac, 110v ac or 24v dc options
Speed display	3 digit 7 segment LED display 14.3mm height
Gust display	3 digit 7 segment LED display 10.1mm height
Direction display	36 LEDs circular colour RED
Direction average	36 LEDs circular colour AMBER
Data Input Format	RS422, Gill ASCII or NMEA 0183 options
Data input Baud Rate	9600 or 4800 baud option
Data input update rate	1Hz
Data Input units	Metres per second only
Data Output	Daisy chain RS422, ASCII, NMEA
Current Outputs	4-20mA, 0-90m/s option for direction and speed.
Supply Output	15v dc to anemometer
Dimensions	144 x 144 x 77 mm
Weight	Approximately 0.8kg
Brightness control	From the front panel control or external switch option (OMC129).
Readout units	m/s, km/h, knots, mph and bft

Averaging	Front panel setting, none, 2 mins and 10 mins
Environmental	-30 degrees C to +60 degrees C
Moisture	IP40
Humidity	0% to 90%
EMC	BS EN 50081-1:1992 (Emissions Class B)

INSTALLATION


INSTALLATION AND COMMISSIONING MUST BE COMPLETED BY QUALIFIED PERSONNEL

Display Bench Test

Prior to physically mounting the WindDisplay in its final location, we strongly recommend that a bench system test be carried out to confirm the system is configured correctly, is fully functional and electrically compatible with the selected host system and cabling (preferably utilising the final cable length). The required data format, Baud rate and other options should also all be configured at this stage.

Mechanical

- Panel mounting of the WindDisplay requires a panel cut-out of 138mm square.
- Maximum panel thickness is 5mm.
- Rear access must be provided for fixing of the tightening clamps and connecting the electric cabling.
- The depth of the units is 77mm and an additional clearance of 8mm should be allowed for the cable connections and strain relief.

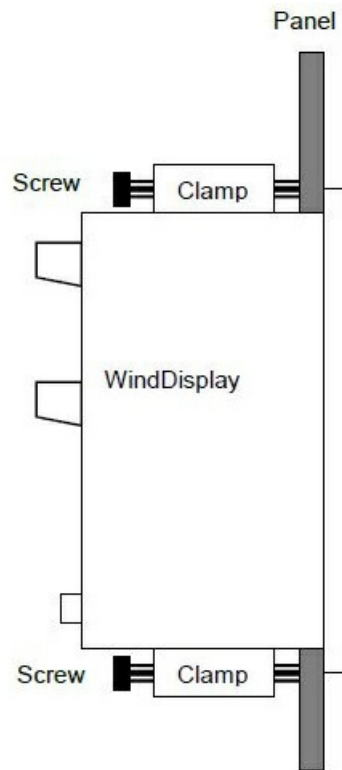

Electrical

- The WindDisplay utilises a common terminal strip for connections to the anemometers and ancillary displays.
- The WindDisplay provides the 15 Volts dc power supply to the anemometer.
- The WindDisplay cannot supply power to anemometer heaters.

NOTES.

For mains operated displays ensure that a mains Earth connection is made via the E terminal on the display.

Power supply

HAZARD WARNING! EXPOSED LIVE VOLTAGES ON REAR TERMINALS. ENSURE WindDisplay IS DISCONNECTED FROM MAINS BEFORE ACCESSING REAR PANEL!

Note: Information regarding internal fuse ratings and replacement can be found in section 6 of this manual. The WindDisplay power supply can be supplied set for 220 V AC, 110v AC or 24v DC operation when ordered. If subsequently after delivery the customer requires a different supply voltage, the following will apply:

- The unit can be returned to Gill Instruments for adjustment.

Power Supply connections to the rear of the display are:-

See also Appendix 3

Supply Voltage	Wind Display Power Terminals		
	L	N	E
230v AC	Live	Neutral	Earth
115v AC	Live	Neutral	Earth
24v DC	+24v dc	0v	Earth

Cable and Layout

Mains Cable

The mains cable should be a 3 core type with a rating of 3 Amps or above.

Wire size for 3A is 0.5mm² (e.g. 16 x 0.2mm).

Data Cable

The data cable between the wind sensor and display should be an RS422 compatible 2 pair (4-wire) cable with 2 twisted wires for power to the sensor and 2 twisted wires for signal transmission and a screen wire/s.

Wire size of 7/0.2mm (24AWG) would be suitable.

Cable length with an approved RS422 cable can be up to 1km.

An example suitable 2 pair cable is Belden Part 9729.

Anemometer Connections

1. WindSonic


WindSonic Connector			WindDisplay	
Signal Name	Pin No.		Pin No.	Signal Name
TXD +	4	→	8	RS422 in +
TXD-	5	→	7	RS422 in -
Supply +ve	2	→	2	Supply +
Supply -ve	3	→	1	Supply -

2. WindObserver

WindObserver						WindDisplay	
Signal Names	19 Way Connector	Cable Gland				Pin No.	Signal Name
	Pin No.	Pair No	Colour				
TXB(+)	P	1	Green	→	8	RS422 in +	
TXA(-)	C	1	Black	→	7	RS422 in -	
Sensor +	R	3	Red		2	Supply +	
Sensor -	D	3	Black		1	Supply -	
Connected Internally						Ground Earth	


Daisy Chain Connections

The daisy-chain output is used to transmit wind data to a second WindDisplay. The cable length depends on the type of cable used but a distance of up to 1000 metres is possible. The cable should be a twisted pair, screened and the screen should be grounded at one point only.

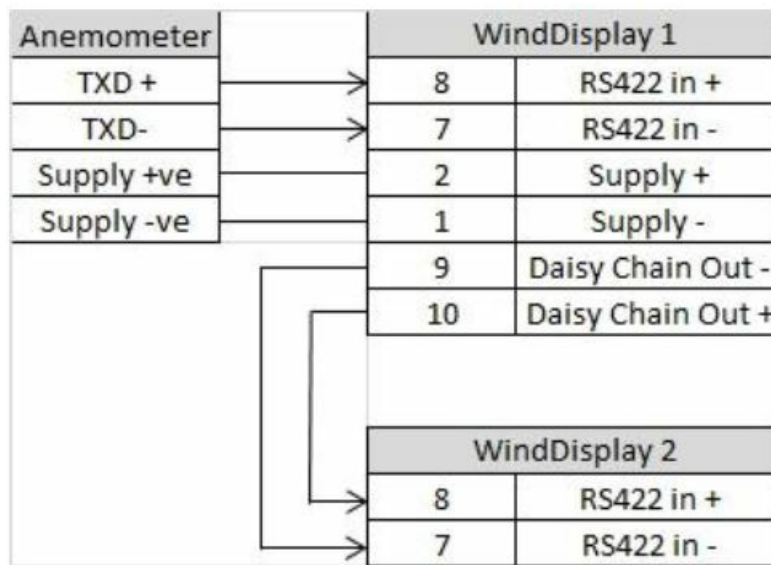

RS232 PC Connection

The Wind Display can be connected to a PC to confirm/change any settings via a 9-way D-type to D-type null modem cable

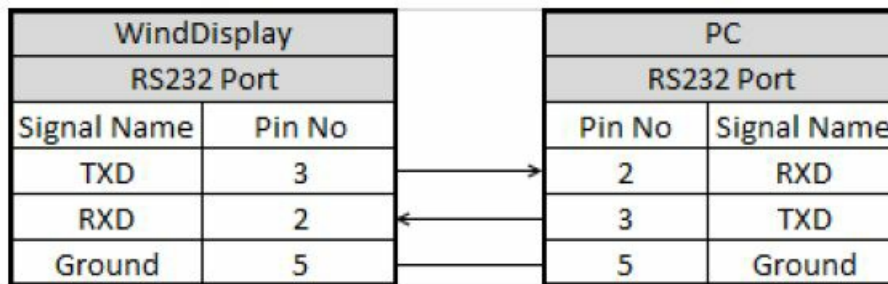

Commissioning

Anemometer Settings

The anemometer must be configured in the following output formats, depending on the type of WindDisplay required:-

- Gill ASCII Output 1Hz (P1), Baud Rate 9600 (B3), Polar Cont (M2)
- NMEA Output 1Hz (P1), Baud Rate 4800 (B2), NMEA Cont (M5)

For those users that have a display set for 9600 baud, NMEA sensor settings will be :-

- NMEA Output 1Hz (P1), Baud Rate 9600 (B3), NMEA Cont (M5)

Display Tests

Before switching on the mains, check that the power supply is correct as indicated on the identification label on the rear of the equipment.


With no anemometer cable connected, switch on the display and observe the front panel LEDs. The system will perform an LED test. All LEDs are switched on and off one by one. When the test is finished the display shows no information on the LED circle and on speed and gust displays “- - -” is shown.

Connect the anemometer (if the anemometer is not connected the 15 Volt dc supply will cycle ON/OFF every 10 seconds).

Check the voltage at terminal (1) and (2) on the rear panel. This should be 15 Volts dc.


Connect the anemometer to the display as shown below:

Connect the anemometer to the display as shown below:

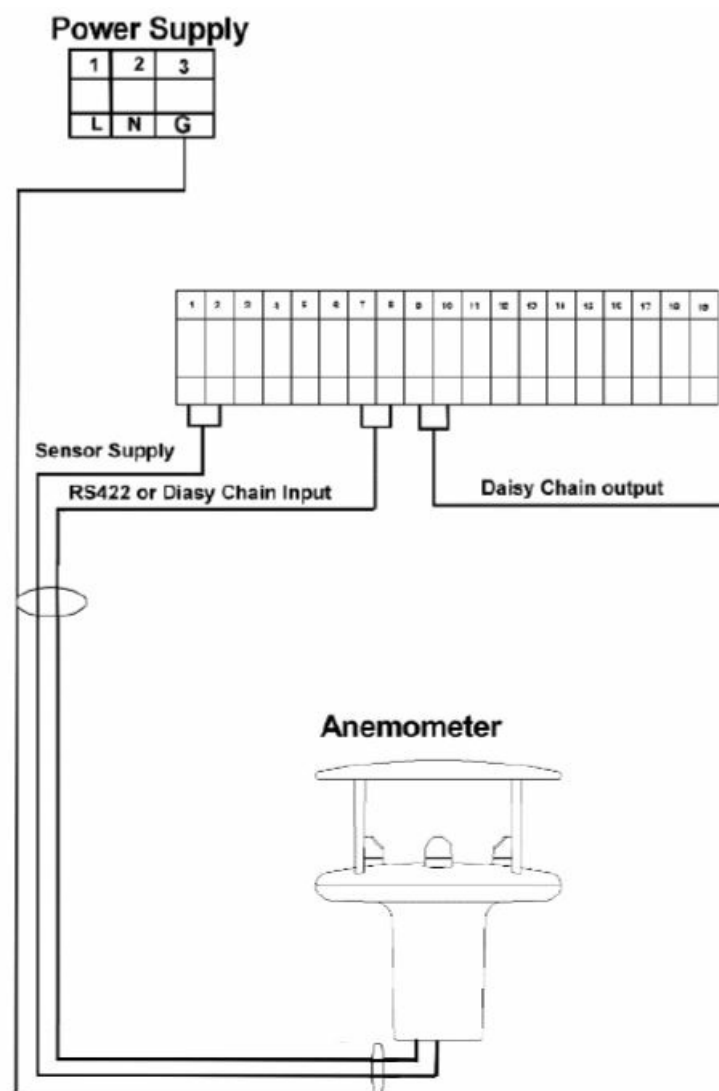

When both the anemometer and display are powered on wind speed data should be read on the 3 digit speed display and direction data indicated by the outer circles of LED's. The information update rate will be once per second.

Settings via the front panel

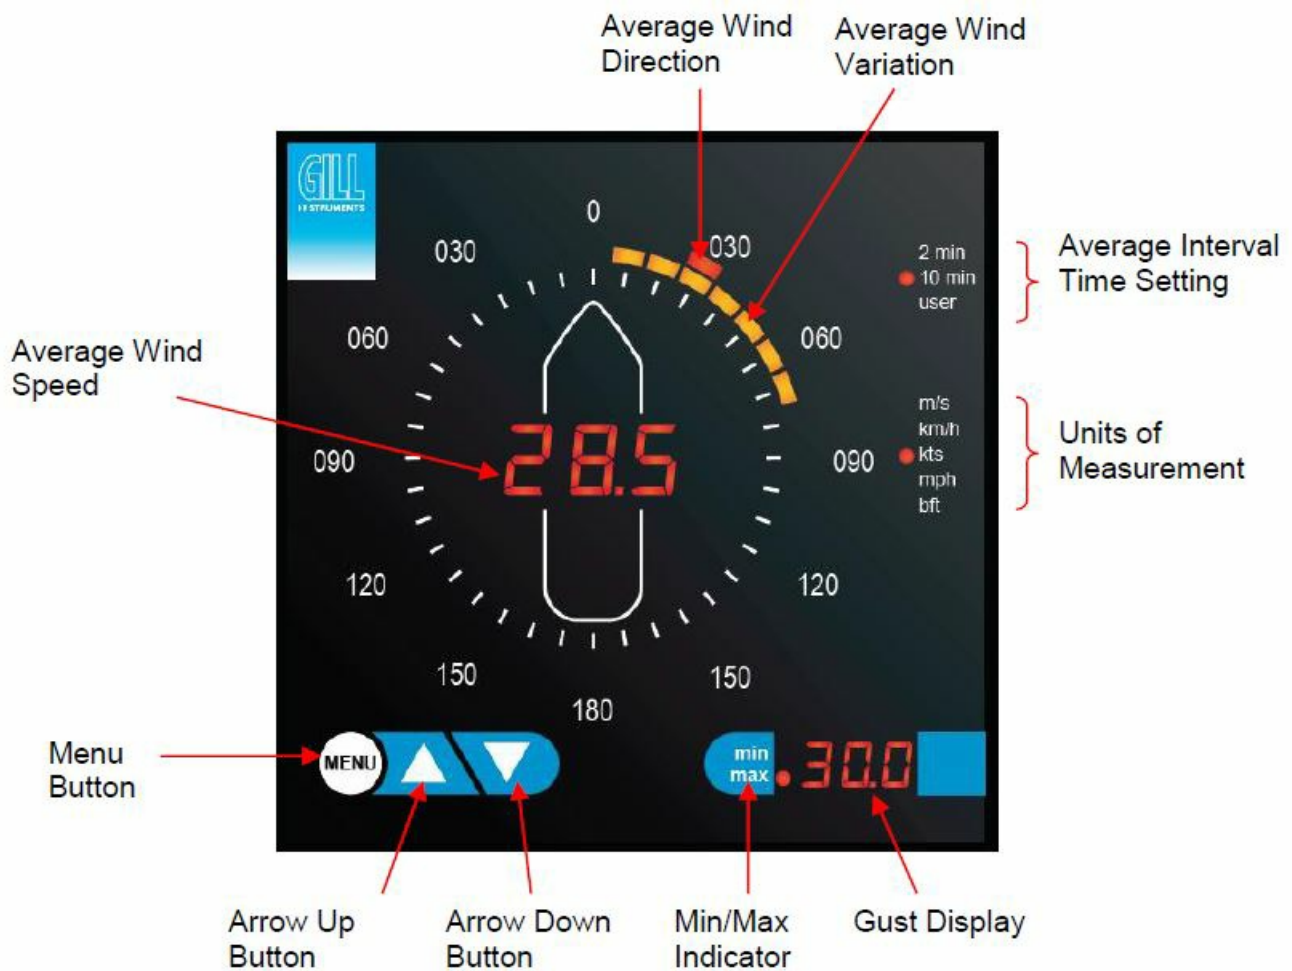

On the front panel of the display there are three push buttons, “MENU” “▲” and “▼”. An explanation of front panel button functions is as follows:-

1. Brightness Control

To adjust the display brightness press the ▲ button to increase brightness or the ▼ button to decrease brightness. See also Para 5.6 for remote dimming.

2. Min – Max Wind (Gust) Speed Indication

Press the Menu button once.

The Max LED will start flashing.

The Gust display will show the minimum wind speed over the selected interval.

After 30 seconds the display will switch back to read the Maximum wind speed.

3. Average Interval Settings

Press the Menu button twice.

The LED in the “Average Interval Time” window starts to flash indicating that the selected option is functioning.

Select the required Averaging Interval using the ▲ button or the ▼ button.

If the buttons are not touched for 10 seconds, the display will return to the normal operating mode.

User (Averaging Off)

The inner circle of amber/orange LED’s (multiple LED’s illuminated) displays the movement of wind direction between the last direction reading and the new reading.

The outer circle of red LED’s (single LED illuminated) displays the averaged reading of wind direction between the last and new reading seen on the Orange LED’s.

The centre red numeric speed display indicates instantaneous speed.

2/10 min Averaging On

The inner circle of amber/orange LED's (multiple LED's illuminated) displays the wind direction variation over the last 2/10mins.

The outer circle of red LED's (single illuminated) displays the average reading of wind direction over the last 2/10 minutes.

The centre red numeric speed display does not indicate instantaneous speed but displays an average reading over the last 2/10 minutes.

Units of Measurement

Press the Menu button 3 times.

The LED in the Unit Selection window will start flashing.

Select the required units of measurement by pressing the ▲ or ▼ buttons.

If the buttons are not touched for 10 seconds, the display will return to the normal operating mode.

LED Test

To undertake an LED test press both Arrow buttons (▲ ▼) simultaneously and all the display LEDs start flashing.

Gust Reading Reset (when in user average mode)

To reset the Gust reading at the bottom right hand on the display, press the Menu and the Arrow Down (▼) button at the same time.

Wind Direction Offset Setting

The display provides the possibility to add an offset to the wind direction. This is very useful for wind systems installed on oil rigs and for airports if they want to use the magnetic North instead of true North.

An offset is added in the following way. Press the arrow-up button (▲) and the menu button simultaneously. The Gust display starts flashing and is showing the offset. As long as the display is flashing, the offset can be changed using the arrow up or arrow down buttons (▲ ▼). The set value is added to the actual wind information from the anemometer.


Settings via PC

It is also possible to configure the Wind Display via a terminal program (such as Tera Term or HyperTerm) using a simple menu system.


In order to use this option, the Wind Display will need to be connected to a PC via a null modem cable as per section 4.3.5.

With the Wind Display powered up and connected to the PC, start the terminal software. The default Baud rate the display uses is 9600.

Type 'MENU' (caps on) to display the main menu:

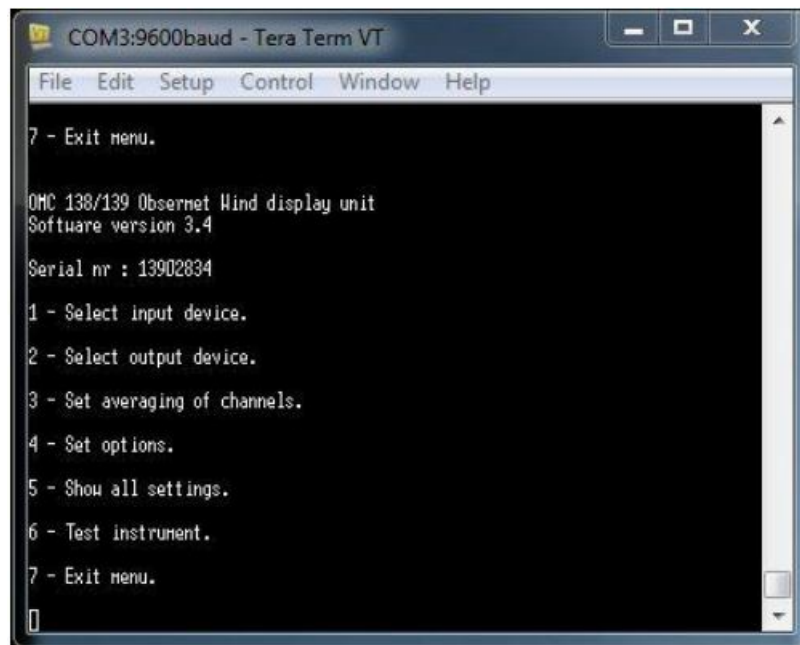


From here, the settings of the display can be edited as required or all the settings can be seen in full by selecting option 5:

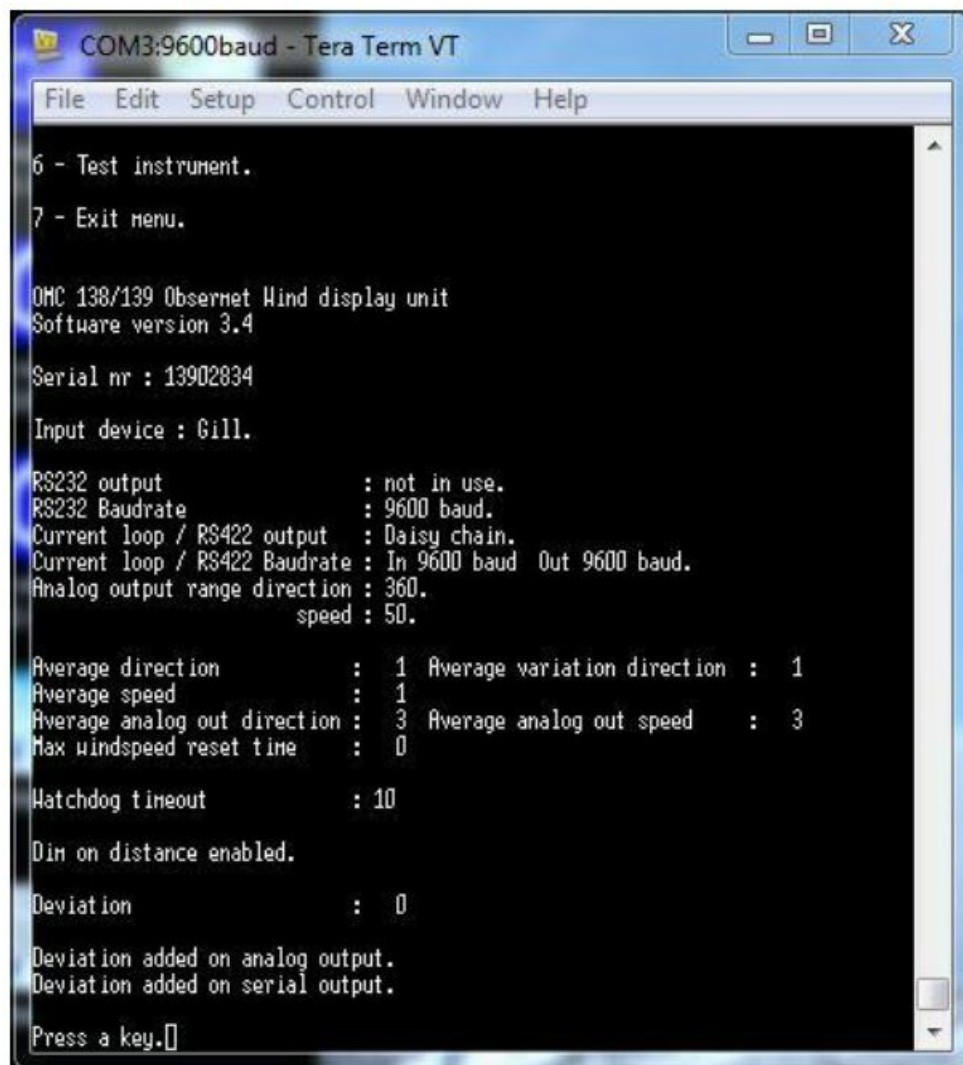


To change the input device from an anemometer configured for Gill output mode, 9600 Baud to a device configured for NMEA mode, 4800 Baud, follow the steps below:

From the main menu, press 1 to select Input Device and the following sub-menu should appear:

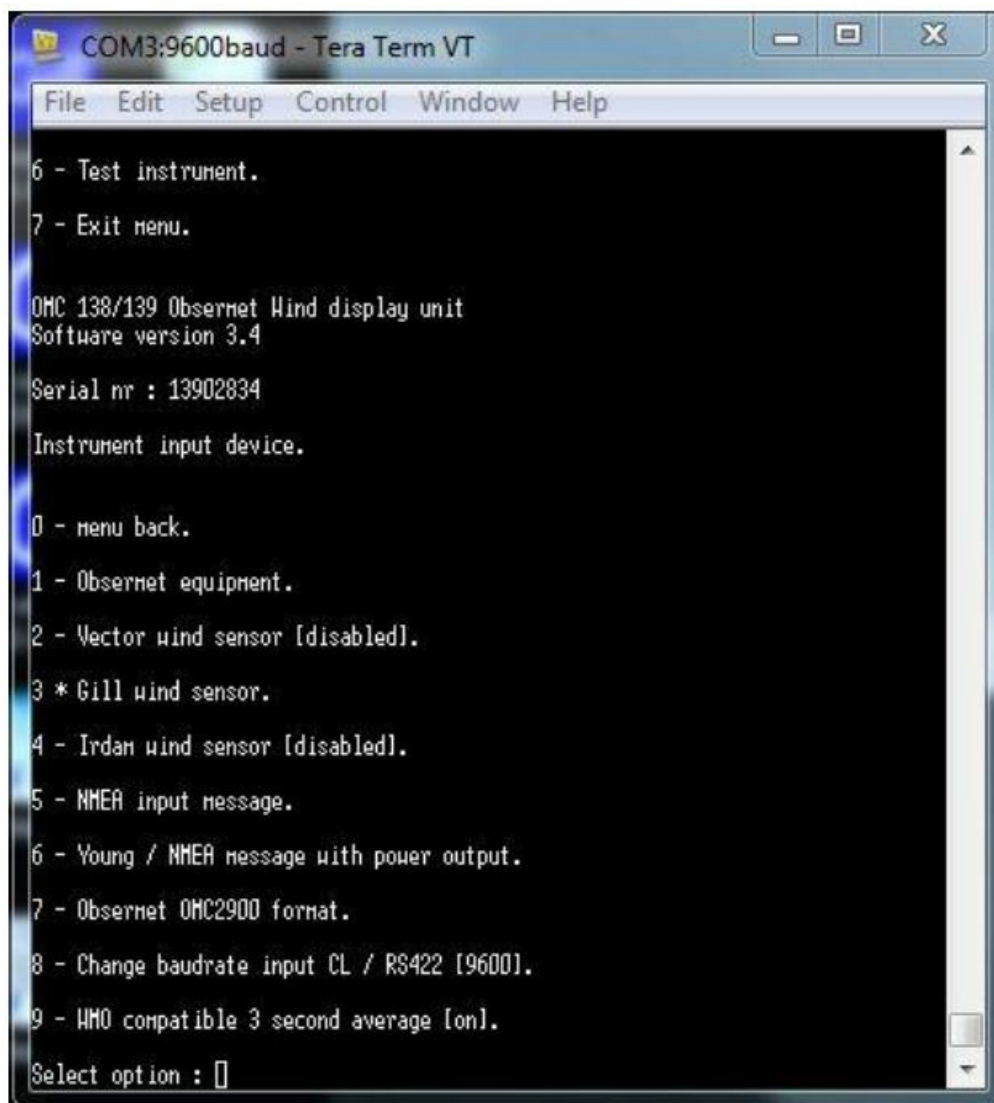


Select option 6 'Young/NMEA message with power output' (selecting option 5 will not enable the power output of the display)::

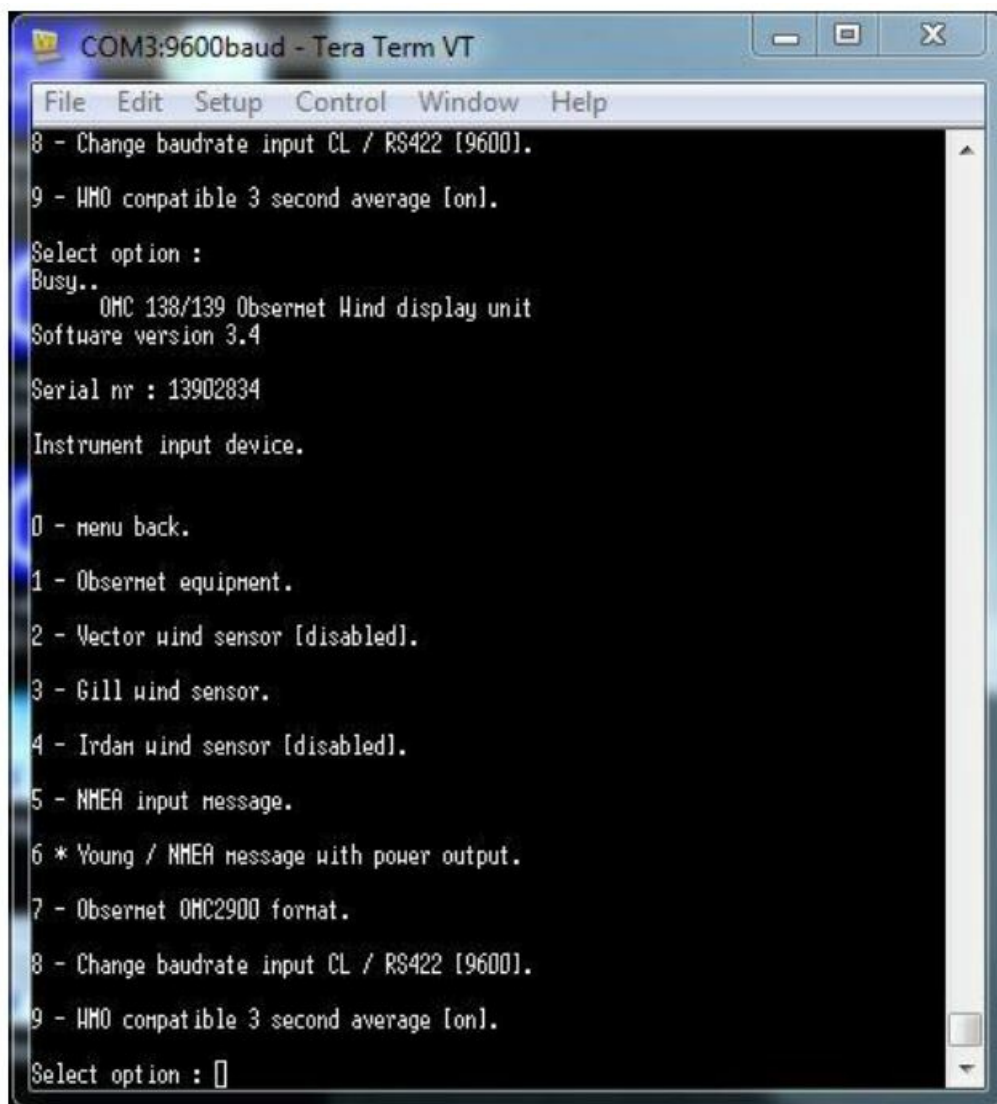


The asterisk denoting which option is selected will now be located next to option 6, rather than option 3.


Select option 8 'Change baudrate input CL / RS422 [9600].' The following sub-menu will appear:

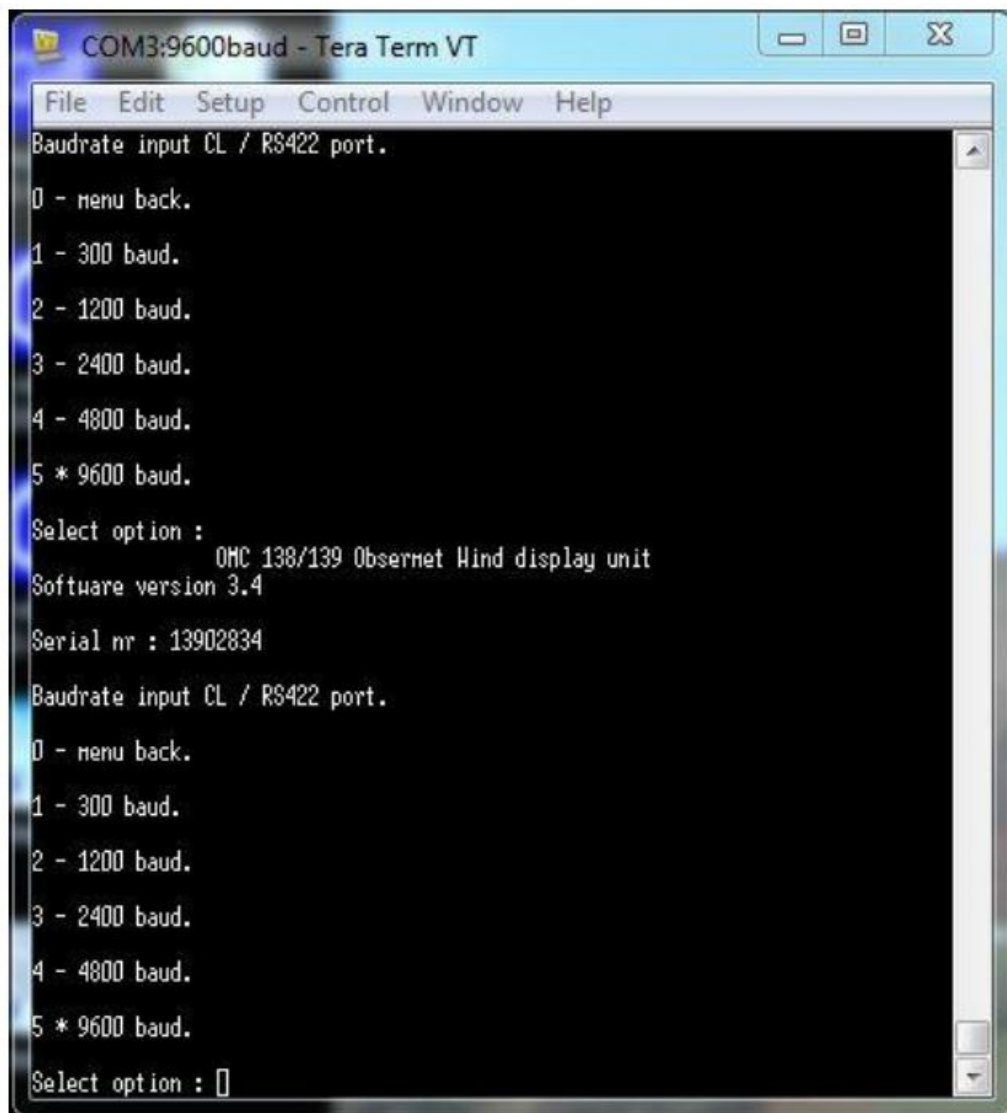


Select option 4:

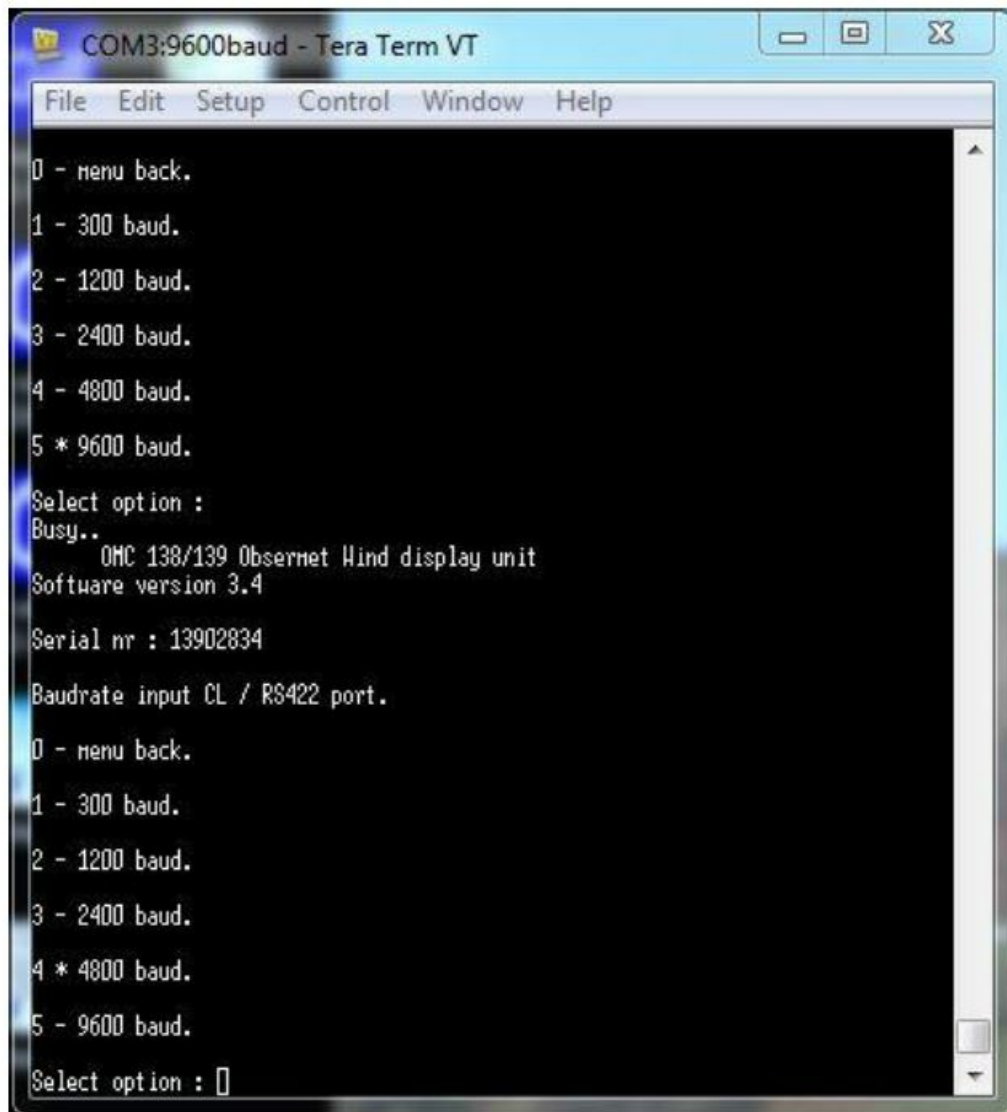


Press 0 twice to go back to the main menu, then select option 2 'Select Output Device':

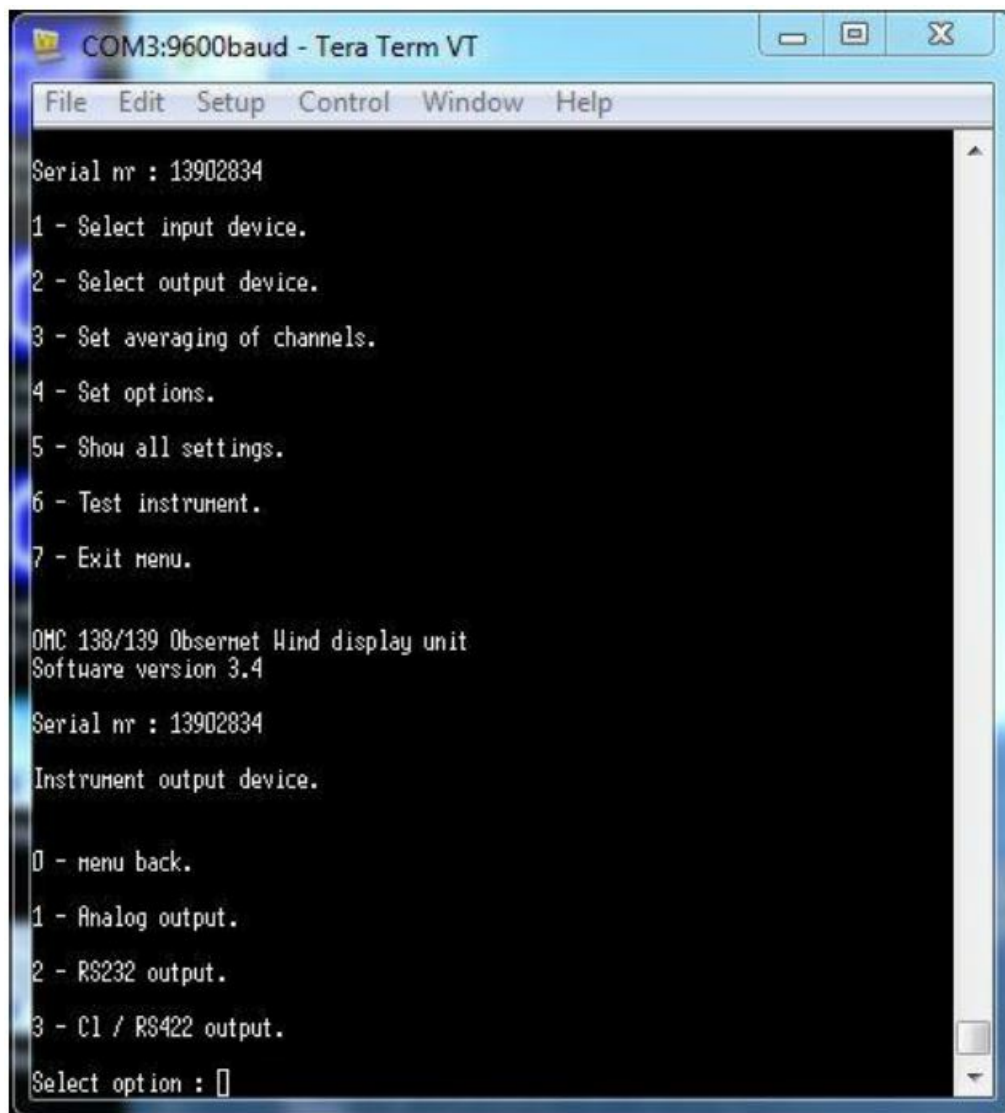


Then select option 3 'C1/RS422 output':

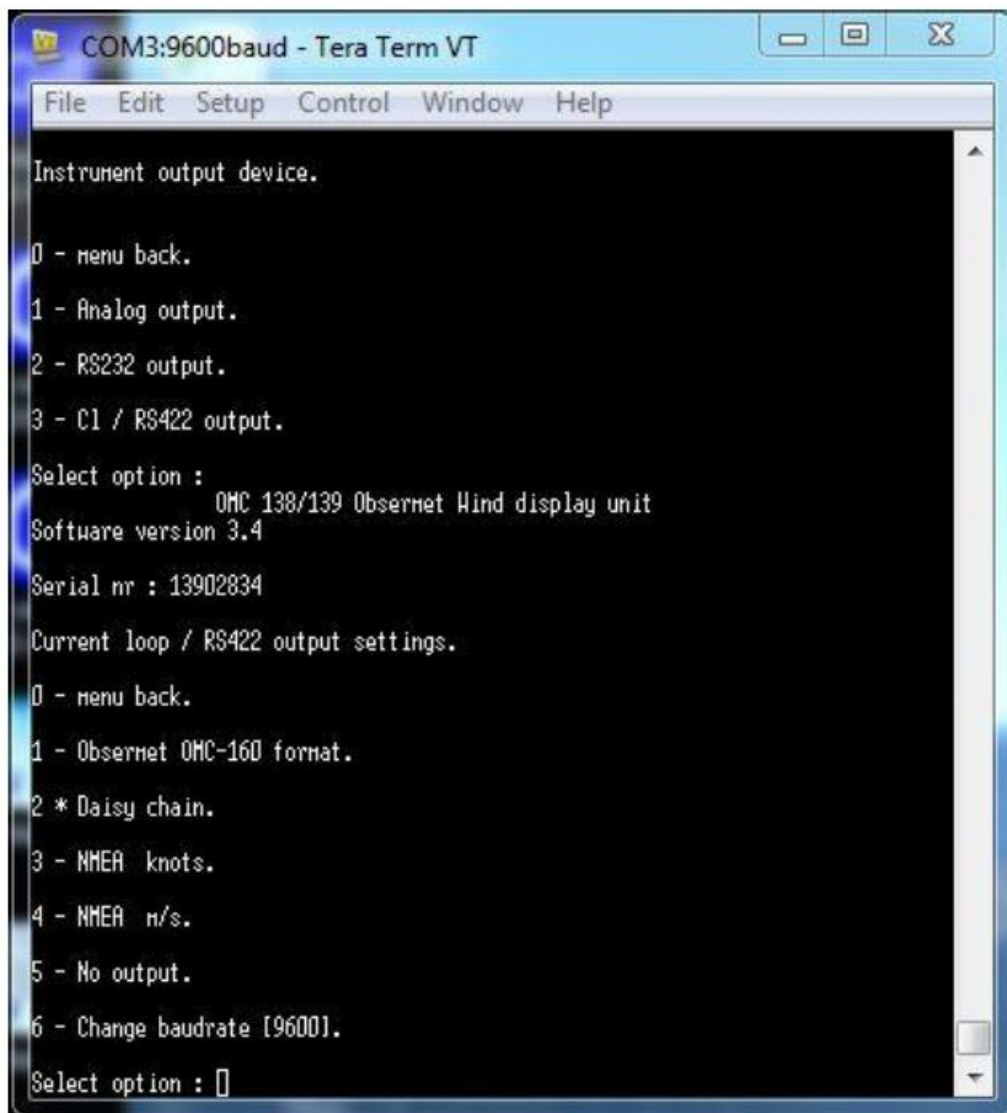

Select option 6 'Change Baud rate':

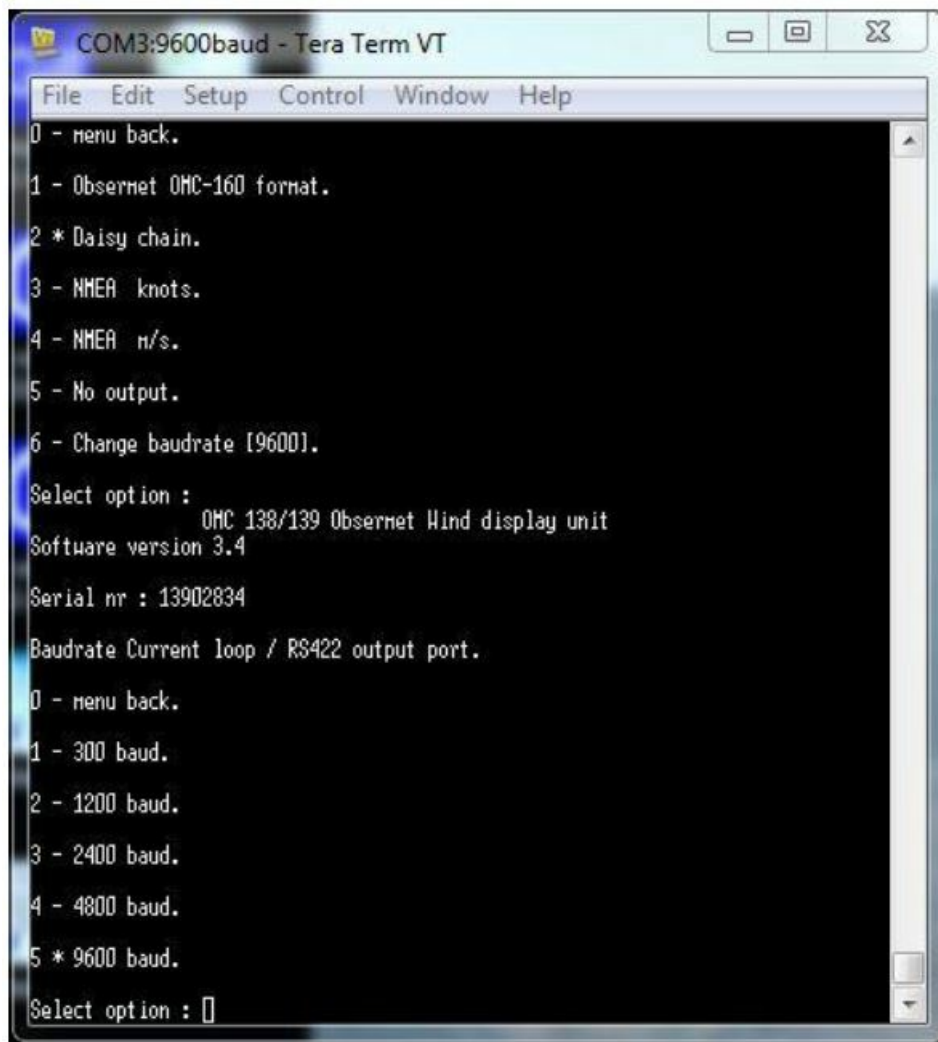

Select option 4 '4800 Baud':

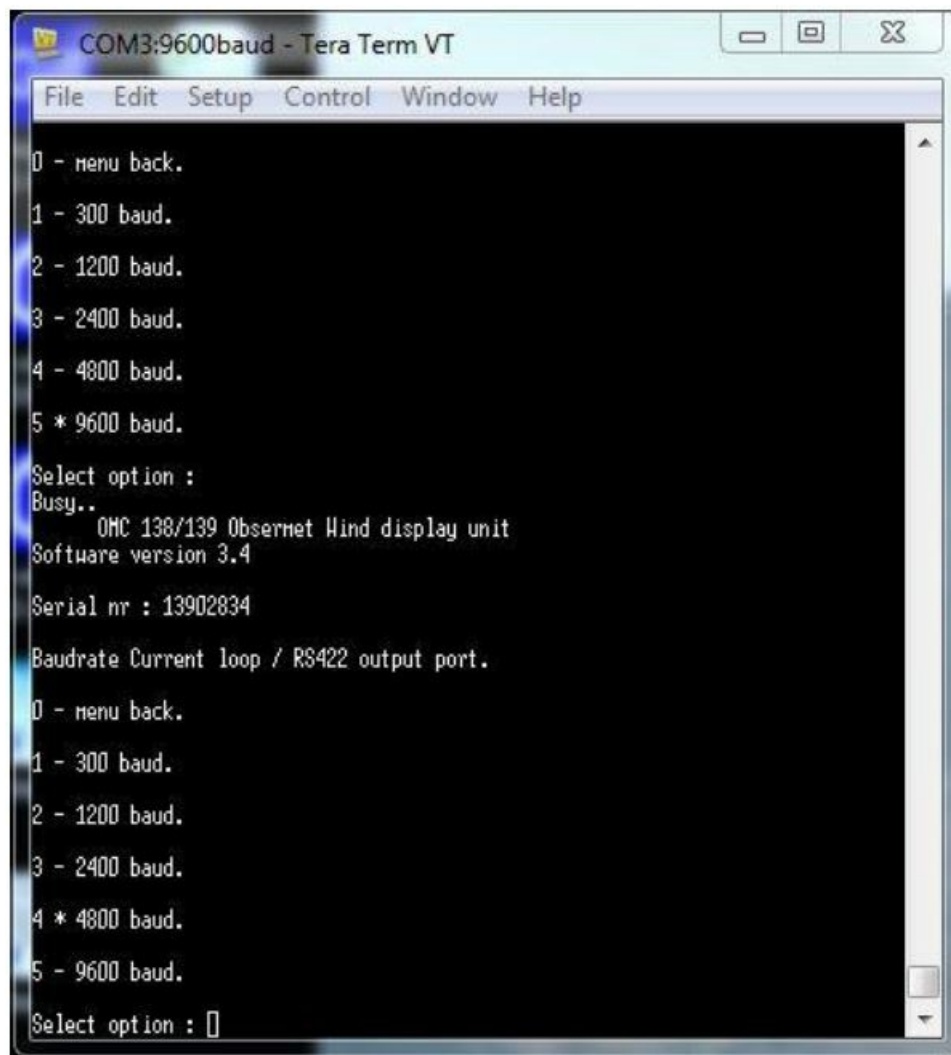

Once done, press '0' 3 times to return to the main menu. The settings can then be checked by selecting option 5 'show all settings' to ensure that they have been successfully changed:

Maintenance

The Gill WindDisplay unit has no moving parts and requires no routine maintenance. In the event of failure, the unit must be returned to the authorised Gill Distributor.

HAZARD WARNING! EXPOSED LIVE VOLTAGES ON REAR TERMINALS. ENSURE WindDisplay IS DISCONNECTED FROM MAINS BEFORE ACCESSING REAR PANEL!

If required, the front panel of the display can be cleaned with a cloth, slightly moistened with a soft detergent. Ensure that no liquid enters the display unit. Solvents should not be used and care should be taken to avoid scratching the front panel.

Fuses: Glass fuses 5 x 20 mm anti-surge type

- 250V T40mA for 230V AC
- 250V T80mA for 115V AC
- 250V T250mA for 24V DC

The fuse can be reached as follows:-

- Switch off the main supply and disconnect all the wiring on the rear of the display.
- Remove the four 2.5mm screws on the rear of the display.
- Remove the front window, pull on a corner with both hands.
- Hold the front of the unit down and remove the whole case.
- The fuse is positioned on the PCB see Appendix 5.


Appendix/Drawings

- Appendix 1 General assembly
- Appendix 2 Cable information
- Appendix 3 Electrical connections
- Appendix 4 Daisy chain connections
- Appendix 5 Rear view of WindDisplay

ELECTRICAL CONFORMITY STATEMENT


The products covered in this manual are in conformity with the directive 89/336/EEC based on test results using the harmonized standard EN 60945 in accordance with Article 10 (1) of the directive
These products are in conformity with the directive 73/23/EEC and 93/68/EEC

General Assembly

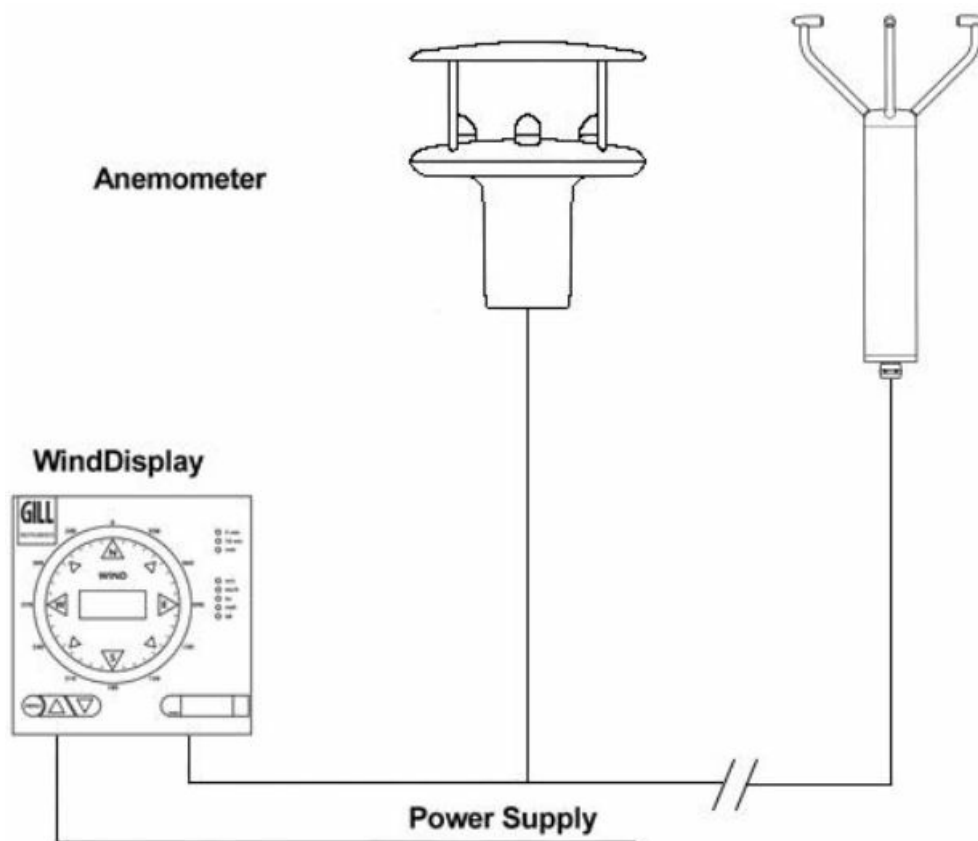

Cable information


Cable Information

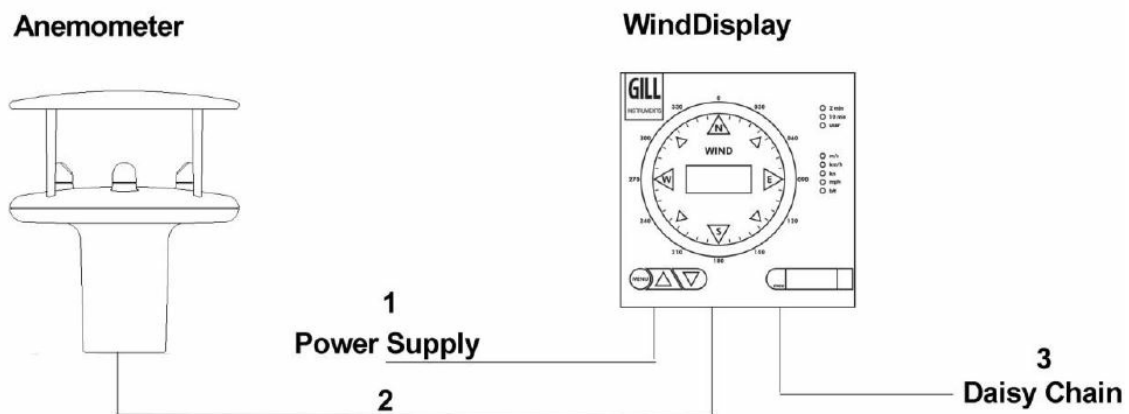

- 1. = 3 core mains cable 1.00 mm² 10A rating
- 2. = 2 Twisted pairs RS422 compatible 7/0.2 (Screened)
- 3. = 1 Twisted pair 7/0.2 RS422 compatible (Screened)


Electrical connections

Electrical Connections

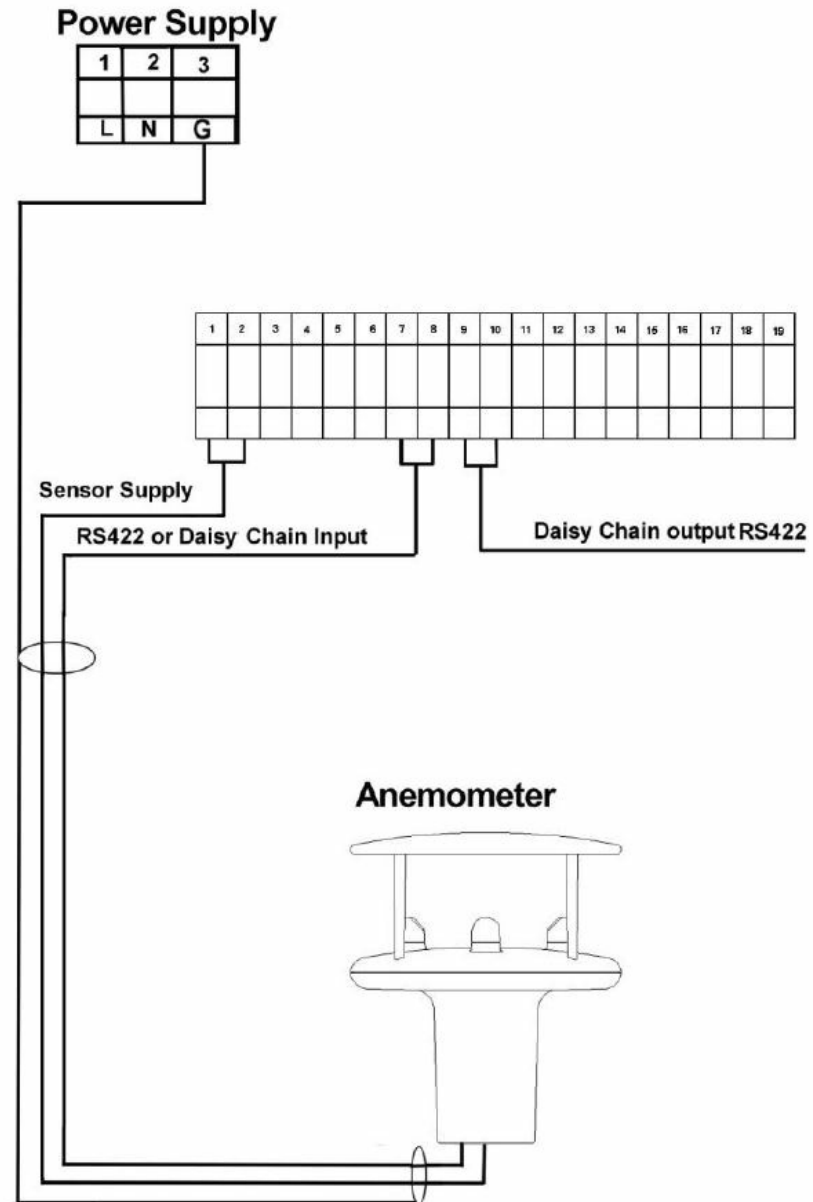


Daisy chain connections

WindDisplay

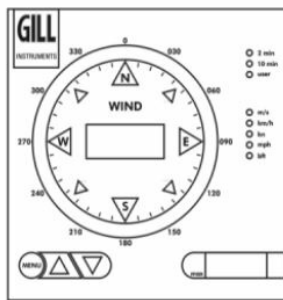

WindDisplay

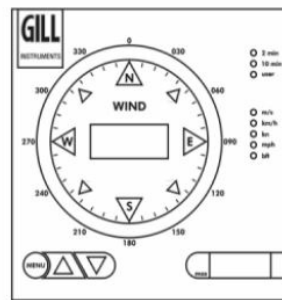


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19


Daisy Chain

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19

Daisy Chain


Rear view of WindDisplay

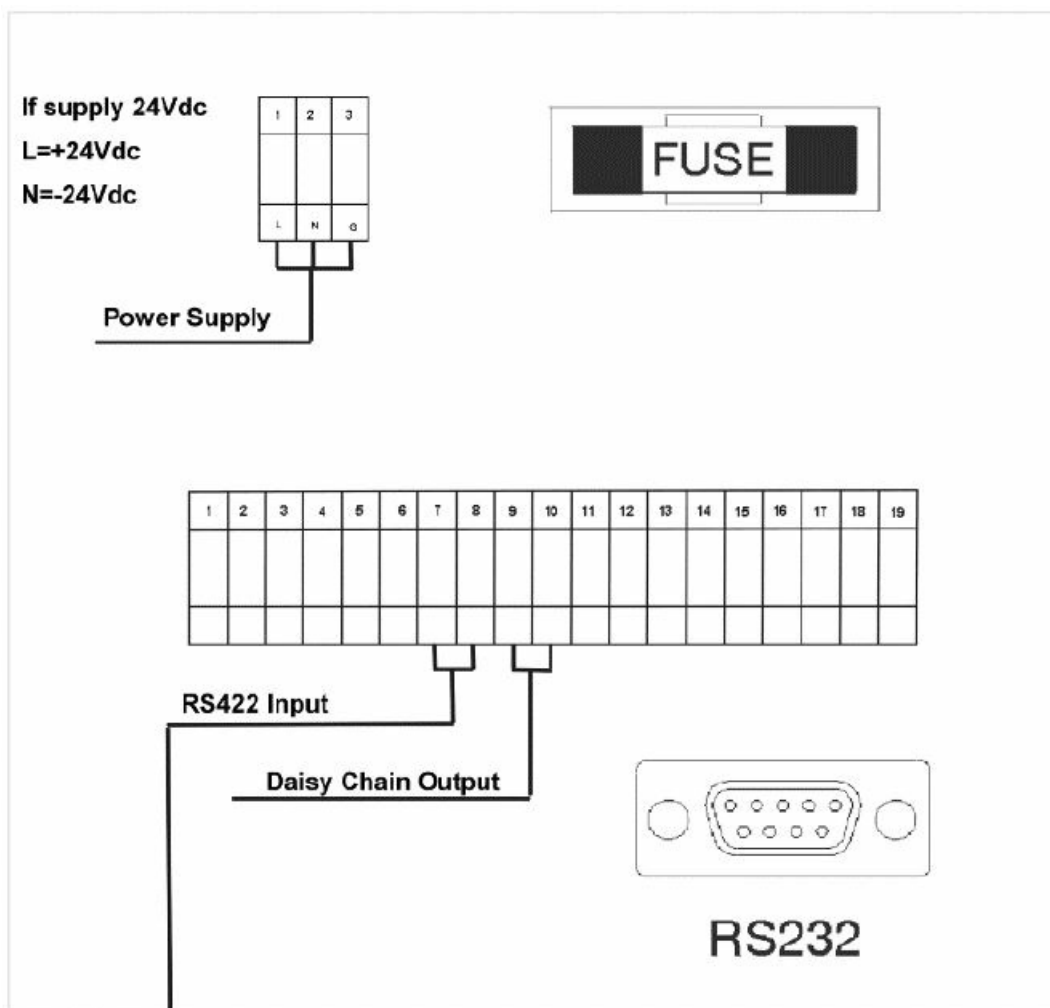

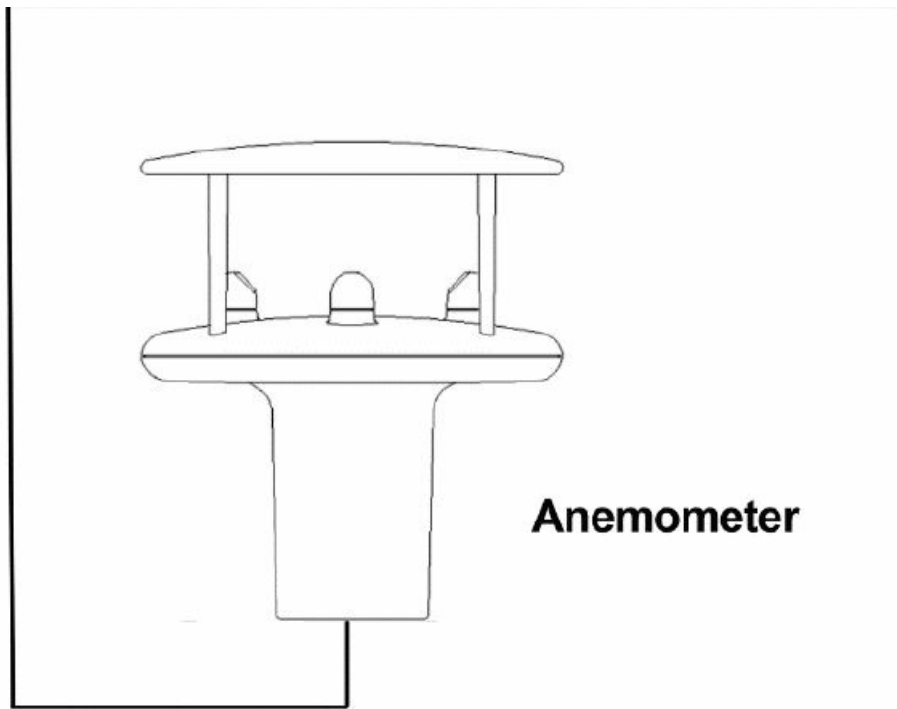


- 1 = Anemometer Supply V-
- 2 = Anemometer Supply V+
- 7 = RS422 IN (-)
- 8 = RS422 IN (+)
- 9 = Daisy Chain OUT (-)
- 10 = Daisy Chain OUT (+)
- 11 = Pulse speed input (-)
- 12 = Pulse speed input (+)


WindDisplay Dimmer Switch Connection

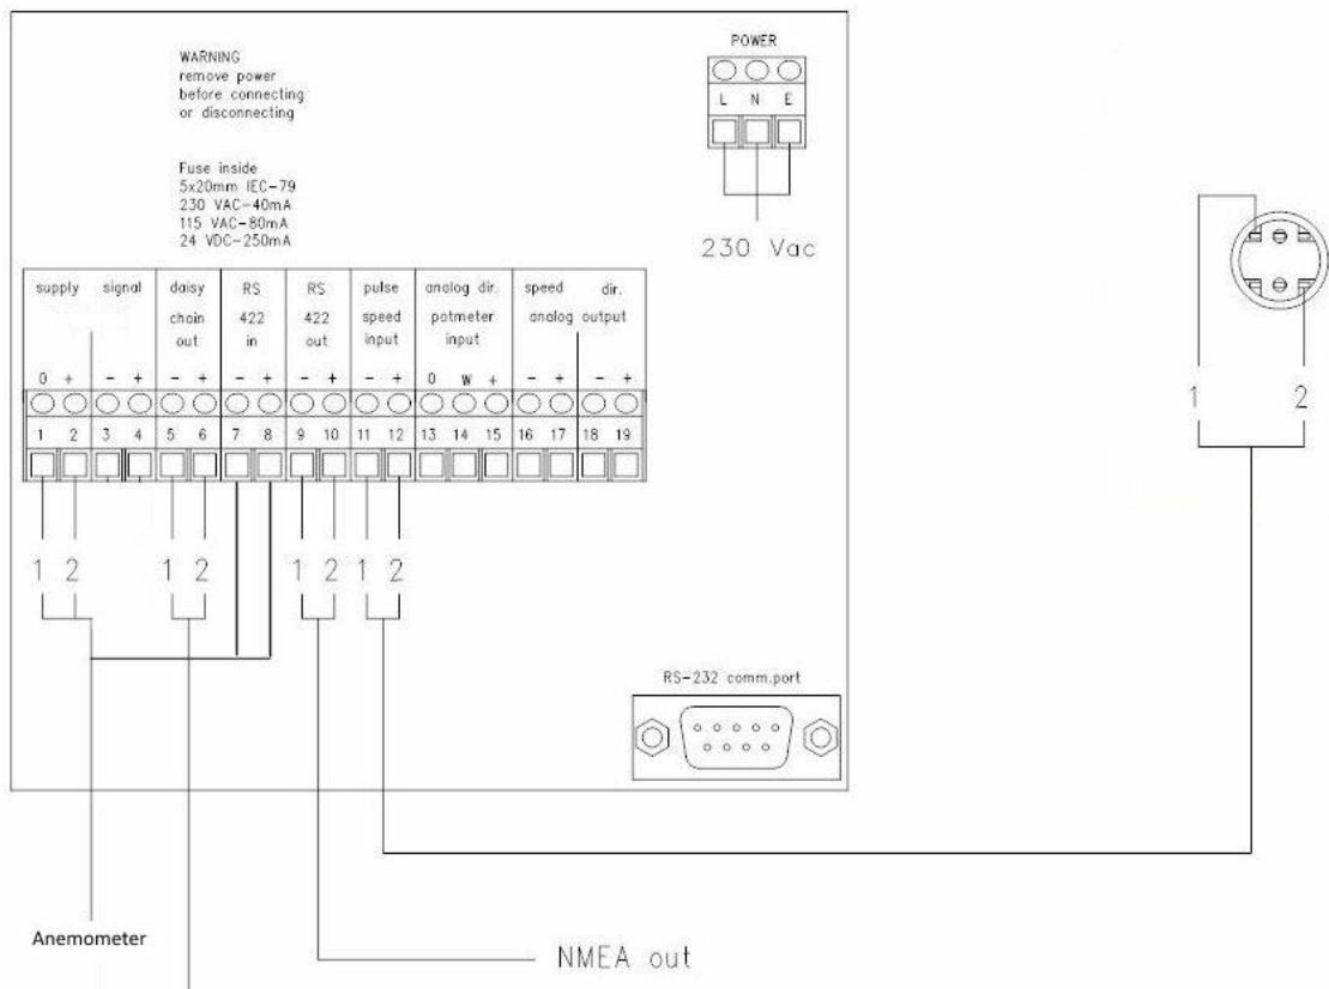

Dimmer Switch Dimensions

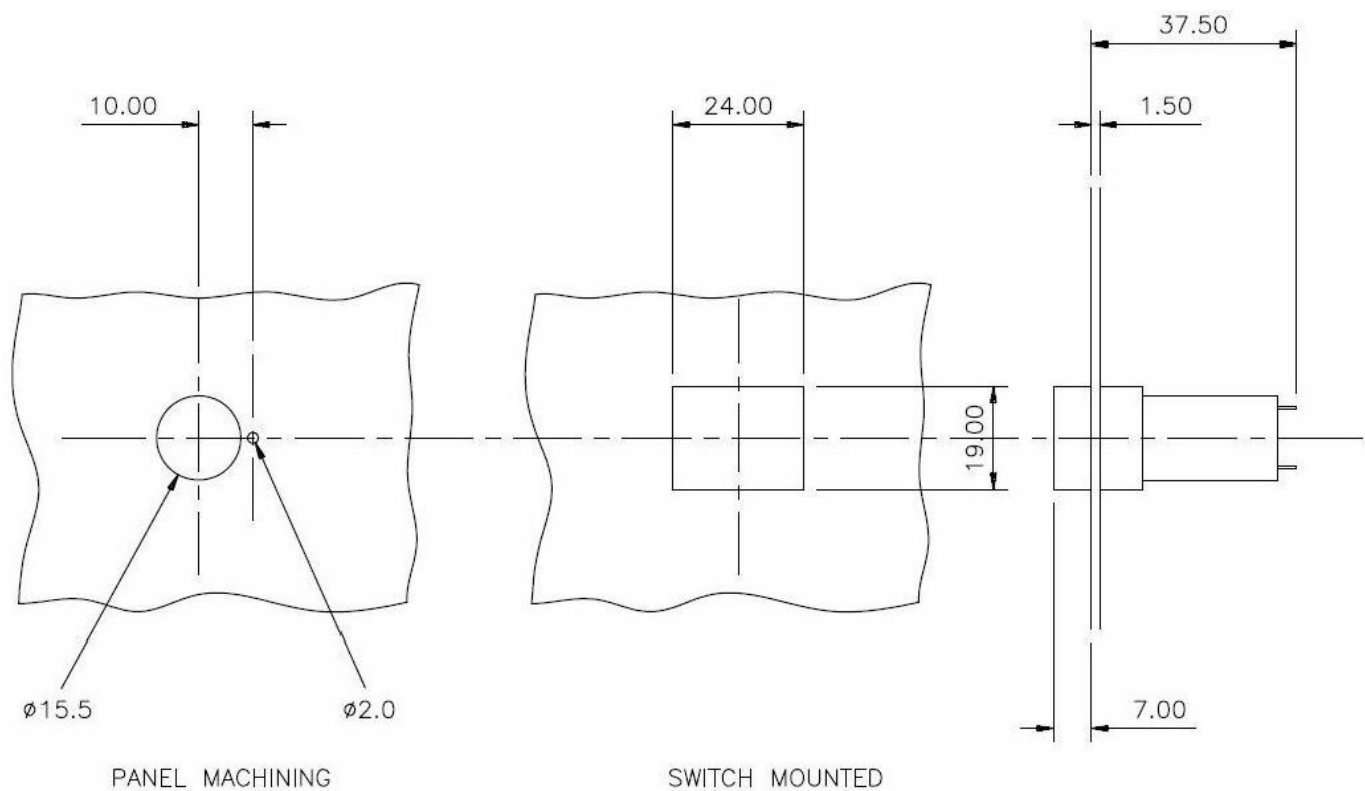

Documents / Resources

	<p>GILL 1086-PS-0050 Wind Displays Speed Indicator and Wind Display [pdf] User Manual 1086-PS-0050 Wind Displays Speed Indicator and Wind Display, 1086-PS-0050, Wind Displays Speed Indicator and Wind Display, Indicator and Wind Display, Wind Display, Display</p>
---	--

References

- [GILL Gill Instruments | Manufacturer & Supplier of Meteorological Sensing Instruments](#)