



## GILLES TOOLING MP-L-K01 Engine Protector Left Instruction Manual

[Home](#) » [GILLES TOOLING](#) » GILLES TOOLING MP-L-K01 Engine Protector Left Instruction Manual 

### Contents

- [1 GILLES TOOLING MP-L-K01 Engine Protector Left](#)
- [2 Product Usage Instructions](#)
- [3 INSTALLATION RECOMMENDED BY AN OFFICIAL DEALER!](#)
- [4 Installation](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)



### GILLES TOOLING MP-L-K01 Engine Protector Left



### Product Information


- Product Name: MP-L-K01 Engine
- Protector (Left) Delivery Contents: – 1x Holder (Left) – MP-HA-13 – 3x Screw – M6x35-912-VA

## Product Usage Instructions

1. It is recommended to have the product installed by a professional workshop or an official dealer.
2. Detach the 3 screws on the original engine case cover.
3. Ensure that no dirt enters the engine through the hole and that the screw mounting area of the cover is clean and flat.
4. Place the engine protector on the cover as shown.
5. Use a torque wrench to tighten the screws M6x35-912-VA. Follow the tightening torque specifications provided by the original motorcycle manufacturer.
6. Please note the tightening sequence – rotate the screws in a clockwise direction, starting from position 1 and moving to position 3.

**Note:** This information is based on the MP-L-K01 Engine Protector Left Anbauanleitung/Manual, Revision 00, dated 19.05.2016.

## INSTALLATION RECOMMENDED BY AN OFFICIAL DEALER!

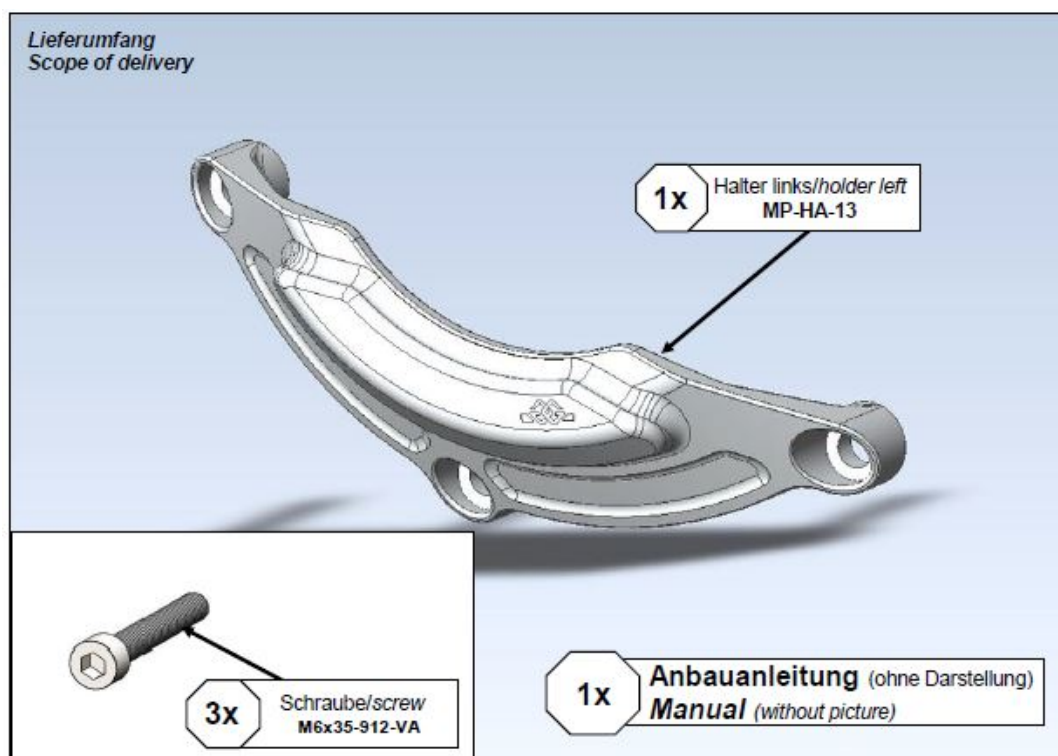

## General instructions

- Please ensure the motorcycle is adequately secured before commencing work.
- Always make sure that the motorcycle is stable and firmly supported.
- A hot engine and exhaust system can burn. Allow all hot parts to cool off before commencing work.
- Keep children and pets away from the work zone.
- Remove all items of personal jewellery (rings, chains, wristwatch, etc.) before commencing work.

- The fitment instructions relate only to the fitment on a standard motorcycle.
- If a technician is installing the parts please ensure these instructions are passed to the owner.
- Please keep the instruction manual at a safe place.

## Installation

- A: Detach the 3 screws on the original engine case cover.



- B: Make sure that no dirt gets through the hole into the engine and the screw mounting of the cover are clean and flat.



- C: Place the engine protector as shown on the cover.




- D: Tighten the screws M6x35-912-VA with torque wrench.



- Tightening torque according to the specification of the original motorcycle manufacturer!
- Please note the tightening sequence -> clockwise rotation 1-3

## Documents / Resources

	<p><a href="#">GILLES TOOLING MP-L-K01 Engine Protector Left</a> [pdf] Instruction Manual MP-L-K01 Engine Protector Left, MP-L-K01, Engine Protector Left, Protector Left, Left</p>
--	---