



## GILOBABY NH-018 Remote Control Robot Toy User Manual

[Home](#) » [GILOBABY](#) » GILOBABY NH-018 Remote Control Robot Toy User Manual 



REMOTE CONTROL ROBOT TOY  
USER MANUAL



## Contents

- [1 NH-018 Remote Control Robot Toy](#)
- [2 BATTERY SAFETY](#)
- [3 PACKAGE CONTAINS](#)
- [4 BATTERY INSTALLATION](#)
- [5 FUNCTION DESCRIPTION](#)
- [6 STEPS TO USE](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

## NH-018 Remote Control Robot Toy

Please read the manual carefully before use

### BATTERY SAFETY

1. Read the battery manual carefully, use the recommended battery and operate according to the operating instructions.
2. Check that the contact parts of the toy and the battery are clean and that the polarity of the installation is in the correct direction.
3. Children are not allowed to change batteries without adult supervision, and small size batteries should be kept out of the reach of children.
4. Do not mix new and used batteries or different types of batteries, especially do not mix non-rechargeable batteries with rechargeable batteries.
5. Do not charge non-rechargeable batteries.
6. Batteries should be removed from toy that have not been used for a long time to prevent battery damage to battery contacts.
7. Please recycle and dispose of used batteries in the proper way. Used batteries can be sent back to specific stores and waste recycling stations for recycling.

### PACKAGE CONTAINS



Robot Toy  
x 1



Screwdriver  
x 1



Remote Control  
x 1



User Manual  
x 1

## BATTERY INSTALLATION

Open the battery cover with a screwdriver




Robot Toy  
3 AA Batteries Required  
(Not Included)



Remote Control  
2 AA Batteries Required  
(Not Included)

## FUNCTION DESCRIPTION

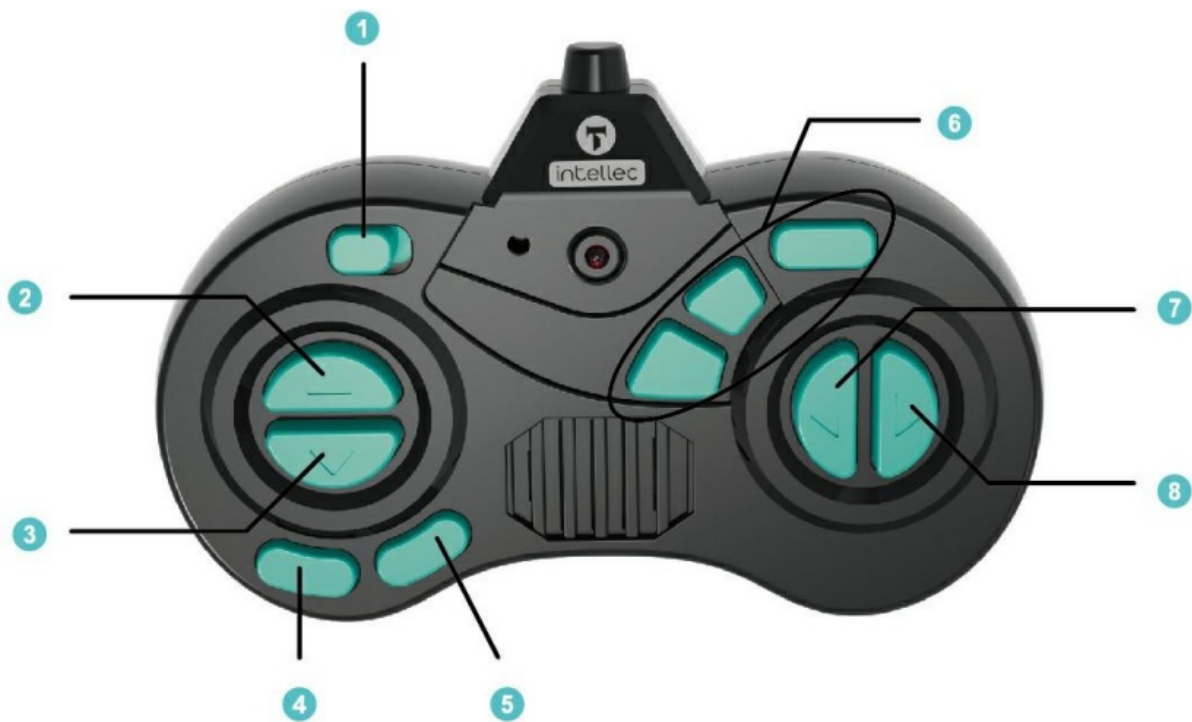


1. ON/OFF  
2. FORWARD  
3. BACKWARD  
4. SOUND SWITCH

5. DEMO  
6. DECORATIVE BUTTONS  
7. LEFT  
8. RIGHT

## STEPS TO USE

1. Install the required batteries and put the battery cover in place.
2. Turn on the switch of the robot toy and the remote control.

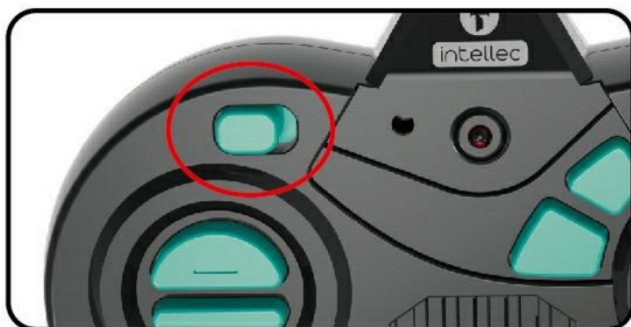

The LED eyes of the robot and the indicator light of the remote control stay on, which means it is connected. Then press the button as you want.



3. Sound mode by default. Mute mode can be selected in the game if necessary.
4. Decorative buttons are for decoration only and have no function.

## NOTE

This product contains electronic components, please wipe with a dry cloth and do not immerse in water.

Keep away from fire sources and avoid prolonged exposure to the sun.

Children should be supervised by adults when using screwdrivers.

Children under the age of 6 should be supervised by an adult during operation.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: **(1)** This device may not cause harmful interference, and **(2)** this device must accept any interference received, including interference that may cause undesired operation.

### § 15.21 Information to user

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


### § 15.105 Information to the user.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



## Documents / Resources

	<p><a href="#">GLOBABY NH-018 Remote Control Robot Toy</a> [pdf] User Manual NH018, 2A8E3-NH018, 2A8E3NH018, NH-018 Remote Control Robot Toy, NH-018, Remote Control Robot Toy, Robot Toy</p>
---	---