



gingko GK08W10 Cube Plus Click Clock User Manual

[Home](#) » [Gingko](#) » [gingko GK08W10 Cube Plus Click Clock User Manual](#) 

Contents

- [1 gingko GK08W10 Cube Plus Click Clock](#)
- [2 Product Content](#)
- [3 Product Set Up & Charging Instruction](#)
- [4 Product Touch Control/ Button Introduction](#)
- [5 Product Operation](#)
- [6 Snooze and Alarm Operation](#)
- [7 Flip Function Operation](#)
- [8 Product Care Notice and Warranty](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)



gingko GK08W10 Cube Plus Click Clock



Thank you for your purchase of the Gingko Cube Plus Click Clock. Please read the instruction manual carefully to achieve the best performance of this product. Please keep this instruction manual safe for future reference. Please fully charge the clock first before first use. We recommend setting the clock on Sound Activated display to save battery life.

Product Content

- 1 x Cube Plus Click Clock,
- 1x Type C USB cable,
- 1x instruction manual booklet

Product Set Up & Charging Instruction

1. Please fully charge the clock first before first use.
2. The DC 5V charging port is at the back of the clock, you may connect the Provided USB C charging cable to any USB adaptor in 5V output such as smart phone chargers or USB port on computer.
3. The charging indication light is red when charging and green when fully charged.
4. You can have the clock permanently plugged in to the charging adaptor.

Product Touch Control/ Button Introduction

(Long touch = 5 seconds; Short touch = 0 – 1 seconds)

- **HR/MIN** – Long touch to access the time setting and short touch to adjust hours or minutes.

- **CLOCK** – Long touch to access the alarm setting; short touch to view the current alarm time or confirm the alarm time and sound setting.
- **T/S** – Long touch to change time format between 12 or 24 hours; short touch to change clock display between sound activated or permanent display.
- **POWER BUTTON**- Long touch to turn the clock ON/ OFF.

Product Operation

- **Product ON/OFF:** Long touch the power button
- **Time Setting**
 1. Long touch the HR or MIN button for 5 seconds until a beep to access time setting mode. Both hours and minutes number will start flashing.
 2. Short touch on HR or MIN buttons to adjust the hours or minutes, the number can be scroll up faster if you leave your finger on the button. Please note you can only scroll up and not down.
 3. After the right hours and minutes have been selected, short touch on the button to confirm and exit the time setting.
- **Alarm Time and Alarm Sound Setting**
 1. Short touch the CLOCK button will show the current alarm. Long touch CLOCK BUTTON to go to alarm setting mode and the numbers will start flashing.
 2. Use the HR or MIN button as instructed above to set hours and minutes.
 3. Short touch CLOCK BUTTON again to confirm alarm and move onto alarm sound setting.
 4. Touch HR or MIN button to select your preferred alarm sound. A1 – Rooster; A2 – Forest Birds; A3 – Sea Waves
 5. Short touch CLOCK BUTTON to confirm and exit the setting.
- **Sound Activated or Permanent Display Setting**

The LED display can be set on sound activated display or permanent display. When in sound activated display, the LED display will automatically switch off when the room is quiet and light up again when you touch, tap it, click your fingers or clap your hands. The LED display will be on constantly if set to permanent display.

 1. Short touch T/S button when clock is in time display mode, the clock will display either —: Sd or oN:Sd
— -: **Sd** – Permanent display
ON: Sd – Sound activated display
 2. Select your preferred mode.
- **12H or 24H Time Display Format**
 1. Long touch the T/S button until a beep, the time format will then change between 12H or 24H.
 2. When the clock is in 12H display format, a dot will appear on the top left of the time screen to indicate PM time.
- **Stopwatch**
 1. Flip the clock to the STOPWATCH/ VERTICAL CLOCK side to activate the stopwatch, the stopwatch will then start counting up in seconds.
 2. Short touch the STOPWATCH to pause or resume the time.
- **Vertical Clock**
 1. Long touch the STOPWATCH/ VERTICAL CLOCK to switch to vertical clock display. The time will be displayed vertically. To change it back to horizontal time display, flip it back to the alarm side.

- **Timer**

1. Flip to the TIMER side of the clock, short touch or long touch to scroll up faster to set the timer in minutes.
2. The screen will start flashing after 5 seconds and countdown will start.

- **OFF**

1. Flip the clock to the OFF side to completely deactivate the alarm. The screen will show OFF for 2-3 seconds then it will revert back to time display.

Snooze and Alarm Operation

1. To snooze, simply touch any of the touch buttons and the alarm will be snoozed for 5 minutes. When snooze is activated, the dot on the bottom right will be flashing.
2. To turn off alarm completely, either flip the clock to the OFF side or long touch on any of the touch buttons to turn snooze off.
3. To turn alarm on again for the next day, you will need to flip the clock over to ALARM side where all the touch buttons are located.

Flip Function Operation

1. When the alarm icon is on the top side of the product, it means the alarm is turned on, there is a dot on the bottom right of the time to indicate that as well.
2. Simply flip the clock to different sides to use other functions such as Timer, Stopwatch or to turn off the alarm.

Product Care Notice and Warranty

Product Care

1. This product is made of wood, please don't place in a very humid room such as steaming room, humid bath room etc.
2. Any natural wood grain on the wood is not a product fault.
3. Please avoid direct sunshine on the product.
4. Heavy drop or misuse of this product could cause damage to the device, please place it at a safe place.
5. Only use 5V USB charging adaptor to charge the product.

Warranty


This product is covered under one year manufacturer warranty, starting from the date of purchase. Within the warranty period any repair service or components replacement will be provided for free.

Warranty does not apply to the following circumstances:

1. Product failure due to improper use, misuse, drops, abuse, alteration, faulty installation, power line surge or modification.
2. Product failure due to acts of nature such as natural disaster, fire, flood or casualty.
3. Any damage caused to the charging ports by user error is not covered by the manufacturer warranty.

Unit C23c Holly Farm Business Park, Kenilworth
CV8 1NP, United Kingdom
Copyright© Gingko Design Ltd
www.gingkodesign.co.uk
Proudly designed in Warwick, UK by Gingko Design Ltd
All rights registered
Responsibly Made in China

Documents / Resources

	<p>gingko GK08W10 Cube Plus Click Clock [pdf] User Manual GK08W13, Cube Plus Click Clock, GK08W13 Cube Plus Click Clock</p>
---	---