



# gioteck SC3NSW-21-MU SC3 Pro Wireless Controller User Guide

[Home](#) » [gioteck](#) » [gioteck SC3NSW-21-MU SC3 Pro Wireless Controller User Guide](#) 

## Contents

- 1 [gioteck SC3NSW-21-MU SC3 Pro Wireless Controller](#)
- 2 [CONTROLLER DIAGRAM](#)
- 3 [UNDERSTANDING THE LED BAR](#)
- 4 [CUSTOMIZING THE LED BAR](#)
- 5 [PROGRAMMING THE BACK BUTTONS \(S1 & S2\)](#)
- 6 [AUDIO SETTINGS](#)
- 7 [THUMBSTICK REPLACEMENT](#)
- 8 [IOS, ANDROID AND PC BLUETOOTH SETUP](#)
- 9 [PC SETUP \(USB WIRED\)](#)
- 10 [FIRMWARE UPDATES](#)
- 11 [SPECIFICATIONS](#)
- 12 [CUSTOMER SUPPORT](#)
- 13 [SAFETY](#)
- 14 [FCC STATEMENT](#)
- 15 [LIMITED WARRANTY](#)
- 16 [Documents / Resources](#)
  - 16.1 [References](#)
- 17 [Related Posts](#)

 


**gioteck SC3NSW-21-MU SC3 Pro Wireless Controller**




## CONTROLLER DIAGRAM

### FRONT

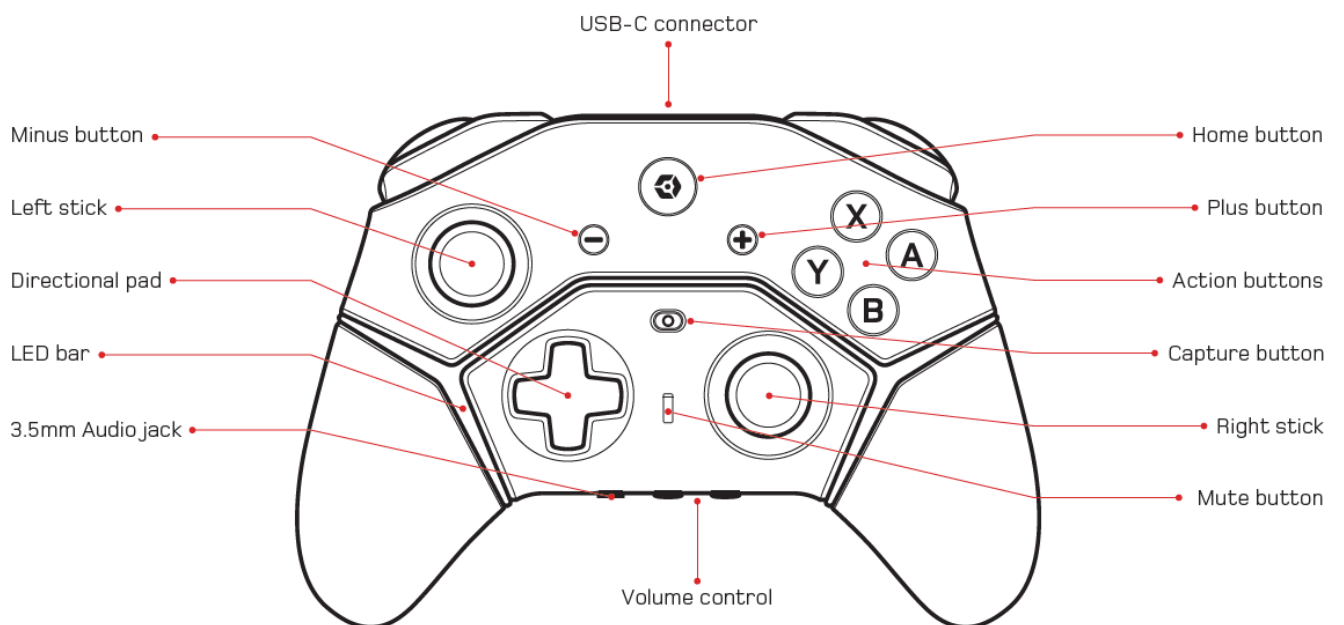

### BACK

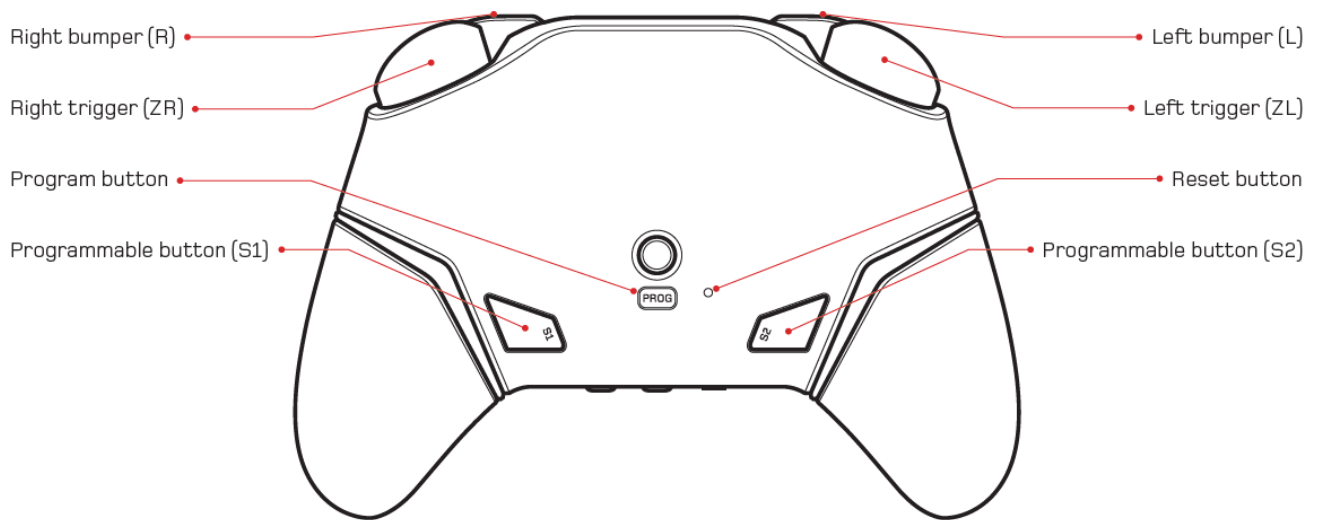 

## SETUP FOR SWITCH



The controller includes a rechargeable battery that was charged at the time of manufacturing. If the LED bar flashes red, then the battery needs charging. To charge, connect to the Switch console or another USB power source via the USB cable.

## WIRELESS PAIRING

From the Switch home menu, select 'Controllers' then select 'Change Grip/Order'. While the following screen is displayed, press and hold the Home button on the controller you are pairing. Release the Home button and the LED bar starts flashing indicating the controller is ready to pair.

**NOTE:** After the controller is paired to the Switch, it will automatically connect next time.

## WIRED COMMUNICATION OPTION

The controller can communicate with the console via USB (wired) mode. By default, the Switch console has wired communication disabled. Enable wired communication by going to System Settings / Controllers and Sensors / Pro Controller Wired Communication and set it to On. Connect the USB charge cable to the controller and Switch console for USB mode.

When you want to use the controller in wireless mode again, disconnect the USB charge cable from the controller, and press the Home button to wirelessly reconnect to the Switch console.

## UNDERSTANDING THE LED BAR

**Low Power:** The LED bar blinks red.

**Charging:** The LED bar blinks orange.

**Connected to power and fully charged:** The LED bar will turn off.

**Pairing mode:** When the Home button is pressed, the LED bar flashes white.

**Programming back buttons:** When the Program button is pressed, the LED bar flashes white Customizing the colours: See the next section in this manual.

## CUSTOMIZING THE LED BAR

- The default colour of the LED bar is orange but it can be set to your preference.
- Press the Program button to cycle through different colour settings. After the solid colour settings, there is fast rainbow effect followed by a slower effect. Each press of the Program button advances the cycle.
- After the LED bar cycles these settings, the last setting is off.
- Pressing the Program button from the LED off setting restarts the cycle.

## PROGRAMMING THE BACK BUTTONS (S1 & S2)



1. Press and hold the Program button for 2 sec, the LED bar will start to flash white.
2. While LED bar is flashing, press the desired command buttons. When you have finished, press either S1 or S2 to complete the process. The Controller will vibrate, and the LED bar will reset. The S1 or S2 button is now programmed.

### Resetting the Back buttons

Press and hold Program button for 5 sec and the Controller will vibrate. All programs are now erased. The S1 and S2 default mapping is L3 and R3.

## AUDIO SETTINGS

- The mute button has no function when a device is not connected to the 3.5mm Audio Jack.
- When an audio device is connected, pressing the Mute button once will mute the connected microphone and the Mute LED will turn red.
- Press the Mute button again to disable the Mute function. The Mute LED will turn off.
- If the Controller is in mute mode when a device is disconnected, mute mode will be disabled, and the Mute LED will be off.
- Press – and + buttons to adjust the device volume.

 
**NOTE:** The 3.5mm Audio Jack is supported in wired mode only. The controller must be connected to the Switch via the USB cable for audio features to work.

**NOTE:** Headphones must be connected to the 3.5mm audio jack to adjust the volume.

## THUMBSTICK REPLACEMENT

1. Remove by pulling each thumbstick up. Do not twist.

2. Replace by lowering the thumbstick back until a magnetic “click” is heard.

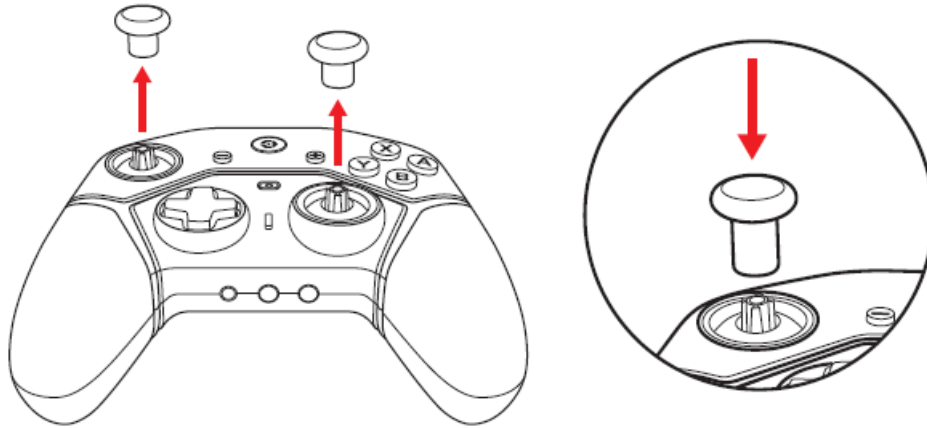

**NOTE:** If you do not feel a magnetic click when replacing a thumbstick, check for dust/debris that may have collected and clear if necessary.

## IOS, ANDROID AND PC BLUETOOTH SETUP

iOS/PC Bluetooth Setup. In this mode, the controller emulates an Xbox wireless controller.

Please check game support before use.

Setup: With the controller powered off, Press the A button and Home button together for 3 sec. The LED bar will flash, and the controller is now in pairing mode. Select the controller from the list of Bluetooth devices on your iOS device or PC. After the connection is made, the LED bar will stop flashing and will show a solid light.

Setup for Android devices. Follow the instructions above but press the Y button and Home button. The controller will show as “gamepad” in the Bluetooth device list.

## PC SETUP (USB WIRED)

1. With the USB cable connected to the SC3, connect the other end to the PC.
2. The Controller will now be recognized as an X-input controller device.
3. The default LED bar colour for PC USB Wired mode is Green.

## FIRMWARE UPDATES

1. Visit [www.gioteck.com/firmware](http://www.gioteck.com/firmware)
2. Select the controller you are updating and follow the on-screen instructions.

The controller can be reset to factory settings by inserting a paperclip into the hole on the rear of the controller.

## SPECIFICATIONS

- **Charging Cable:** USB-C to USB Type-A
- **Cable length:** 1m (~3 feet)
- **Input Power Rating:** DC5V, 1.0A
- **Operating Temperature:** 5°C – 35°C (41F – 95F)
- **Battery Type:** Rechargeable Lithium-ion
- **Battery Capacity:** 750mAh
- **Charging Time:** Approximately 2hrs.
- **Battery Run Time:** 8 – 20 hrs. Battery life varies significantly depending on usage and other factors. Mass:

230grams

- **Wireless Connection:** Bluetooth 2.1+EDR
- **Radiofrequency:** ISM 2.4G
- **Frequency band:** 2402—2480MHz(1MHz)
- **Maximum radio-frequency:** 0dbm

## CUSTOMER SUPPORT

Do not return this product to store. Contact us, we can help.

See our FAQs at [gioteck.com/support](https://gioteck.com/support)

If you still need help, please contact our support team: [support@gioteck.com](mailto:support@gioteck.com)

## SAFETY

### Use and handling

- Before use, check that there is plenty of space around you.
- When using the controller, grip it firmly and make sure it cannot slip out of your hand.
- If using a controller that is connected to the console with a cable, make sure that the cable will not hit a person or object. Also take care to avoid pulling out the cable from the console.

### Exterior protection

Follow the instructions below to help prevent the product exterior from deteriorating or becoming discoloured.

Do not place any rubber or vinyl materials on the product exterior for an extended period. Use a soft, dry cloth to clean the product. Do not use solvents or other chemicals.

### Charging the controller

With the console turned on or in sleep mode, connect the controller to the console using the cable.

### Battery life and duration

- The battery has a limited lifespan. Battery duration will gradually decrease with repeated usage and age. Battery life also varies depending on the storage method, conditions of use and environmental factors.
- Charge in an environment where the temperature range is 5°C – 35°C (41F – 95F). Charging may not be as effective outside this range.

### When not in use

- When the wireless controller is not used for an extended period, it is recommended that you fully charge it at least once a year to help maintain battery functionality.
- The lithium-ion battery of the wireless controller is recyclable. When disposing of the wireless controller, remove the battery and follow local regulations regarding disposing of batteries.

### Caution

- Remove the battery in a location out of the reach of small children to help prevent accidental swallowing of

small parts such as the screws.

- Be careful not to hurt your nails or fingers when removing the controller casing.
- For safety reasons, attach tape or a seal on the metal part of the battery before disposing.
- Do not handle damaged or leaking lithium-ion batteries.
- If you come into contact with material from a leaking battery, take the following actions:
  - If the material gets into your eyes, do not rub, instead immediately flush your eyes with clean water and seek medical attention.
  - If the material comes into contact with the skin or clothes, immediately rinse the affected area with clean water. Consult your physician if inflammation or soreness develops.
- Avoid prolonged use of this product. Take a break at about 30-minute intervals.
- Stop using this unit immediately if you begin to feel tired or if you experience discomfort or pain in your hands or arms during use. If the condition persists consult a doctor.
- This product is intended for use with your hands only, do not bring it into close contact with your head, face or the bones of any other part of the body.
- The vibration function of this product can aggravate injuries, do not use the vibration function if you have any ailment or injury to the bones, joints or muscles of your hands or arms. You can turn on or turn off the vibration function from (Settings) on the function screen.
- Permanent hearing loss may occur if the headset or headphones are used at a high volume. Set the volume to a safe level. Over time, increasingly loud audio may start to sound normal but can actually be damaging to your hearing. If you experience ringing or any discomfort in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the sooner your hearing could be affected. To protect your hearing:
  - Limit the amount of time you use headset or headphones at high volume.
  - Avoid raising the volume to block out noisy surroundings.
  - Lower the volume if you can't hear people speaking
- Do not stare at the light on the controller when it is blinking, if you experience discomfort or pain anywhere in or on your body from light stimulation, stop using immediately.
- Never disassemble or modify the product.
- Do not expose the product to high temperatures, high humidity, or direct sunlight.
- Do not allow the product to come into contact with liquids.
- Do not put heavy objects on the product.
- Do not throw or drop the product or subject it to strong physical shock.
- Do not touch the ports or insert any foreign objects into them.

## **FCC STATEMENT**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

### **CAN ICES-3(B)/NMB-3(B)**

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's

license-exempt RSS(s). Operation is subject to the following two conditions:

This device may not cause interference.

This device must accept any interference, including interference that may cause undesired operation of the device.

### **LIMITED WARRANTY**

**This product is covered by a one (1) year limited warranty.**

Visit [gioteck.com/support](https://gioteck.com/support) for details.

GBB warrants to the original consumer purchaser that the product will be free of defects in materials and/or workmanship for the length of time specified in the warranty period from the date of purchase, this being 1 Year, as set forth at: [gioteck.com/support](https://gioteck.com/support) If a defect covered by this warranty occurs during the warranty period, GoodBetterBest at its option will repair or replace, at no charge, any part that GoodBetterBest determines to be defective.

This warranty shall not apply if the product has been damaged by abuse, misuse, negligence, accident, modification, tempering or by any caused unrelated to defective materials and/or workmanship. Repair or replacement as provided under this warranty is GoodBetterBest's exclusive prerogative. In order to obtain warranty services under certain circumstances (particularly when the retailer will not accept the return of the defective product), you may be required by GBB to return the product directly to GBB in the United Kingdom for inspection and evaluation, along with evidence of purchase (including the price paid and the date the item was purchased), for a determination of whether the warranty applies. If you have been asked by GBB to return the product to GBB in the United Kingdom, and the product is defective and covered under the applicable warranty period, GBB shall provide the appropriate warranty services.

If the warranty does not apply (either due to misuse, damage, negligence, etc. or because the warranty period has expired), you may be charged to return the product to you (if you instruct us to do so). Any applicable implied warranties, including warranties or merchantability and fitness for a particular purpose, are hereby limited to the length of time specified in the warranty periods below, beginning from the date of purchase, and are subject to the conditions set forth in this limited warranty.

In no event shall GoodBetterBest be accountable for incidental damages resulting from the breach of any different or additional legal rights, including longer warranty periods, which vary from jurisdiction to jurisdiction. Some jurisdictions do not allow certain limitations on how long an implied warranty lasts, so the above limitations may not apply to you. In addition, consumers have legal rights under applicable national legislation governing the sale of consumer goods. Such rights are not affected by the warranties set forth herein, except to the extent allowed by law.

**GBB Ltd, Unit 19 Hither Green Industrial Estate, Clevedon, Somerset, BS21 6XU, UK.**

Authorized Representative (EU)2019R1020: Authorised Representative Service  
77 Camden Street Lower, Dublin, D02 XE80 Ireland



## Documents / Resources



[gioteck SC3NSW-21-MU SC3 Pro Wireless Controller](#) [pdf] User Guide  
SC3NSW, VS9-SC3NSW, VS9SC3NSW, SC3NSW-21-MU SC3 Pro Wireless Controller, SC3N  
SW-21-MU, SC3NSW-22-MU, SC3 Pro Wireless Controller

## References

- [Support](#)