

GistGear SBOSENT-143 Portable Bluetooth Speaker User **Manual**

Home » GistGear » GistGear SBOSENT-143 Portable Bluetooth Speaker User Manual



Contents

- 1 GistGear SBOSENT-143 Portable Bluetooth **Speaker**
- **2 PRODUCT SPECIFICATIONS**
- **3 PRODUCT FEATURE**
- **4 KEY AND SLOT FUNCTION**
- 5 Documents / Resources
- **6 Related Posts**



GistGear SBOSENT-143 Portable Bluetooth Speaker



PRODUCT SPECIFICATIONS

• Wireless: VS.O. Support: L2CAP/A2DP/AVCTP, can receive an AUDIO signal and control the AUDIO device. Support HSP//HFP(Handsfree profile), with HANDS-FREE functions.

· Working distance:10M

SNR:.!:90db

• Battery: 3.7V 1200mah

Normal volume playing time: about 6H

• Speaker driver: ¢45mm*2

• Frequency response: 120Hz-20KHz

• Unit size: 70×83.8×171.7mm


Unit weight: about 440GCharging: SV /SOOMAH

· Charging time:3-4H

PRODUCT FEATURE

- 1. International advanced wireless chip and circuit design techniques, support all wireless devices.
- 2. With FM function, can search radio station broadcast automatically
- 3. With a Hi-Fi speaker, to make sure a clear and bright sound.
- 4. Support Micro SD card and USB card, play MP3 format audio.
- 5. The wireless working distance is 10 meters.
- 6. With AUX line-in, can directly connect the outside devices, for example, tablet PC/TV/cell phones
- 7. It will close automatically after 30 mins if disconnected Wireless & torchlight not working
- 8. A variety of flashing LED lights with different colors, and color lights flash follow the melody.

KEY AND SLOT FUNCTION

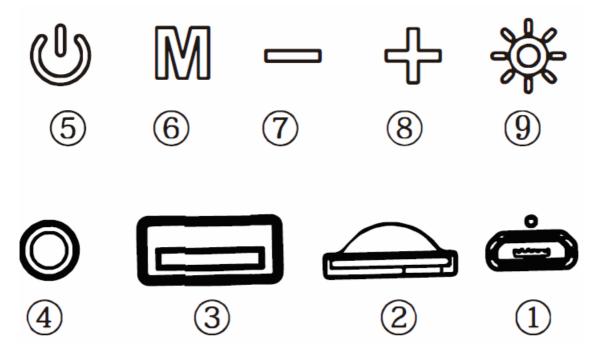

- 1. DC 5V slot: Use the standard Micro USB VB charging cable for power charging.
- 2. TF slot: It can decode and play MP3 format audio when put TF card into the slot.
- 3. USB slot: It can decode and play MP3 format audio when put the USB card into the slot.
- 4. AUX line in the slot: Use the Mini 3.5 head input through outside devices.
- 5. Power switch: Press long for power on /power off.
- 6. When playing music, (USB cardfTF card/Wireless/line-in), short press for "play/pause". In FM mode, press short to search station automatically, and press again to stop searching. Linde wireless mode with mobile paired, when call coming, press short to answer a call hands-free, press again to hand up, press twice to ring up a call.
- 7. Short press to switch model (USB card/TF card/Wireless/line in/FM).
- 8. When playing music, Press short for last song, and long press to turn down the volume.
- 9. When playing music, press short for the next song, and long press to turn up the volume.
- 10. Press short for the option of the LED flashing light, press long to close the LED light

NOTE: In the FM mode, put 1n micro charging cable to get a better FM radio station.

Documents / Resources



GistGear SBOSENT-143 Portable Bluetooth Speaker [pdf] User Manual SBOSENT-143, SBOSENT-143, 2A52SSBOSENT-143, 2A52SSBOSENT-143, Portable Bluetooth Speaker, SBOSENT-143 Portable Bluetooth Speaker