



GL 8167 Digital Scale User Manual


[Home](#) » [GL 8167 Digital Scale](#) » GL 8167 Digital Scale User Manual 



Gerlach
GERMANY



GL 8167
user manual – 3

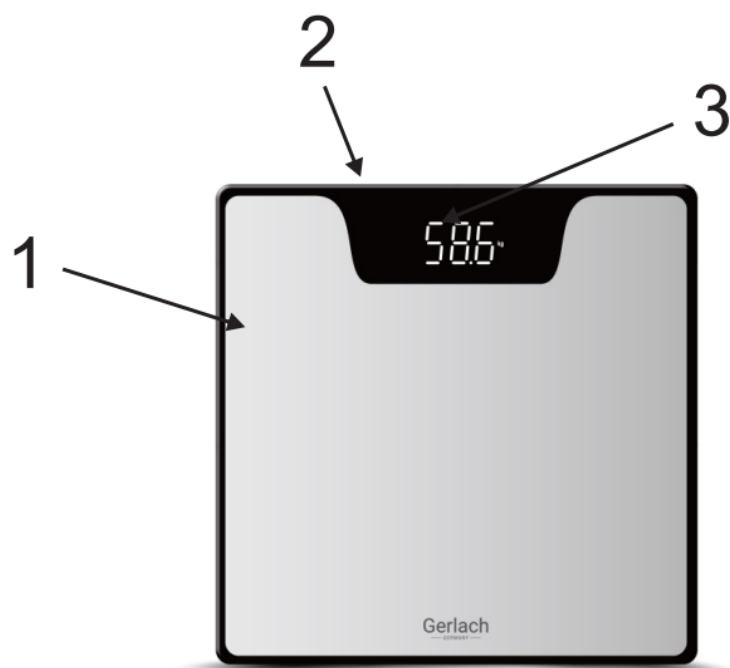

Batteries
2×1.5V (AAA)

a	Lo
b	Err

SAFETY CONDITIONS. IMPORTANT INSTRUCTIONS ON SAFETY OF USE PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

1. Before using the product please read carefully and always comply with the following instructions. The manufacturer is not responsible for any damages due to any misuse.
2. The product is only to be used indoors. Do not use the product for any purpose that is not compatible with its application.
3. Please be cautious when using around children. Do not let the children play with the product. Do not let children or people who do not know the device to use it without supervision.
4. **WARNING:** This device may be used by children over 8 years of age and persons with reduced physical, sensory or mental capabilities, or persons without experience or knowledge of the device, only under the supervision of a person responsible for their safety, or if they were instructed on the safe use of the device and are aware of the dangers associated with its operation. Children should not play with the device. Cleaning and maintenance of the device should not be carried out by children unless they are over 8 years of age and these activities are carried out under supervision.
5. Never put the whole device into the water. Never expose the product to atmospheric conditions such as direct sunlight or rain, etc.. Never use the product in humid conditions.
6. Never use the product if it was dropped or damaged in any other way or if it does not work properly. Do not try to repair the defective product yourself because it can lead to electric shock. The damaged devices always turn to a professional service location in order to repair it. All the repairs can be done only by authorized service professionals. The repair that was done incorrectly can cause hazardous situations for the user.
7. Never put the product on or close to the hot or warm surfaces or the kitchen appliances like the electric oven or

gas burner.

8. Never use the product close to combustibles.



9. Never use this device close to water, e.g.: Under the shower, in the bathtub, or above the sink filled with water.
10. Do not touch the device with wet hands.
11. The batteries may leak if they are flat or were not used for an extended period of time. To protect the device and your health, replace them regularly and avoid skin contact with leaking batteries.
12. The device should be turned off each time it is put aside.
13. Use the device on a stable and flat surface.
14. Keep the device away from the influence of strong electromagnetic fields.
15. Make sure that the surface, on which the device is used, is not wet or slippery.
16. Be careful not to drop heavy objects on the scale display or the glass part.
17. DO NOT hit, DO NOT shake, DO NOT drop the scale.
18. During the whole measurement standstill on the scale.

DEVICE DESCRIPTION

1. Glass scale platform
2. UNIT button
3. LED display

REPLACING THE BATTERY

Remove the lid of the battery compartment at the bottom of the scale (4). Remove the old battery. Insert the new battery of the right type.

Close the lid of the battery compartment.

BEFORE FIRST USE

Open the battery compartment. Remove the insulation foil from the battery. Close the lid of the battery compartment.

SELECTING UNITS OF MEASURE

The metric system will change to the UK or vice versa. The display will show the current unit.

Press the button for changing the measure units (2) at the bottom of the scale.

OPERATION

STEP 2. Press the scale, the device will switch on automatically. Wait until the display shows "0".

STEP 1. Place the scale on a hard and flat surface (avoid carpets and soft surfaces).

STEP 3. Softly step on the scale. Stand evenly on the scale, and do not move until your weight indication on the display will not change and will be locked.

AUTOMATIC SWITCH-OFF

When you step off the scale the device will switch off automatically. The scale switches off automatically when the display shows "0.0" or

the same weight indication for 20 seconds.

CLEANING AND MAINTENANCE

– Gently wipe the scale with a dry or slightly damp cloth.

MESSAGES

- a – low battery
- b – excessive scale load



To protect your environment: please separate carton boxes and plastic bags and dispose of them in corresponding waste bins. The used appliance should be delivered to the dedicated collecting points due to hazardous components, which may affect the environment. Do not dispose of this appliance in the common waste bin.

- Contents
- 1 Documents / Resources
 - 2 Related Posts

Documents / Resources

	<p>GL 8167 Digital Scale GL 8167 Digital Scale [pdf] User Manual GL 8167, Digital Scale</p>
--	---