

GL·iNet

GL iNet AX1800
Slate AX Wireless
Router



GL iNet AX1800 Slate AX Wireless Router User Manual

[Home](#) » [GL iNet](#) » GL iNet AX1800 Slate AX Wireless Router User Manual 

Contents

- [1 GL iNet AX1800 Slate AX Wireless Router](#)
- [2 Setting Up](#)
- [3 Support](#)
- [4 Technical Supports](#)
- [5 Warranty](#)
- [6 Specifications](#)
- [7 FAQ](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)

GL·iNet

GL iNet AX1800 Slate AX Wireless Router




Setting Up

1. Insert Cards & Power On

When powered up, your router will broadcast both 2.4G and 5G Wi-Fi signals with the SSID: **GL-AXT1800-xxx** and **GL-AXT1800-xxx-5G**.

Note: Hot plug for TF card is not supported for this router.

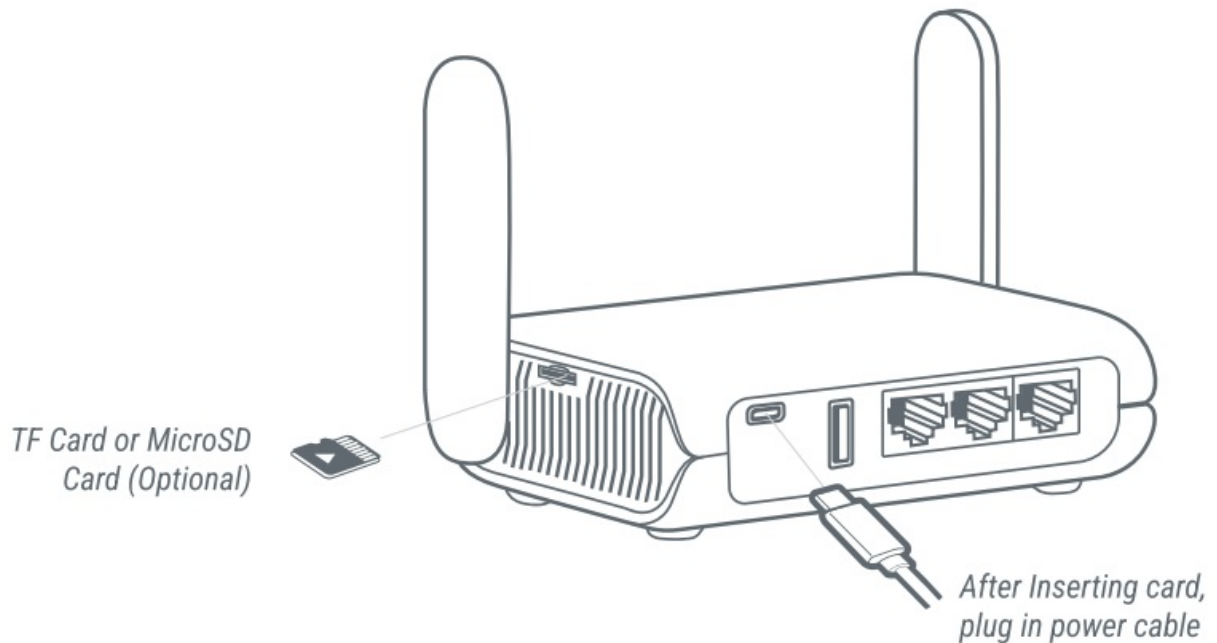



TF Card or MicroSD Card (Optional)

After inserting card, plug in power cable

2. Connect via Wi-Fi


Connect to the Wi-Fi called **GL-AXT1800-xxx** or **GL-AXT1800-xxx-5G**, and then input the default Wi-Fi password which is printed on the bottom label of the router.

Wi-Fi	<input type="checkbox"/>
✓ GL-AXT1800-xxx	 

Search the SSID and connect to it

Password	●●●●●●●●
----------	----------


Connect via LAN

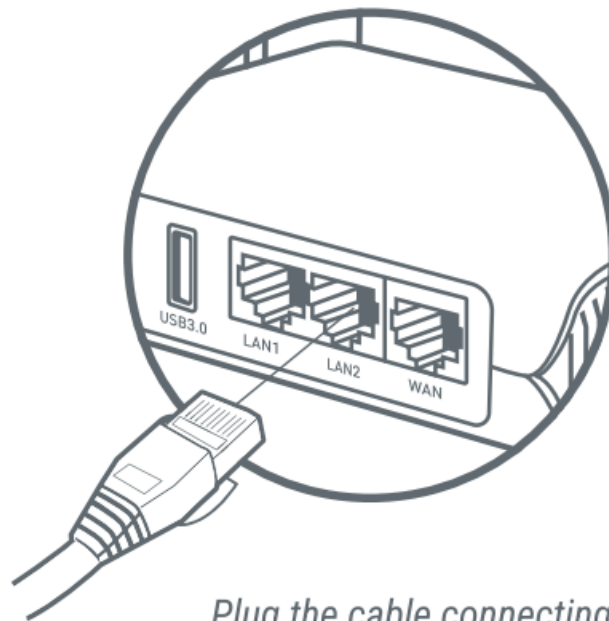


*Plug the cable connecting
to your computer into LAN port*

3. Set Up Router

Visit <http://192.168.8.1> in your browser to set up your router; start by choosing your preferred language.

	http://192.168.8.1	
---	---	---

Support

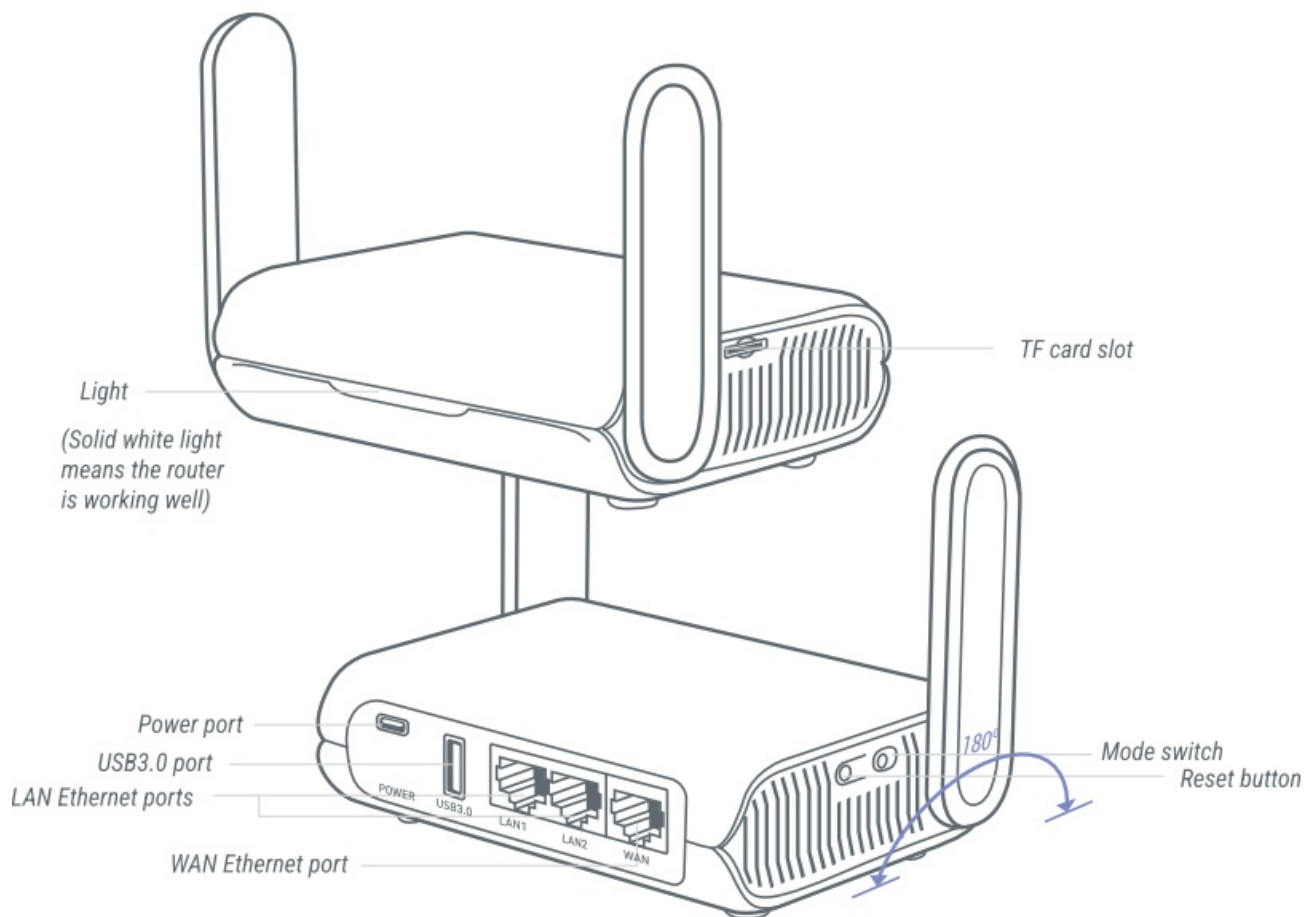

Repair / Reset

If you cannot access the web-based setup page or cannot connect to the router, you can press the **Reset** button:

- Press and hold for **3 seconds** and then release to repair your network. The light will turn blue and flash slowly until your network recovers.
- Press and hold for **10 seconds**, and then release to reset the router to factory settings. The light will turn blue and flash rapidly. All data will be cleared when the light becomes solid blue.



<https://docs.gl-inet.com/en/4/>

Technical Supports

- For more detailed and updated instructions, please visit our website docs.gl-inet.com
- For further questions, you can get help from the following ways:
 - Email to support@gl-inet.com
 - Message us on our Facebook: facebook.com/gl.inet.wifi/
 - Post questions in our forum: forum.gl-inet.com
 - Ask professionals in other forums e.g. OpenWrt, LEDE or other professional websites

Warranty

- We provide **one year limited warranty** for routers and **3-month limited warranty** for accessories. Extra warranty may apply according to the local law in which the product purchase took place.
- Highly recommend using the included **5V/4A power adapter**.
- Any damage to the router caused by not following the instructions will render this warranty null and void.
- Any damage to the router caused by modifying the PCBA, components or case will render this warranty null and void.
- Issues caused by the use of third-party firmware may not get official support from us.
- Any damage to the router caused by inappropriate use, e.g. inappropriate voltage input, high temperature, dropping in the water or on the ground will render this warranty null and void.
- Pictures on the instructions are only for reference. We reserve the right to change or modify these materials without further notice.

Specifications

Frequency Bands	2412~2472MHz (WiFi 2.4G); 5.15~5.25GHz 5.25~5.35GHz 5.47~5.725GHz 5.725~5.85GHz (WiFi 5G)
Maximum Output Power	WiFi 2.4G: 19.18dBm; WiFi 5G: 25.18dBm

FCC ID: 2AFIW-AXT1800

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 1. This device may not cause harmful interference, and
 2. This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
3. **Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help important announcement.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Hereby, GL TECHNOLOGIES (HONG KONG) LIMITED declares that the radio equipment type [AX1800 Wireless Router, GL-AXT1800] is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<https://www.gl-inet.com/products/certificate>

The user manual for LE-LAN devices shall contain instructions related to the restrictions mentioned in the above sections, namely that:

1. The device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;

The functions of Wireless Access Systems including Radio Local Area Networks(WAS/RLANs) within the band 5150-5350 MHz for this device are restricted to indoor use only within all European Union countries.

	AT	BE	BG	HR	CY	CZ	DK	EE	FI	FR	DE	EL	HU	IS	IE	IT	
	LV	LI	LT	LU	MT	NO	PL	PT	RO	SK	SI	ES	SE	CH	NL	UK(NI)	UK

- **Frequency** bands: 2412~2472MHz (WIFI 2.4G); 5.15~5.25GHz 5.25~5.35GHZ 5.47~5.725GHz 5.725~5.85GHz (WIFI 5G).
- **Maximum** output power: WIFI 2.4G: 19.18dBm; WIFI 5G: 25.18dBm

Hong Kong Office

GL Technologies (Hong Kong) Limited Unit 601, Building 5W, Hong Kong Science Park, Shatin, N.T., Hong Kong

Shenzhen Office

Shenzhen Guanglianzhitong Tech Co., Ltd. Room 305 – 306, Skyworth Digital Building, Shiyan Street, Baoan District, Shenzhen, China, 518000 (+86-0755-86606126)



FAQ

- **How do I reset my router?**
 - Press and hold the reset button for 10 seconds to reset the router to factory settings.
- **Where can I find the default Wi-Fi password?**

- The default Wi-Fi password is printed on the bottom label of the router.
- **How can I get technical support?**
 - You can email support@gl-inet.com, message us on Facebook, or post questions in our forum.

Documents / Resources

<p>Let's get started.</p> <p><small>GL iNet AX1800 Slate AX Wireless Router</small></p>	<p>GL iNet AX1800 Slate AX Wireless Router [pdf] User Manual axt1800, AX1800 Slate AX Wireless Router, Slate AX Wireless Router, Wireless Router, Router</p>
---	--

References

- [User Manual](#)

Manuals, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.