

GLIDEROL TM-390 Remote Control



GLIDEROL TM-390 Remote Control Instructions

[Home](#) » [GLIDEROL](#) » GLIDEROL TM-390 Remote Control Instructions 

Contents

- 1 GLIDEROL TM-390 Remote Control
- 2 PRODUCT INFORMATION
- 3 PRODUCT USAGE INSTRUCTIONS
- 4 REMOTE ORDERING OPTIONS
- 5 SPECIFICATIONS
- 6 Remote Programming Steps
- 7 Documents / Resources
 - 7.1 References
- 8 Related Posts



GLIDEROL TM-390 Remote Control



PRODUCT INFORMATION

SPECIFICATIONS

- **Gliderol Frequency:** 390Mhz
- **Buttons:** 3
- **Battery:** CR2016

PRODUCT USAGE INSTRUCTIONS

Remote Programming Steps

1. Press and hold the `Enter` button for 2 seconds to access the operator menu. The unit will beep twice to confirm this has been selected.
2. Use the arrow (Up & Down) buttons to select the `Learn` option and press `Enter` to confirm selection. The unit will beep three times to confirm the unit is in `Learn` mode.
3. Press the `Large` button on the handset. The unit will beep twice to confirm successful coding. Wait approximately 3 seconds for the unit to exit setup mode. (Always use the large button for coding, even if configured to use small buttons for normal operation.)

Deleting All Remote Controls from Receiver

1. Pressing the enter button for 5 seconds or more will erase all handset data from your receiver (garage door motor).

RECEIVER COMPATIBILITY

Glidermatic GTS Optima, Glidermatic GRD+, Glidermatic GRD Dual & Glidermatic IGDU

FAQ

1. Can I program multiple remotes to the receiver?

Yes, you can program multiple remotes by following the Remote Programming Steps mentioned above for each additional remote.

2. How do I know if the remote programming was successful?

If the unit beeps twice after pressing the `Large' button during programming, it confirms successful coding.

3. What should I do if my remote stops working?

Try replacing the battery with a new CR2016 battery. If the issue persists, follow the Remote Programming Steps to reprogram the remote to the receiver.

GLIDEROL

REMOTE ORDERING OPTIONS



SPECIFICATIONS

- Gliderol
- Frequency – 390Mhz
- Buttons – 3
- Battery – CR2016

COMPATIBLE WITH

• RECEIVER COMPATIBILITY

- Suits Models:
- Glidermatic GTS Optima, Glidermatic GRD+, Glidermatic GRD Dual & Glidermatic IGDU

Remote Programming Steps

Programming New Remotes to Receiver


1. Press and hold the 'Enter' button for 2 seconds to access the operator menu. The unit will beep twice to confirm this has been selected.
2. Use the arrow (Up & Down) buttons to select the 'Learn' option and press 'Enter' to confirm selection. The unit will beep three times to confirm the unit is in 'Learn' mode.
3. Press the 'Large' button on the handset. The unit will beep twice to confirm successful coding. Wait approx 3 seconds for the unit to exit setup mode. (Always use the large button for coding, even if configured to use small buttons for normal operation.)

Deleting All Remote Controls from Receiver

1. Pressing the enter button for 5 seconds or more will erase all handset data from your receiver (garage door motor.)

Whilst every effort has been made to ensure the accuracy of the information supplied herein, we assume no liability for any errors or omissions. Information contained in this document is subject to change without prior notice.

Documents / Resources

	<p>GLIDEROL TM-390 Remote Control [pdf] Instructions TM-390 Remote Control, TM-390, Remote Control, Control</p>
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.