




Home » global sources » Global Sources FSQ01 Wireless Remote Control User Guide 📆

### Contents [ hide ]

- 1 Global Sources FSQ01 Wireless Remote Control
- 2 Operating elements
- 3 Inserting/replacing battery
- 4 Key functions
- 5 Technical data
- 6 Battery statement
- 7 FCC statement
- 8 FAQ
- 9 Documents / Resources
  - 9.1 References

# global \*\* sources

#### Global Sources FSQ01 Wireless Remote Control

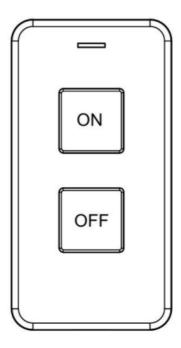

# **Specifications**

• Model: FSQ01

Battery Type: 23A 12V

• Number of Channels: 1 channel

• Transmission Frequency: 433.92 MHz


• Transmission Range: max. 150ft (in open area)

• Dimensions (W x H x D): 72 x 37 x 15 mm

## **Operating elements**

• Upper button- ON

• Down button- OFF

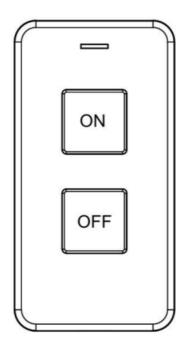

# Inserting/replacing battery

- 1. Remove the remote control from the bracket, then revolve the battery compartment lid according to the marks there.
- 2. Remove the battery Insulating sheet or insert one round cell battery, type 23A 12V, into the battery recess. The positive pole should face upward (see the "+" imprint on the battery). Push the battery all the way into the battery recess.
- 3. Close the battery compartment. The battery must be replaced when the remote control's range decreases noticeably or when the indicator lamp no longer lights when a button is pushed.

# **Key functions**

- Two control key: upper = ON/ down = OFF.
- Use the upper key to turn ON receiver.
- Use the down key to turn OFF receiver.
- The indicator lamp lights up each time a key is pressed.
- The remote control can control an unlimited number of compatible receivers.

#### **Technical data**

- Battery type ......23A 12V
- Number of channels ......1 channel
- Transmission frequency......433.92 MHz
- Transmission range ......max. 150ft (in open area)
- Dimensions (W x H x D) ............ 72 x 37x 15 mm

## **Battery statement**

- Ensure the batteries are installed correctly according to polarity (+ and -). Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- 2. Even used batteries may cause severe injury or death. If any problems, please call a local poison control center for treatment information.
- 3. The compatible battery type is non-rechargeable 12V 23A, and it's not to be recharged.
- 4. Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion in chemical burns.
- 5. Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- 6. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

#### FCC statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### **RF Exposure Information**

The device has been evaluated to meet general RF exposure requirement.

The device can be used in 0mm exposure condition, compliance with exposure requirements.

Only in the stated conditions, the device is shown to fully comply with the FCC RF Exposure requirements of KDB 447498.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

How do I know when to replace the battery?

The battery must be replaced when the remote control's range decreases noticeably or when the indicator lamp no longer lights when a button is pushed.

What type of battery does the remote control use?

The remote control uses a type 23A 12V battery.

What is the transmission range of the remote control?

The transmission range of the remote control is a maximum of 150ft in an open area.

# **Documents / Resources**



Global Sources FSQ01 Wireless Remote Control [pdf] User Guide FSQ01, 2A2XV-FSQ01, 2A2XVFSQ01, FSQ01 Wireless Remote Control, FSQ01, Wireless Remote Control, Remote Control, Control

## References

- User Manual
- global sources
- ◆ 2A2XV-FSQ01, 2A2XVFSQ01, control, FSQ01, FSQ01 Wireless Remote Control, global sources, Remote Control, Wireless Remote Control

# Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name		
Email		
<u> </u>		
Website		
☐ Save my name, email, and website in this browser for the next time I com	ment.	
Post Comment		
Search:		
e.g. whirlpool wrf535swhz	Search	

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.