



global sources JH-TWS30 True Wireless Earphone User Manual

[Home](#) » [global sources](#) » global sources JH-TWS30 True Wireless Earphone User Manual 


JH30 user manual



Contents

- 1 [A. Product Label](#)
- 2 [B. Power on /off](#)
- 3 [C. Pair mobile or other device](#)
- 4 [D. Operations](#)
- 5 [E.Charging](#)
- 6 [E.FCC STATEMENT](#)
- 7 [Documents / Resources](#)
- 8 [Related Posts](#)

A. Product Label

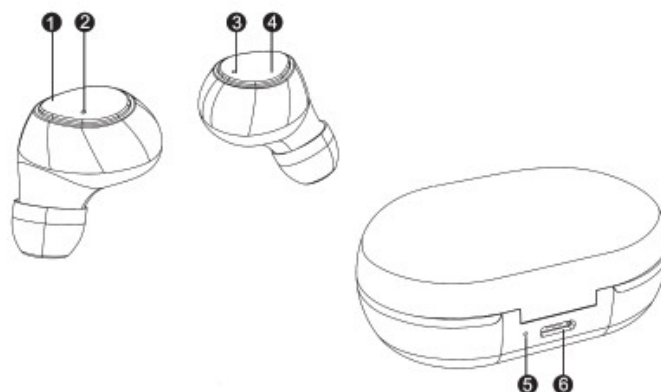

- | | |
|---|--|
| 1. Right earbud power button
2. Right earbud indicator/microphone
3. Left earbud power button | 4. Left earbud indicator/microphone
5. Charging case indicator
6. Type-C charging port |
|---|--|

B. Power on /off

1. Take earbuds out from charging case ,then it will turn on and pair automatically.
2. Put earbuds into charging case ,then it will turn off automatically(or long press the power button about 3 seconds)

C. Pair mobile or other device

1. Single ear use

- 1) Take the earbud out from charging case.
- 2) The red and blue indicator of earbud flashes alternately to enter the state of waiting for connection.
- 3) Turn on the bluetooth switch of mobile or other device.
- 4) Search the bluetooth device and select the pairing name "TMJH30" and connect it.
- 5) The indicator will be off if connection is successful.
- 6) On the 2nd use, the earphone will connect to the last connected device (such as mobile) if the device bluetooth switch is on.
- 7) If the pairing is failed, turn off earbuds and try again.

2. Use for both

- 1) Take both out from charging case at the same time. They will turn on and pair to each other automatically (there is voice "Dong" pairing), and blue indicator flash slowly (once every 2 seconds)
- 2) Search the bluetooth device (such as mobile) and select the pairing name, then click "connect". The blue indicator light flash slowly (once every 5 seconds)

PS: After taking the both earbuds out of charging case, if they are not paired successfully, advise you to double click the right earbud button, then will pair automatically;

D. Operations

Music play/pause: click the power button on any one earbud Previous song: Double click the power button of right

earbud

Next song: Double click the power button of left earbud

Active siri: Press and hold the power button of any earbud about 1 second then, release.

Answer call: Click the power button of any earbud when call is coming

Reject call: Long press the power button of any earbud about 1 second

Redial last phone number: Triple click the power button

E.Charging

1. Charge for the case:

The red indicator is flashing while charging the case, it will be red constantly when fully charged.

2. Charge for the earbuds:

The red indicator of earbuds is on constantly while charging earbuds. Then, it will be off when fully charged.

The charging case indicator will be blue while charging earbuds. Then off fully charged.

E.FCC STATEMENT

1. This device complies with Part 16 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. and (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment

NOTE: The equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Documents / Resources

	global sources JH-TWS30 True Wireless Earphone [pdf] User Manual JH302, A3FH-JH30, 2A3FHJH30, JH-TWS30 True Wireless Earphone, True Wireless Earphone, Wireless Earphone, Earphone
---	---