



Global Sources SWR07 Human Presence Sensor User Guide

[Home](#) » [global sources](#) » Global Sources SWR07 Human Presence Sensor User Guide 

 
Global Sources SWR07 Human Presence Sensor User Guide



Contents

- 1 PRODUCT INSTROCTION
- 2 Quick Setup
- 3 Power on the device
- 4 Device pairing
- 5 Device Installation
- 6 Instruction for app settings
- 7 Hold Time
- 8 Power LED
- 9 Presence Alarm
- 10 Documents / Resources
 - 10.1 References
- 11 Related Posts

PRODUCT INSTROCTION

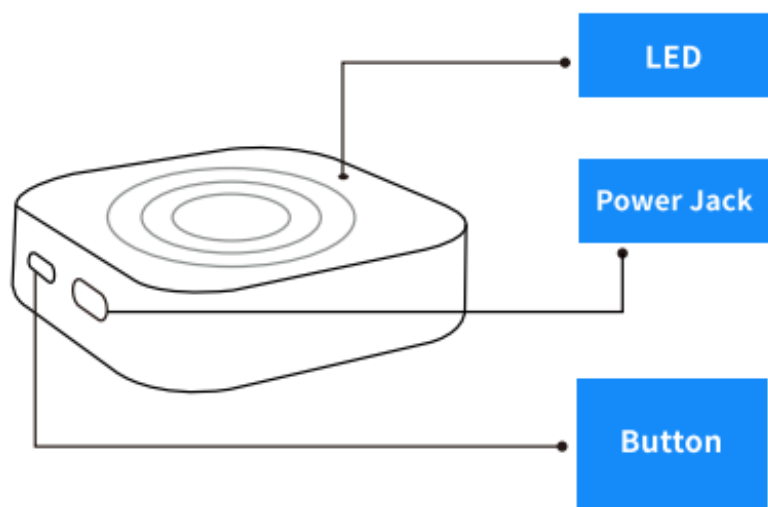

Blinking: The device enters pairing mode

ON/OFF:Power indicator, it can be controlled by app

USB Type-C

 
Long press: Press and hold the button for 5 seconds then the LED blinks, the device will enter pairing mode

Quick Setup

Note: It needs to install “Smart Life” and register an account first (Search “Smart Life” in APP Store /Google Play or Scan below QR code to install APP)



Power on the device

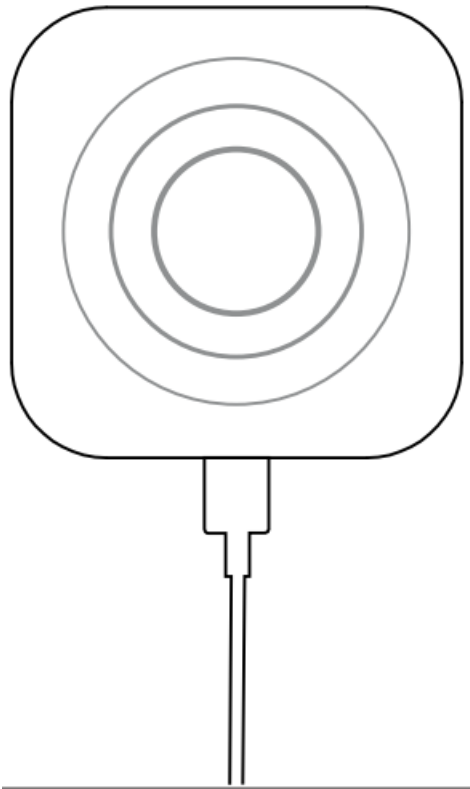


Device pairing

Pairing for Wi-Fi device:

It needs to connect your mobile phone to a Wi-Fi router first (please select 2.4G signal to connect, it doesn't support 5G frequency) Press and hold the button for 5 seconds then the LED blinks, Open "Smart Life" APP, Click "+" at the top right corner and select "Add Device". then follow the in-app instructions to connect the device to your network.


Pairing for Non-Wi-Fi(Bluetooth/Zigbee etc.) device

 The gateway needs to be added first (please refer the manual of gateway to add it). Press and hold the button for 5 seconds then the LED blinks, enter gateway homepage and click "Search new device" or "Add Devices" and follow the in-app instructions to connect the device to your gateway.

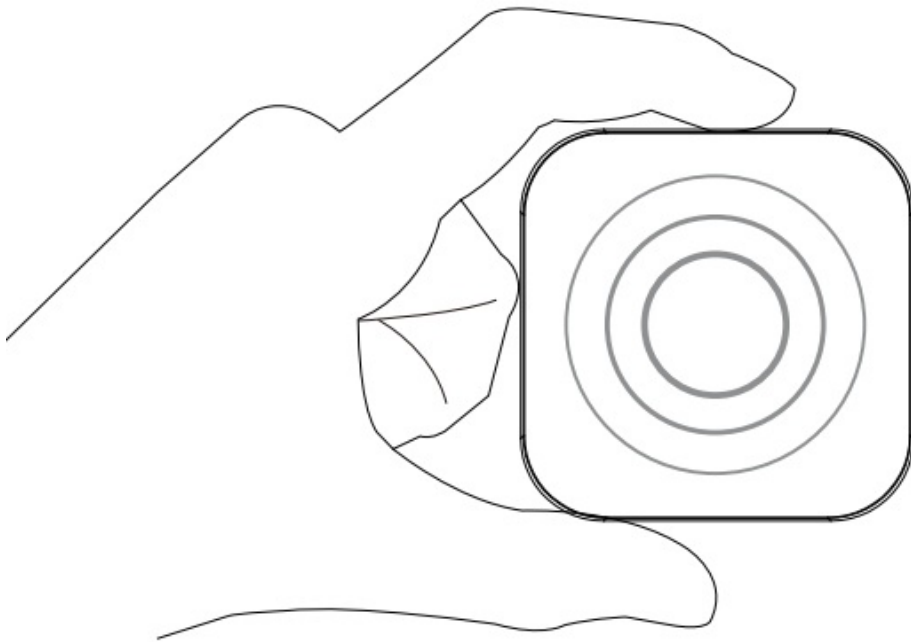


Device Installation

 Install the device at the place where you want the detection range is 120 degree and the detection distance is 6 meters. refer as below.

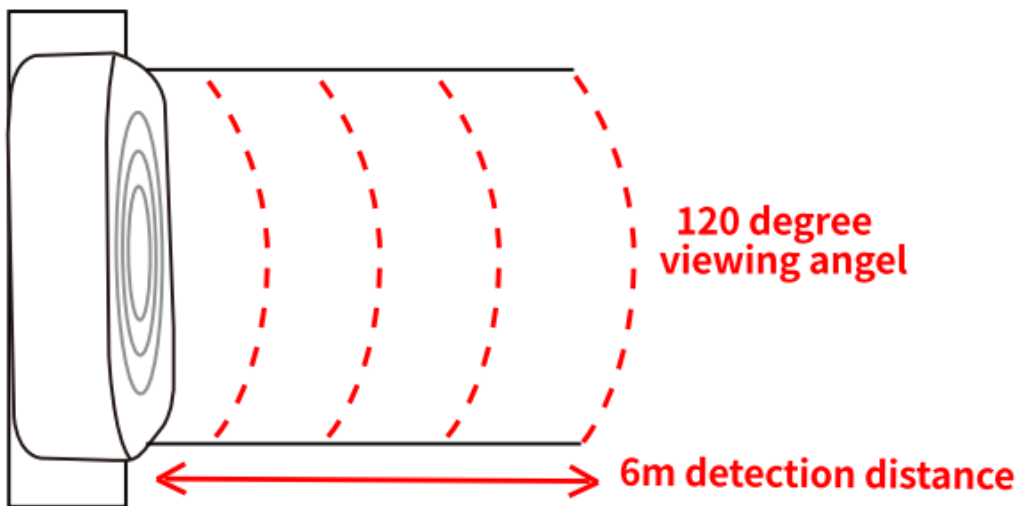


Instruction for app settings

 At the upper right corner of home page, there is a switch to turn the sensor on/off

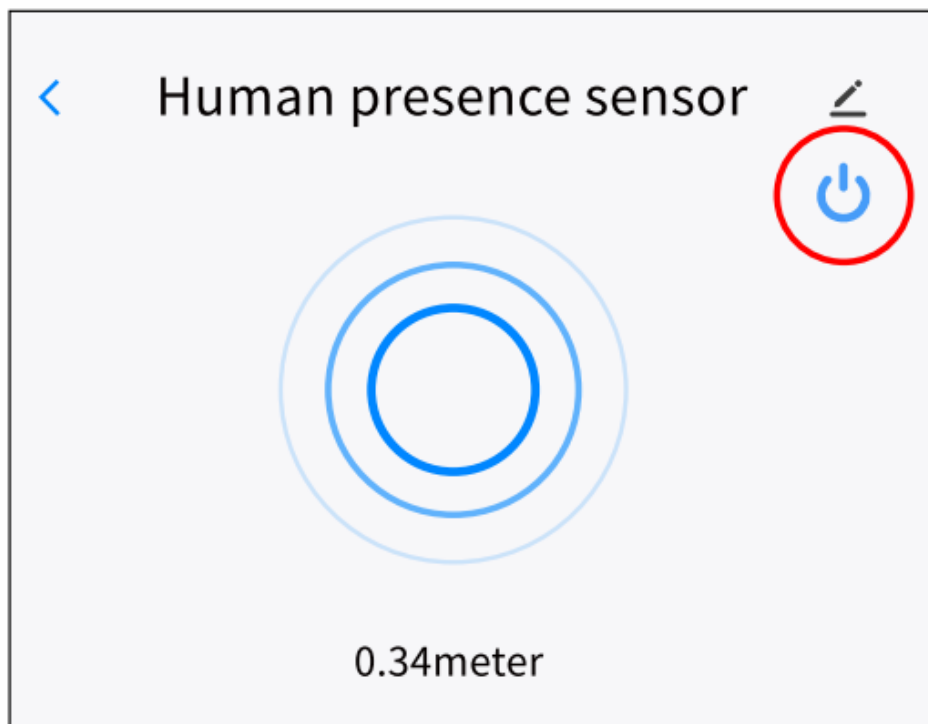


Click “Setting” at the device panel to enter the device setting page. There are some options for adjusting the device, refer to below:

 Detected Range

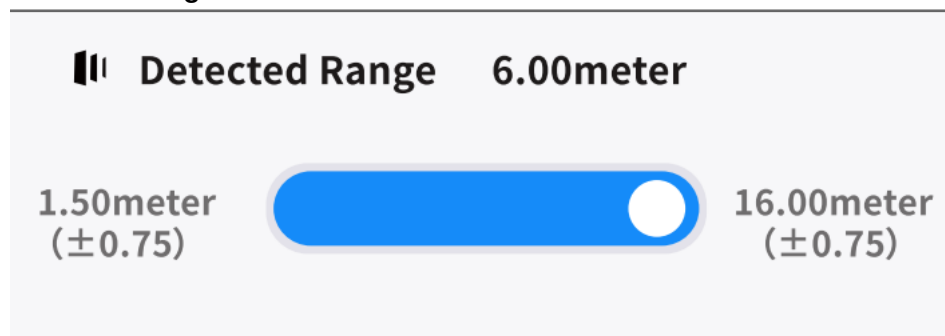


It can be adjusted from 1.5-6 meters (the tolerance is 0.75 meters)

 Sensitivity adjustment

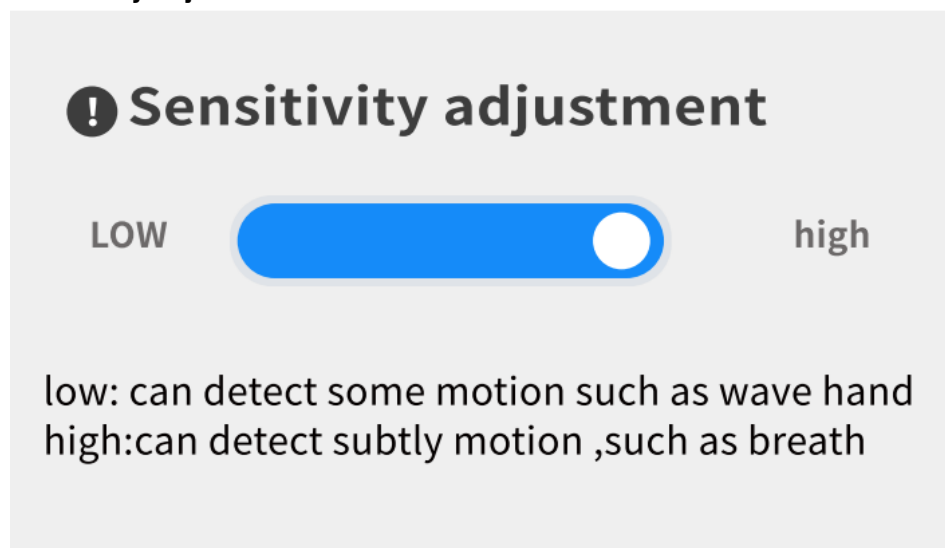

Tips: If the detected object is in a range of 3 meters, even a low sensitivity had been set, the micromovement also can be detected.

Hold Time

	Hold Time		04
		0 M	05s
		1	06

If it doesn't detect anything. It can be set a time that how long will show nobody

Power LED

	Power LED	<input checked="" type="checkbox"/>
---	------------------	-------------------------------------

Enable/Disable the power indicator

Presence Alarm

Presence Alarm	<input checked="" type="checkbox"/>
-----------------------	-------------------------------------

Enable/Disable the presence alarm

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.


This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1)

This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Documents / Resources

	Global Sources SWR07 Human Presence Sensor [pdf] User Guide SWR07 Human Presence Sensor, SWR07, Human Presence Sensor, Presence Sensor, Sensor
---	---

References

- [User Manual](#)