



Home » global sources » Global Sources V35AX Dash Cam User Manual 📆

Contents [hide]

- 1 Global Sources V35AX Dash Cam
- 2 Product Usage Instructions
- 3 Product Specifications
- 4 Key function introduction
- 5 Installation guide
- 6 Packing list
- 7 Function introduction
- 8 Declaration
- 9 Frequently Asked Questions
- 10 Documents / Resources
 - 10.1 References



Global Sources V35AX Dash Cam



Product Usage Instructions

Power Button

- Function: Switch the machine on and turn off the display.
- To Switch On: Press and hold the Power button for 2 seconds.
- To Turn Off the Display, press the Power button in the power-on state.

This product uses a high-performance chip to provide high-definition video and seamless, dynamic videos.

Support 4K true ultra- high-definition video recording. Please read this manual carefully before use and keep itproperly. We hope this product can meet your needs and serve you for a long time!

Product Specifications

CPU	V35AX(ARM Cortex A7@720MHz)
Storage	256MB DDR3L
Display screen3.0-inch	IPS HD screen
Display resolution	854 x 480

	MINI USB 5V/2A power interface		
	CLASS10 TF card		
External port	3.5mm three-section digital		
	post-recording camera interface		
Speaker	8 ohm 1 watt mono round speaker		
	4015 standard omnidirectional		
Mic	microphone		
Features:			
Front camera	2G4P/F1.8 aperture/ 140° wide angle		
Front camera quality	4K (3840 x 2160)/2k/1080P		
Rear camera	AHD1080P/140° wide angle		
Rear camera quality	1080P (1920 x 1080)		
Rear camera wire	6 m / 236 inches		
TF card	Built-in class 10 TF card		
Photograph	support		
Video Format	JPG		
Photo resolution	12M/10M/8M/5M/3M		
Touch function	support		

Connect with mobile phone	Support the WiFi link
Reverse video	support
Loop recording	support
Night vision	Support
Video format	MP4
Storage compression	H.264
Battery Type	210mAh polymer lithium battery
Power cable	3.5 m / 138 inches
10 languages	English, French, Spanish,.etc
Gravity sensor	motion monitoring, lock video
Parking monitoring	abnormal monitoring, lock video
Delay shutdown	support
USB storage	support
Mute video recording	optional
Net weight	435g
Weight	500g
Size	150 x 110 x 100 mm
Working environment:	

Operating	
temperature	-20°C~65°C
Operating humidity	15-65%RH
Storage temperature	-30°C~80°C

Key function introduction

- 1. Power button
- 2. Up button
- 3. 0K button
- 4. Down button
- 5. Menu button
- 6. AV-in
- 7. USB-in
- 8. TF card slot
- 9. Reset button
- 10. Microphone



Power button

Function 1: switch machine

- In the power-off state, press and hold the [Power button] for 2 seconds to turn on the power of the machine, and the machine will start working automatically.
- In the power-on state, press and hold the [Power button] for 2 seconds. The machine will automatically save the video files and settings and shut down.
- Function 2: Turn off the display
- Press the [Power button] in the power-on state to turn off the display, and press it again to turn on the display.

Mode key

- Function 1: Mode function
- In standby mode, short-press the [Mode key] to switch between different modes (recording/photographing/playback).

Function 2: Menu function

In standby mode, short press the [Mode key] to enter the menu setting page, and the user can set some functions according to their own needs.

0K key

- Function 1: Start/stop video recording
- In video recording mode, short press the [Enter key] to start recording, short press the [Enter key] again to stop recording.
- Function 2: Photographing the key
- In the camera mode, short-press the [0K button] to take a photo.
- Function 3: File playback key
- In the file browsing mode, short-press the [confirmation key] to play the video.
- Function 4: Confirm key
- In the state of standby recording mode/photographing mode/playback mode, longpress the [Menu key] to enter the menu mode, short-press the [Up key/Down key] to browse, short short-press the [Enter
- key] to confirm

Down key

- Function 1: Page down
- It is the page down function in the menu settings and playback mode.
- Function 2: The microphone
- In the main interface, short-press the button to turn on/off the microphone.

Up key

- Function 1: page up
- It is the page up function in the menu settings and playback mode.
- Function 2: Switch WFI
- When not recording, long-press the up button to turn on/off WIFI
- Function 3: Lens switching function
- After the rear lens is connected, the dual camera will be displayed automatically. In video recording mode, short-press the [Up key] to switch between the front lens, picture-in-picture, and rear lens; in photo mode, short-press the [Up key] to switch between the front lens and the rear lens.
- Reset button [RESET]
- If the recorder crashes or accidentally operates incorrectly, please find a small stuck pin and press the reset button on the side of the fuselage, and the machine will restart normally.

Touch TP

In the case of not using keys to operate, you can click and touch TP instead of keys to perform a series of operations.

Video interface:

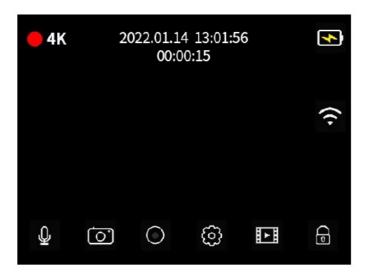


Photo interface:



- Function 1: Swipe the screen from right to left to switch front and rear windows
- Function 2: Swipe the screen from left to right to enter the playback interface

In the video recording state, click and touch the 'Settings' icon to enter the settings menu., The specific items are as follows:

Recording Menu			
1	Return		
	Video		
2	resolution	4K/2K/1080P	
3	Recording time	Minutes 1 /3 /5	

	License plate		
4	number	off/on	
5	Video audio	off/on	Turn on sync recording on or off
6	Time watermark	Open close	
7	Collision Sensitivity	Off/low/medium/high	After violent shaking or c ollision, the video is auto matically saved and cannot be overwritten
8	Parking mode	Close/open	Unattended surveillance video, video is automatic ally saved and cannot be overwritten
9	Automatic	Off/1min/3min/5min	
	shut-down		
10	Screen sleep	Off/1min/3min/5min	

	Light source		Select according to
11	frequency	50HZ/60HZ	current region
12	USB mode	Storage/charging	
13	Posterior mirror	Off/on	
	Speaker	Mute/low/medium/high	
14	volume	h	
15	Switch sound	Off/on	
16	Touch-tone	Off/on	
17	Language	10 languages	
		Adjust year/month/day/hour / minute/second and	
18	Date time	date and time format	
	Format storage	Cancel/Confirm/Quick	
19	card	Format	Format TF card
			Machine restore
20	Reset	Cancel confirm	default settings
		WiFi on/off and name	Connect local
21	Mobile Internet	password	hotspot

	Version	Machine software	
22	number	version information	


On the main interface of the machine, touch the 'photograph ' icon to enter the Photo mode, and touch the 'settings' icon again to enter the camera setting menu. The specific items are as follows:

Photo	Photo menu		
1	Return		
2	video size	12M/10M/8M/5M/3M	
	Continuous		
3	shooting	switch	
	video		
4	Quality	Premium/Standard/Economy	
5	Sharpness	Strong/Standard/Soft	
6	ISO	Auto/100/200/400	
7	Anti-shake	Open close	
	Version		
8	number	Machine software version information	
9	FPS	30 frames	
10	Aperture	F1.8	

(The driving recorder is an electronic product, and the product will be continuously updated and optimized. The picture is for reference only, please refer to the actual information displayed on the machine for details.)

Installation guide



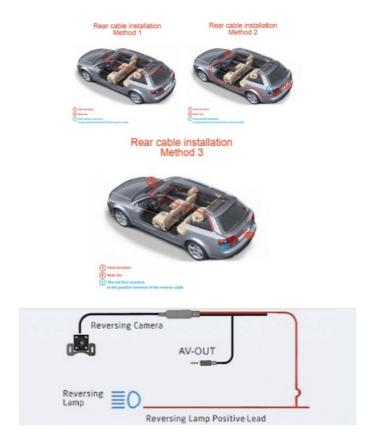

- 1. Turn off the car engine.
- Insert the TF card into the card slot of the recorder
 [Note] Please use a high-speed TF card (Class 1 C) or above.) With a capacity of not less than 16GB, the TF card supports a maximum of 128 GB.
- 3. Fix the recorder at a suitable position on the front windshield of the car.

- 4. Plug the car charger into the car cigarette lighter. Use the charging extension cable to connect the USB port of the recorder to the car charger.
- 5. [Note] When wiring, the charging extension cable can be laid along the edge of the car windshield-
- 6. The rear lens can be installed on the rear of the vehicle by sticking or screwing, and pay attention to the correct direction when installing-Wiring can be run along the rcx)f of the vehicle- After the installation is complete, connect the rear plug to the rear camera interface of the recorde.r
 - (**Note**) If you need to use the reverse view function, you need to connect the red wire on the rear lens cable to the positive pole of the vehicle's reverse light.
- 7. Adjust the lens position to ensure that the lens is at the best shooting angle.
- 8. Start the engine and check that the machine is installed correctly

[Note] When the machine is installed correctly, the system working indicator light is on; when the machine starts to enter the recording state, the recording indicator light flashes-

Packing list



Function introduction

1. Use the automatic recording function

Start the car engine, the recorder will automatically start and start the recording function, turn off the car engine, the recorder will automatically save the recorded content and shut down. The recordedvideos are saved in segments on the TF card. When the TF card is full, the recorder will ovemrite the earlier recorded videos. The recording time quantum can be set in the menu.

[Note] When the TF card is full, the recorder will overwrite the earlier recorded videos. The front normal folder is "front norm," and the back normal folder is "back norm" The front lock folder is 'frontEMR" and the back lock folder is "back EMR" The front photo folder is 'front photo' and the back photo folder is 'back photo"

2. Using the manual recording function

Press the recorder [power button], press the confirmation button to stan recording after the recorder is staffed, the recording dots will flash and the recording time will be displayed- If you need to shut down, pressand hold the [Power button] for 2 seconds, and the recorder will automatically save the record and shut down-

3. Collision sensing function

This machine has a built-in collision sensor (G-sensor)- If there is a serious vehicle collision, the recorder will lock the original video at the time of the accident and save it as a special video. At the same time, the red dot on the upper left corner of the screen will change to A small yellow dot, meaning that this video is a locked file. Locked videos will not be covered by loops-

[Note] The collision sensing function will only work when it is turned on.

[**Tips**] The collision sensor (G-sensor) supports sensitivity adjustment, and the setting can be changed in the settings menu according to actual needs.

4. **Date and time settings i**n standby mode, short-press the mode button to enter the menu setting interface, or click the setting button to select the date setting. Swipe up and down to adjust the date and time, then click key [0K] to save the set time.

(**Note**) To effectively record the date and time of obtaining evidence of driving safety accidents, please set the correct time before using the device.

5. One-button mute function

In the working state, click the screen recording button, the microphone on the screen will become a prohibition icon, indicating that the video recording function is turned off, and the recorder only records videos but not sounds- When the recording button is clicked again, themicrophone on the screen turns into a recording icon, indicating that the recording function is resumed-

[**Tips**] The settings will be saved automatically, and there is no need to set the mute function after turning on the phone again.

6. Shooting file playback

In the video recording and photo taking interface in the power-on state, press the menu button to enter the playback interface7. **Reversing visibility** First of all, the car charger must be connected to the recorder, and the red wire on the cable camera is connected to the reversing light- After connecting the car charger, the driving recorder will automatically stan the recording state, and if there is a reversing car in any state, the reversing video will be displayed. After the reverse view is over, the recorder will automatically return to the video recording mode.

8. Parking monitoring

When the parking monitoring function is turned on and the recorder is in the off state, if the car vibrates slightly (the trigger sensitivity can be set in the menu according to needs), then the recorder will automatically turn on and record for 30 seconds, and then turn off (This video is a locked video)

[Note] This function is highly sensitive, and frequent startups will consume a lot of power until the 11th hour is exhausted. This function is closed by default; it is recommended to turn it on with caution, and it needs to be manually turned off.

9. License plate number

Select the license plate number to enter the license plate setting interface, then press [0K] to set the license plate-Using [up key] or [down key] to select the character number, than select [0K] to jump to the next digit setting, after the last digit is set, press the [0K] button again to confirm the license plate number to be changed.

10. WIFI function

Clicking the wifi icon on the recording interface and photo interface to turn on/off the wifi can find the wifi option on the settings interface, and the detailed information of the wifi.

After connecting to the wifi from the mobile phone, the user can open the APP[RoadCam] to operate the machine from the mobile phone-

WiFi name: WiFi- camera-ac54- xxxx,

Default password: 12345678.

WiFi APP download link:



Note: The instructions and specifications may be changed due to system updates and other reasons. Please refer to the actual product!

Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used according to the instructions, may cause harmful interference to radio communications. However. There is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. NOTE: This device and its antenna(s) must not be co-located or operated in conjunction with any other antenna or transmitter.

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, this equipment should beinstalled and operated with minimum distance of 20cm the radiator your body. This deviceand its antenna(s) must not be co-located or operation in conjunction with any other antenna nr transmitter.

Declaration

The driving recorder is a recording device related to video and sound while the vehicle is driving, and it is only used as an auxiliary reference in the event of an accident.

Note: The machine must be in a normal working state before it can record video files. However, the video will be damaged or lost in the following situations;

- Pulling out the TF card during video recording will cause the last video file to be damaged or lost. An illegal power failure during video recording will cause damage or loss of the last video file.
- 2. During the recording process, the video file is damaged or lost due to the destructive collision of the machine.
- 3. The Storage card was loosened due to a large collision during the recording process, which would damage the video file or cause the video file to be lost.
- 4. The video recorded by the driving recorder is only for reference, and our company is not responsible for the corrupted file, data loss and other situations caused by the abnormal operation of the machine.

The driving recorder is a recording device related to video and sound while the vehicle is driving, and it is only used as an auxiliary reference in the event of an accident.

Frequently Asked Questions

• Q: How do I start recording a video?

A: In video recording mode, press the OK button to start recording. Press it again to stop recording.

• Q: How do I take a photo?

A: In camera mode, simply press the OK button to take a photo.

Frequently Asked Questions		
Symptoms	Cause and solution	
Can't record	Check if the Storage card is dam aged or the Storage card required by the device has not been replaced	
The rear lens does not display	Check whether the rear lens plug is loos e, whether the rear pull cable or the rear lens is loose damaged	
Not booting	The power cord is in poor contact or the factory-provided power cord is not used	
The captured video is not clear enough	Please wipe off the oil and dirt on the len s surface to keep the Lens surface clean	
The video file has missing seconds	Please use genuine high-speed C10 and above Storage cards	

The machine automatically shuts down dur ing normal video recording

Unplug the Storage card to restore factor y settings or reset and restart if the ambi ent temperature exceeds 70°C.

There will be a probability that it

	will automatically shut down
[Note] Proved by practice	Most of the problems are related to the Storage card, and a small part is related to The power cord

Documents / Resources



Global Sources V35AX Dash Cam [pdf] User Manual

F1, 2BB2Q-F1, 2BB2QF1, V35AX Dash Cam, V35AX, Dash Cam, Cam

References

- User Manual
 - 2BB2Q-F1, 2BB2QF1, CAM, Dash Cam, F1, global sources, V35AX, V35AX Dash
- global sources Cam

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name		
Email		
<u> </u>		
Website		
☐ Save my name, email, and website in this browser for the next time I com	nment.	
Post Comment		
Search:		
e.g. whirlpool wrf535swhz	Search	

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.