

globe 35471 WiFi LED Lamp Instructions

Home » globe » globe 35471 WiFi LED Lamp Instructions

Contents

- 1 globe 35471 WiFi LED Lamp Instructions
- **2 LIMITED WARRANTY**
- **3 FCC RULES**
- 4 FCC RESPONSIBLE PARTY/ FCC PARTIE

RESPONSABLE

- **5 Documents / Resources**
- **6 Related Posts**

Globe

globe 35471 WiFi LED Lamp Instructions



LIMITED WARRANTY

This bulb is warranted to last 2yearsfrom the date of purchase based on use of 3 hours per day. If it fails before that time, we will replace it. Send Globe Electric the bulb, proof of purchase and register receipt along with your complete name and address. See caution text for proper use. This warranty is void if this product is misused in any way. This replacement is the sole remedy available and liability for incidental or consequential damage is expressly excluded.

CAUTION:

- DO NOT USE WITH STANDARD DIMMER
- Only use the control provided with or specified by these instructions to control this lamp. This lamp will not operate properly when connected to a standard (incandescent) dimmer or dimming control.
- The bulb can be switched to different operating modes and is dimmable through the Globe Suite™ App.
- For use only in 120V/60HZ circuits. Risk of electrical shock.
- Do not open, no user-serviceable parts inside.
- This device is not intended for use with emergency exit fixtures or emergency exit lights, photocells and electronic timers.
- This device is intended for indoor use.
- Do not use where directly exposed to water.
- Do not use if the outer lamp envelope is damaged or broken. The minimum operating temperature is -20°C (-4°F).
- This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:
- This device may not cause harmful interference
- This device must accept any interference received, including interference that may cause undesired operation.
- Any changes or modifications not expressly approved by the manufacturer could void the user's authority to

operate the equipment.

• This Class B digital apparatus complies with CAN ICES-OOS(B).

WARNING:

- Changes or modifications to this unit not expressly approved by the party responsible for compliance could void
 the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.
- These limits are designed to provide reasonable protection against harmful interference in a residential installation.
- This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
- If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the
- following measures:
- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RULES

RF EXPOSURE

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device should be installed and operated with minimum distance 20cm between the radiator &your body.

USER MANUAL NOTICE FOR LICENCE-EXEMPT RADIO APPARATUS

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- this device may not cause interference,
- This device must accept any interference, including interference that may cause undesired operation of the device. CAN ICES-005 (B).

RADIATION EXPOSURE STATEMENT:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator &your body.

FCC RESPONSIBLE PARTY/ FCC PARTIE RESPONSABLE

Globe Electric/ Globe Electrique I-888-353-7388 7S307 Shoemaker Ave Norwalk, CA 906S0 <u>www.globe-electric.com</u>

Documents / Resources



globe 35471 WiFi LED Lamp [pdf] Instructions GB35471, 2AQUQGB35471, 35471 WiFi LED Lamp, 35471, WiFi LED Lamp

Manuals+, home

privacy