



globe GB34919 Smart Bulb with Wifi and BLE Function User Guide

[Home](#) » [globe](#) » globe GB34919 Smart Bulb with Wifi and BLE Function User Guide 

Contents

1 globe GB34919 Smart Bulb with Wifi and BLE Function

2 INTRODUCTION

2.1 AP mode

2.2 Scan mode

2.3 Setup voice assistance

3 Documents / Resources

4 Related Posts


The word "Globe" in a large, blue, sans-serif font, set against a white background with a light gray checkerboard pattern.

globe GB34919 Smart Bulb with Wifi and BLE Function



INTRODUCTION


Get started

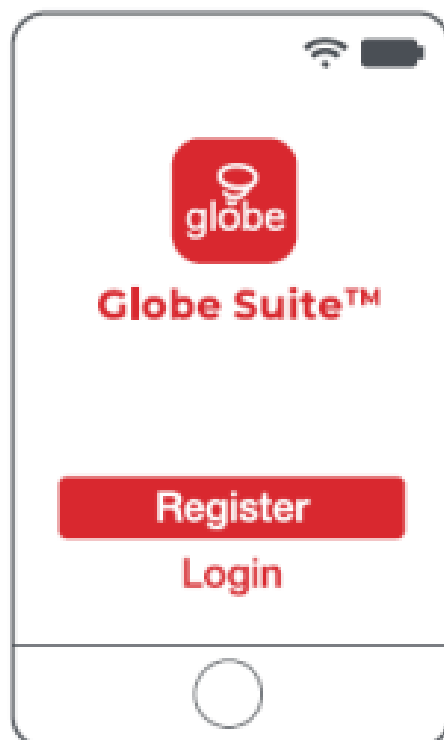

- Download the Globe Suite™ app from the App Store or Google Play to your mobile device.

- Launch the Globe Suite™ app.
- To register, enter your email address. Create a password, then login to the app.
- Login if you already have an account.

Verify your network

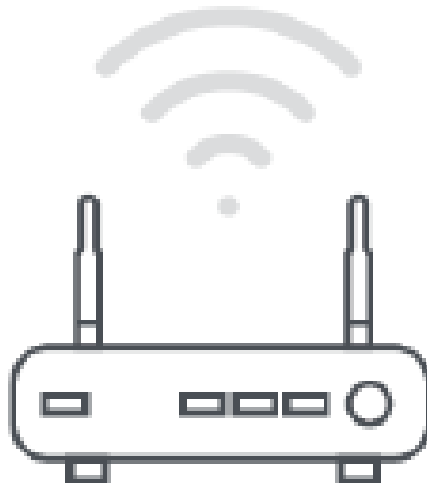

- Verify your network and ensure your mobile device is connected to a 2.4 GHz Wi-Fi channel.
- Consult your router documentation for detailed instructions on how to change wireless settings.
- Once your devices have been successfully paired, you can switch back to mixed mode or use a cellular data network to control your smart products.

Add a device

- Power on your device.
- Select the "+" symbol on the top right hand corner.
- Select your product type and follow the instructions within the app.
- If the connection fails, try using AP mode.

AP mode

- On the "add a device" page select AP mode on the top right-hand corner and follow the instructions within the app.
- If the connection fails, try using Scan mode.

Scan mode

- Select the "+" symbol on the top right hand corner.
- Select "Scan".
- Follow instructions within the app.
- You're good to go!



Instructions in the Globe Suite™ app Select “Profile”, select “Integration”, choose your voice assistant, and follow instructions

Did you know?

Most modern routers are dual band meaning they support both 2.4 GHz and 5 GHz channels. The most common wireless options are:

- Mixed: The router will broadcast both 2.4 GHz and 5 GHz simultaneously under the same SSID. The device will choose which to connect to based on multiple variables (congestion, distance to router etc.).
- 2.4 GHz: Broadcast only on this channel.
- 5 GHz: Broadcast only on this channel.
- Dual 2.4 and 5 GHz using Separate SSIDs: Router will broadcast both channels and the user manually decides which to connect to. www.globe-electric.com/smart,support@globe-electric.com, Check us out on YouTube ,scan me

Documents / Resources



[globe GB34919 Smart Bulb with Wifi and BLE Function](#) [pdf] User Guide
GB34919, 2AQUQGB34919, GB34919 Smart Bulb with Wifi and BLE Function, Smart Bulb with
Wifi and BLE Function, BLE Function, Wifi and BLE Function, Smart Bulb, Bulb