




Go Power GP-MPPT-PRO-40-60-R MPPT Pro Controller Remote User Guide

[Home](#) » [Go Power](#) » Go Power GP-MPPT-PRO-40-60-R MPPT Pro Controller Remote User Guide 

Contents


- [1 Go Power GP-MPPT-PRO-40-60-R MPPT Pro Controller Remote](#)
- [2 SOLAR CONTROLLER REMOTE](#)
- [3 MAIN MENU](#)
- [4 ICON DESCRIPTION](#)
- [5 INSTALLATION](#)
- [6 USAGE OF NAVIGATION KEYS](#)
- [7 DESCRIPTION](#)
- [8 PACKING LIST](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)



Go Power GP-MPPT-PRO-40-60-R MPPT Pro Controller Remote



SOLAR CONTROLLER REMOTE

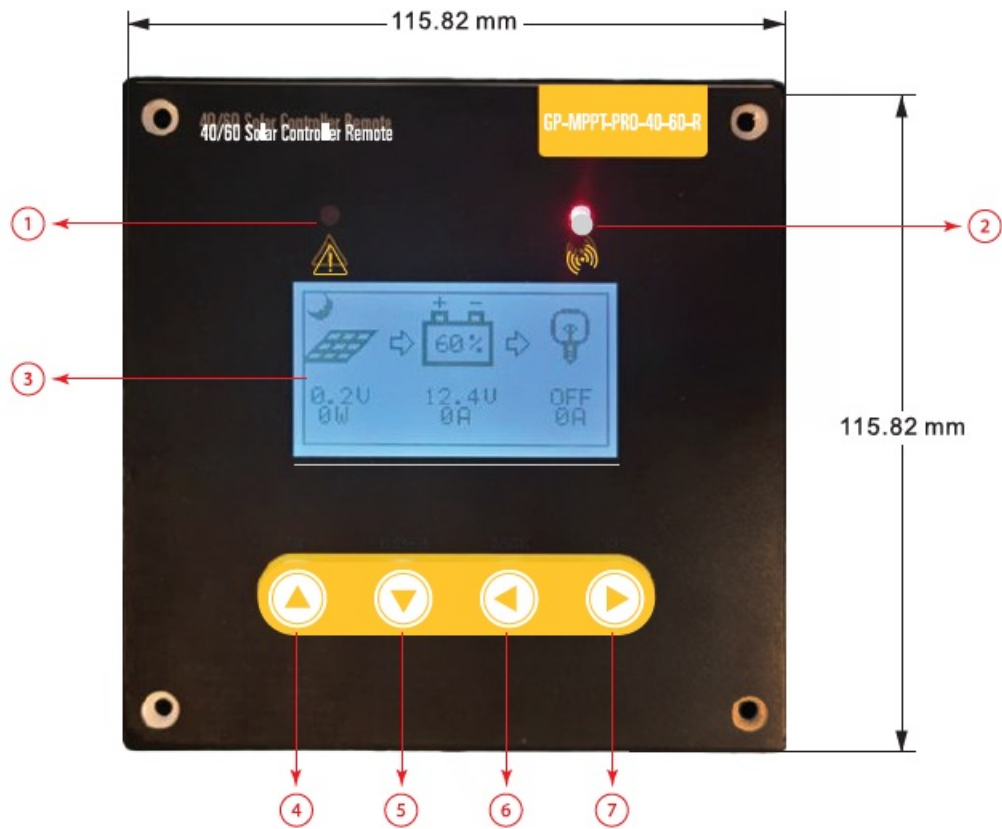


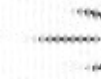

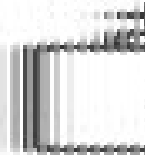
	Communication Fault Indicator	5	Down Button
2	Communication Connection Indicator	6	Escape Button
3	LCD Screen	7	OK Button
4	Up Button		




Charging status
Day or night indicating

Solar panel voltage

charging status

ICON DESCRIPTION


	Steady on	Nighttime	Related to charging
	Steady on	Daytime	
	Steady on	A dynamic arrow indicates charging is in process, while a static one indicates otherwise.	
	"0 to 100%"	Current battery capacity	Related to battery
	"0%" in slow	Battery over-discharged	

	flashing “100%” in quick flashing	Battery over-voltage	
	Steady on	A bulb shown as left and a dynamic arrow indicate the load is switched on.	Related to load
	Steady on	A bulb shown as left and a static arrow indicate the load is switched off.	
	Quick flashing	Overload or short-circuit protection	


TO SET BATTERY TYPE, VIEW HISTORICAL DATA, AND USE OTHER FUNCTIONS, REFER TO THE USER MANUAL FOR AT GPELECTRIC.COM/MPPT-PRO.

INSTALLATION

The GP-MPPT-PRO-40-60-R installation on a controller case or panel. External dimensions: 115.82 x 115.82mm
Installation dimensions: 96mm or 103.82x103.82mm Installation hole diameter: ϕ 3.5 (mm)

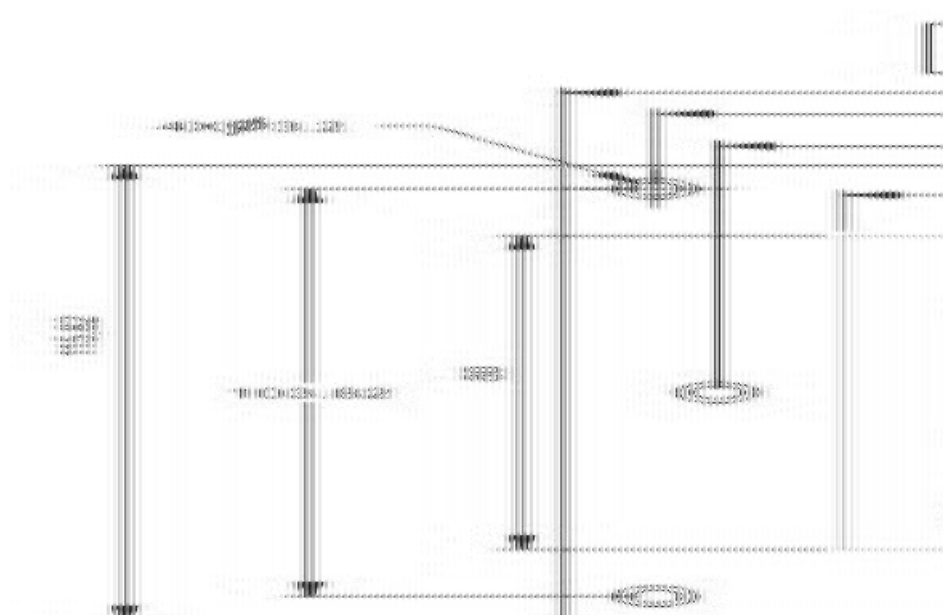

The GP-MPPT-PRO-40-60-R installation on a Wall. External dimensions: 118.5 x 118.5x48mm Installation dimensions: 50x50mm or 70x70mm Installation hole diameter: ϕ 5 (mm)

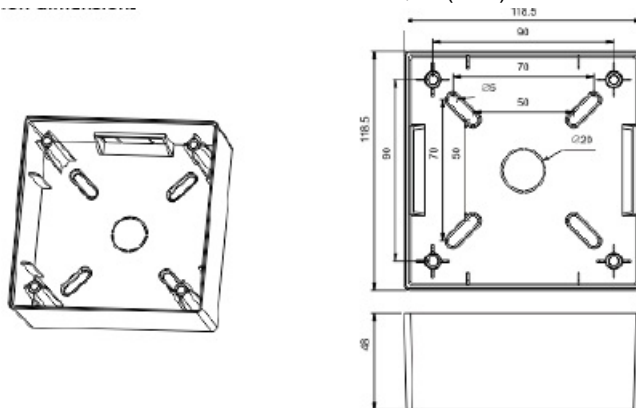

USAGE OF NAVIGATION KEYS

The product design features 4 keys which, from left to right, are: They equal to (“Up”, “Down”, “ESC”, “OK”)

KEY | OPERATION

DESCRIPTION

Up	Tap, press and hold	<p>1) When browsing a menu , tap the key for a page up,</p> <p>2) In parameter setting, tap the key to increase the value by a minimum unit;</p> <p>3) Press and hold the key for quick page -up movement or value increasing.</p>
Down	Tap, press and hold	<p>1) When browsing a menu , tap the key for a page down;</p> <p>2) In parameter setting, tap the key to decrease the value by a minimum unit;</p> <p>3) Press and hold the key for quick page-down movement or value decreasing.</p>
ESC	Tap	<p>1) When browsing a menu, tap the key to return to the previous level, until the main menu is reached;</p> <p>2) In the setting mode, a tap on this key can cancel the data modification in process and exit the setting mode.</p>


Ok	Tap	<p>1) In a menu which contains submenus, tap the key to enter into a submenu;</p> <p>2) In a menu with settable or adjustable parameters, tap the key to enter into or confirm parameter setting.</p>
	Press and hold	<p>If “manual mode” is selected as the load mode, a press-and-hold on the key to switch on/ off the load.</p> <p>If it's not in the manual mode, a press-and-hold will cause the display to skip to the load mode setting interface as a reminder.</p> <p>(Note; if no load is connected to the controller, this function and related load parameters will become inoperative.)</p>

PACKING LIST

ITEM	QTY	REMARKS
LCD Display Unit		
Data Cable (25ft)		6 cores, RJ12 at both ends
KA3 * 12 Black Countersunk Machine Screws	4	For installation on a panel
KA4 * 25mm Tapping Screws	4	For installation on a wall
M6 * 25mm Plastic Expansion Bolts	4	

Find tech tips, manuals and support at gpelectric.com

Documents / Resources

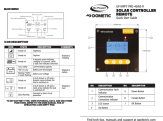

[Go Power GP-MPPT-PRO-40-60-R MPPT Pro Controller Remote](#) [pdf] User Guide
GP-MPPT-PRO-40-60-R, MPPT Pro Controller Remote