



Go Power GP-SB-PWM-30-BT 30 Amp Single Bank Bluetooth Enabled Solar Controller User Guide

Home » Go Power » Go Power GP-SB-PWM-30-BT 30 Amp Single Bank Bluetooth Enabled Solar Controller User Guide [™]

Contents

- 1 Go Power GP-SB-PWM-30-BT 30 Amp Single Bank Bluetooth Enabled Solar Controller
- 2 FAQs
- **3 SPECIFICATIONS**
- **4 OVERVIEW**
- **5 TOOLS**
- **6 INSTALLATION**
- **7 ACCESSING SETTINGS**
- **8 VIEWING CONTROLLER DISPLAY**
- 9 BLUETOOTH FEATURE
- 10 Documents / Resources
 - 10.1 References



Go Power GP-SB-PWM-30-BT 30 Amp Single Bank Bluetooth Enabled Solar Controller



FAQs

Q: What should I do if I encounter a reverse polarity issue?

A: If you encounter a reverse polarity issue, immediately disconnect the battery/solar connections and rectify the wiring before reconnecting.

Q: Can I extend the wire length beyond 25ft from the solar panels?

A: It is not recommended to extend the wire length beyond 25ft as it may affect the performance and efficiency of the system.

SPECIFICATIONS

SPECIFICATIONS			
Nominal System Voltage	12V		
Nominal Charge Current	30A		
Battery Voltage Range	6V — 16Vdc		
Max Battery Charge Current	37.5A		
Max Solar Power	600W		
Display Consumption	15mA		
Temp. Compensation	− 25mV/ºC		
Operating Temperature	– 40 to 60°C / – 40 to 140°F		
Humidity	99% N.C.		
Dimensions (H x W x D):	4.02 x 5.2 x 1.26 in; 102 x 132 x 32 mm		
Weight	260 g / 9.2 oz		
Maximum Wire Gauge:	#8 AWG/10 mm2		
Warranty	5 years		
Protection	Battery/Solar Reverse Polarity, Battery/Solar Short Circuit, Battery/Solar Reverse Current, Battery/Solar Over voltage up to 50V, Over temperature, Over Current		

WARNINGS:

A	Disconnect all power sources	Electricity can be very dangerous. Installation should be performed only by licensed electrician or qualified personnel.	
	Battery and wiring safety	Observe all safety precautions of the battery manufacturer when handling or working around batteries. When charging, batteries produce hydrogen gas, which is highly explosive.	
	Wiring connections Ensure all connections are tight and secure. Loose connections may generate sparks and heat. Be sure to check connections one week after installation to ensure they are still tight.		
•	Work safely	Wear protective eyewear and appropriate clothing during installation. Use extreme caution when working with electricity and when handling and working around batteries.	
<u> </u>	Observe correct polarity	Reverse polarity of the battery terminals and array will cause the controller to show warning LEDs. The controller will not function unless battery terminals are connected to a battery with proper polarity. Failure to correct these faults could damage the controller.	
	Do not exceed the GP-MPPT- PRO-40/60 max voltage ratings	The voltage rating of the solar system is the sum of the Open Circuit Voltage (Voc) of the solar PV panels in series. The resulting system Voc voltageincluding temperature effects is not to exceed 150V. If your solar system exceeds these ratings, contact your dealer for a suitable controller alternative. PV voltage increases in cold weather. Refer to section Error! Reference source not found.	

OVERVIEW



NO.	DESCRIPTION	NO.	DESCRIPTION
1	Scroll/Menu Selectors	4	Value Indicators
2	Icons Indicator	5	Value Units
3	Parameters Identifiers	6	Battery Type Indicator


TOOLS

- Flathead Screwdriver (for wire terminals)
- Philips Screwdriver (for mounting screws)

INSTALLATION

INSTALLATION STEPS:

Install your solar array, and cover with opaque material until all wiring is complete. Wiring should not exceed 25ft from the solar panels to the battery. Wire the GP-SB-PWM-30BT according to the wiring diagram below. Be sure to torque all screws based on the wire gauge after installation, as well as after 30 days.

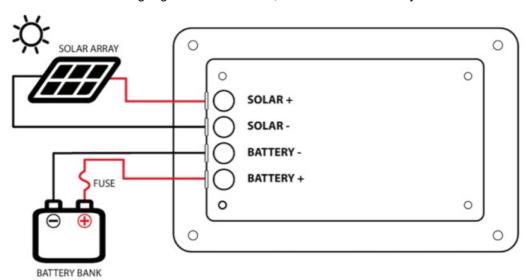

The GP-SB-PWM-30BT is designed to be mounted flush against a wall, out of the way but easily visible.


The GP-SB-PWM-30BT should be:

- Mounted as close to the battery bank as possible
- · Mounted on a vertical surface to optimize cooling of the unit
- Indoors, protected from the weather

ACCESSING SETTINGS


The GP-SB-PWM-30BT includes an LCD of FSTN type with 4 mechanical buttons that act as navigation keys to control the display. The GP-SB-PWM-30BT settings can be accessed by entering menu number 2 as shown


below.

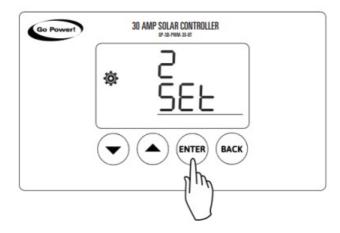

VIEWING CONTROLLER DISPLAY

Three menus are implemented in the display: status, settings, and history. At power-up, the controller turns on within the status menu. The different menus can then be accessed by pressing the Enter key as shown below.

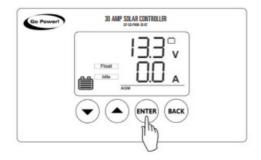

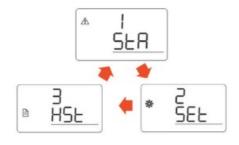

BLUETOOTH FEATURE

A Bluetooth® Low Energy module is integrated into the 30A model only. For details on the data that can be accessible/managed via Bluetooth®, please refer to the GP-SB-PWM-10/30BT User Manual.

MORE INFO

Scan for full manual



Documents / Resources



Go Power GP-SB-PWM-30-BT 30 Amp Single Bank Bluetooth Enabled Solar Controller [pd

f] User Guide

GP-SB-PWM-30-BT 30 Amp Single Bank Bluetooth Enabled Solar Controller, GP-SB-PWM-30-BT, 30 Amp Single Bank Bluetooth Enabled Solar Controller, Bank Bluetooth Enabled Solar Controller, Bluetooth Enabled Solar Controller, Enabled Solar Controller, Controller

References

- Complete Mobile Power Solutions | Solar, Batteries & Inverters | Go Power
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.