




## Godox FV150 High Speed Sync Flash LED Light Instruction Manual

[Home](#) » [Godox](#) » Godox FV150 High Speed Sync Flash LED Light Instruction Manual 

Godox FV150 High Speed Sync Flash LED Light Instruction Manual



## Contents

### 1 IMPORTANT SAFETY INSTRUCTIONS

### 2 Foreword

#### 2.1 Main Features

### 3 Body

### 4 LCD Panel

#### 4.1 Included Items

#### 4.2 Separately Sold Accessories

### 5 Power Connection

### 6 Operation

#### 6.1 Flash Setting

#### 6.2 Flash Mode

### 7 Technical Data

### 8 FCC Statement

### 9 Warranty

### 10 Documents / Resources

#### 10.1 References

### 11 Related Posts

## IMPORTANT SAFETY INSTRUCTIONS

**When using your photographic equipment, basic safety precautions should always be followed, including the following:**

1. Read and understand all instructions before using.
2. Close supervision is necessary when any appliance is used by or near children. Do not leave appliance unattended while in use.
3. Care must be taken as burns can occur from touching hot parts.
4. The appliance switch is provided with the symbols 0 indicating off and 1 indicating on.  
The symbols and may be used for this purpose.
5. Do not operate appliance with a damaged cord or if the appliance has been dropped or damaged – until it has been examined by a qualified serviceman.
6. Position the cord so that it will not be tripped over, pulled, or contact hot surfaces.
7. If an extension cord is necessary, a cord with a current rating at least equal to that of the appliance should be used. Cords rated for less amperage than the appliance may overheat.
8. Always unplug appliance from electrical outlet before cleaning and servicing and when not in use. Never yank cord to pull plug from outlet. Grasp plug and pull to disconnect.
9. Let appliance cool completely before putting away.  
Loop cord loosely around appliance when storing.
10. To reduce the risk of electric shock, do not immerse this appliance in water or other liquids.
11. To reduce the risk of electric shock, do not disassemble this appliance, but take it to a qualified serviceman when service or repair work is required. Incorrect reassembly can cause electric shock when the appliance is used subsequently.
12. The use of an accessory attachment not recommended by the manufacturer may cause a risk of fire, electric shock, or injury to persons.
13. Connect this appliance to a grounded outlet.
14. Disconnect this unit from its source of supply before replacing the projection lamp.

## SAVE THESE INSTRUCTIONS

### Foreword

#### Thank you for purchasing this Godox Product!

Flash Video Light FV series add flash functions based on the traditional LED light. FV series can be served as a flash, as well as an LED light. With strong power, abundant functions and 8 special effects modes, it can achieve creative shooting easily.

#### Main Features

 
 
- Can both serve as a flash and an LED light.
- The light brightness of the flash is four times of LED light's, which increases the freezing ability of instantaneous action.
- Supports 1/8000s high-speed sync function when being used as flash.
- Over 10 continuous flashes per second and 8 continuous flashes per second in highspeed sync mode in 1/2 power output.
- Built-in Godox 2.4G wireless X system, compatible with cameras of multiple brands.
- With stable light source and 0% to 100% precise light adjustment when being used as LED light.
- With 8 FX special effects mode to simulate various of shooting scene.
- With 16 groups and 32 channels wireless control.
- With U-type bracket to adjust different angles easily.
- Bowens-mount enables to install various of accessories.
- Clear LCD display.
- Excellent heat dissipation.

#### Warning

- Always keep this product dry. Do not use in rain or in damp conditions.
- Do not disassemble. Should repairs become necessary, this product must be sent to an authorized maintenance center.
- Keep out of reach of children.
- As this product do not have waterproof function, please take measures of waterproof in rainy or damp environment.
- Do not use the flash unit in the presence of flammable gases, chemicals and other similar materials. In certain circumstance, these materials may be sensitive to the strong light emitting from this flash unit and fire or electromagnetic interference may result.
- The equipment shall connect to a socket-outlet with earthing connection.
- The luminaire is intended for professional photography use only.


**CAUTION:** Hot parts! When the product is always on and flickering, please do not touch the high temperature part of the LED head. When replacing product accessories, please turn off the LED light and perform a cold cut.

#### Body

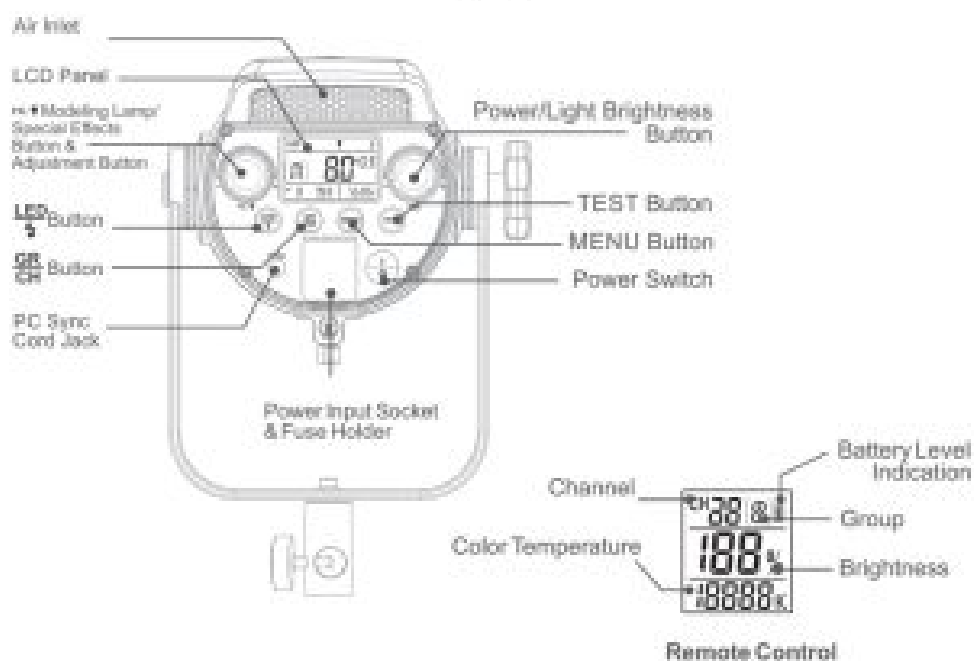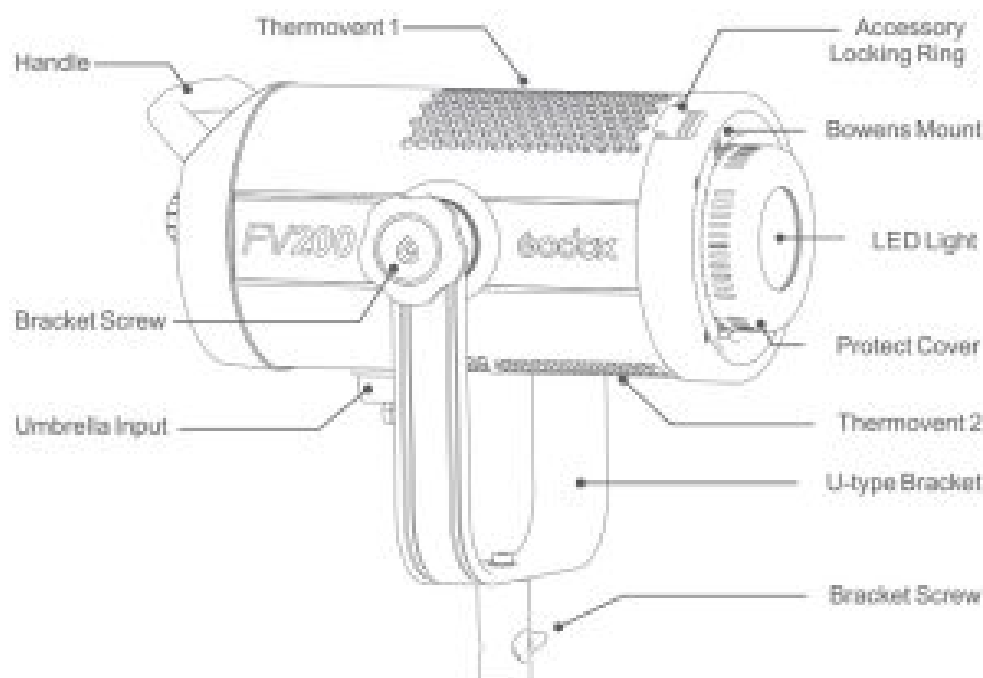

## LCD Panel
 
## LCD Panel

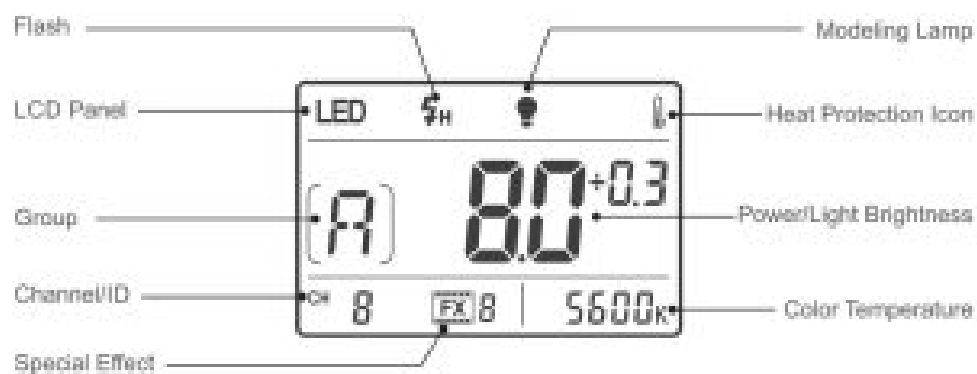

## Included Items

- Flash video light \*1



- Reflector for Bowens mount LED light \*1



- Lamp cover \*1



- Power cord \*1



### Separately Sold Accessories

The product can be used in combination with the following accessories sold separately, so as to achieve best photography effects: RC-A6, XPro, X2 or XT32 remote control, Power Inverter, Softbox, Photographic Umbrella, Light Stand, Barndoor, Snoot, etc.



### Power Connection

 
Use the power cord to connect the flash to an AC power source and turn on the power switch.

### Operation


## Flash Setting

This button can be pressed to switch LED mode or flash mode. Short press the button and LED will be displayed, which means the light can be used as an LED. When is displayed, the light can be used as a flash.

- LED MODE

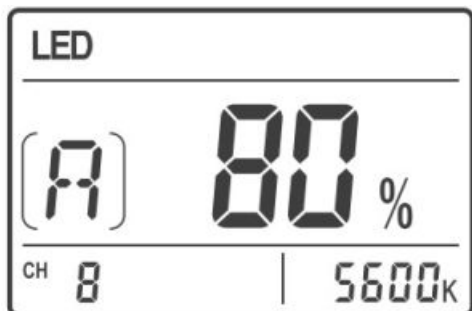


- FLASH MODE

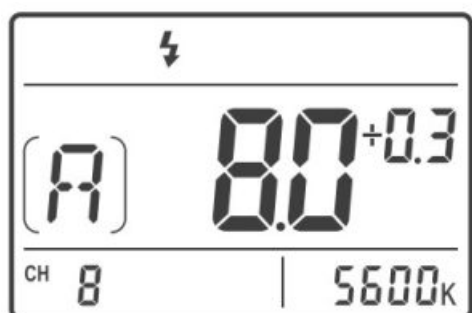 


## Power Adjustment

 In flash mode, the flash power can be adjusted by light brightness adjustment button from 1/16 to 1/1 or 6.0 to 10. And the power output will be clearly displayed on the LCD Panel. "OF" on the display indicates that the flash triggering function is turned off. Press the Test button to discharge power when the flash output is adjusted from high to low.

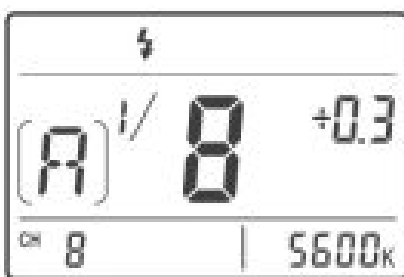

## Light Brightness Adjustment

 In LED mode, the light brightness of LED light can be adjusted by light brightness adjustment button from 0% to 100%. And the light brightness will be clearly displayed on the LCD Panel.

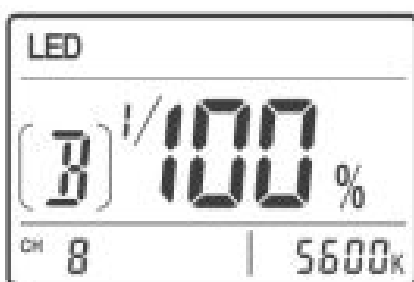

### Test Button

To fire the flash without taking a picture, press the test button. It can also help adjust the flash output and light brightness when combined with the light brightness adjustment button. Hold down the light brightness and turn on the light, the version will be displayed on the LCD panel and this operation can also be used to restore factory setting.



### MENU Button

Press the Menu button to enter custom setting area

### Custom Function Setting

Custom Function Signs	Functions	Setting Signs	Settings & Descriptions	Restrictions
F1	Wireless ID	OF	Off ID	No
		01~ 99	Choose any figure from 01~99	
F2	Power output display mode	1/P	Display power in the form of fractions	Flash mode
		P.P	Display power in the form of fraction decimal	

### GR/CH Button

 
Short press the GR/CH button can adjust the wireless groups. When the group icon on the LCD panel is blinking, turn the light brightness adjustment button to set the groups. Long press the GR/CH button to adjust the wireless channels. When the channel icon on the LCD panel is blinking, turn the light brightness adjustment button to set the channels.



### Modeling Lamp/Special Effect Button

**Modeling lamp ON/OFF:** In flash mode, press the modeling lamp/special effects button to turn on or off the

modeling lamp. When modeling lamp is on, turn the modeling lamp/special effects button to adjust the light brightness of modeling lamp from 5% to 100%.

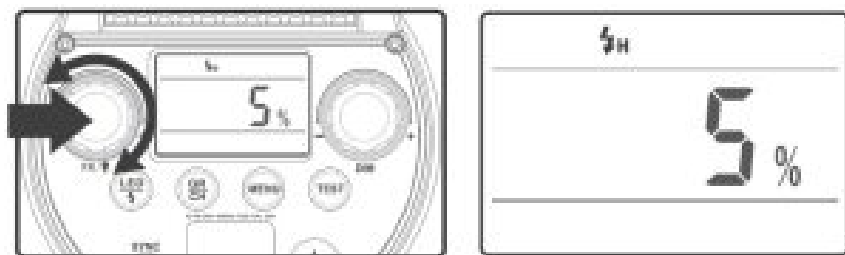

**Special Effects ON/OFF:** In LED mode, press the modeling lamp/special effects button, and the special effects will be on or off. Turn the modeling lamp/special effects button to choose from the eight special modes.



## Flash Mode

### 2.4G Wireless control

In flash mode, FV series has 2.4G wireless receiving functions.

 
Purchase Godox X series flash trigger e.g. X1, X2, XPro series and XT 32 flash trigger to wirelessly control FV series' power, modeling lamp's on/off and triggering.



### Sync Triggering

The sync cord jack is a  $\Phi 3.5\text{mm}$  plug. Insert a trigger plug here and the flash will be fired synchronously with the camera shutter.



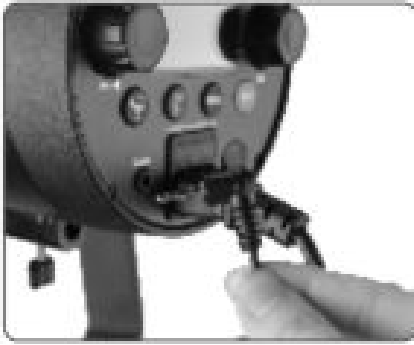

## Wireless Control in LED Mode

With 2.4G wireless system, FV series have remote grouping and control function. Up to 16 groups of LED lights can be controlled. 32 channels and 100 wireless IDs are available with strong anti-interference capability. Please set the channels and groups of LED light to the same as those of RC-A6 remote control before usage.

### Adjusting Channel/Group with the Remote Control

- Press the CH/GR button and the group icon blinks. Press the“-”“+”button to choose a group (A to F, 0 to 9).
- Press the CH/GR button twice and the channel icon blinks. Press the“-”“+”button to choose a channel (1 to 32).

### Adjusting ID with the Remote Control

- Double click the CH/GR button and press the“-”“+”button to choose ID from OFF or 0 to 99.

### Adjusting Light Brightness with the Remote Control

- Press the“-”“+”button to adjust the light brightness.

### Adjusting Color Temperature with the Remote Control

- Press the SET button of the remote control and the color temperature icon blinks. Press the“-”“+”button to adjust the color temperature.
- Remote control reset: press down “-” and “+” button simultaneously to reset.

**Note:** The wireless signal can be received only when the controller of LED light is powered on.

## LED Special Effects Mode

In LED mode, 8 FX special effects mode can be set to simulate various of shooting scene and achieve creative shooting.

Display	FX1	FX2	FX3	FX4	FX5	FX6	FX7	Fx8
Scene	Flash1	Flash2	Flash3	Storm1	Storm2	Storm3	TV	Broken bulb

## Setting color temperature range

The factory setting of remote control's color temperature range is 2500-10000K.

In order to use remote control conveniently, color temperature range settings are added: when the remote control is off, hold down the SET button and turn it on to enter color temperature adjusting interface. Press CH/GR button to switch the lowest and highest color temperature value and press “-” or “+” button to change the value. Press the SET button to confirm it.

### **The Reason & Solution of Not Triggering in Godox 2.4G Wireless**

1. Disturbed by the 2.4G signal in outer environment (e.g. wireless base station, 2.4G wifi router, Bluetooth, etc.)
  - To adjust the channel CH setting on the flash trigger (add 10+ channels) and use the channel which is not disturbed. Or turn off the other 2.4G equipment in working.
2. Please make sure that whether the flash has finished its recycle or caught up with the continuous shooting speed or not(the flash ready indicator is lighten) and the flash is not under the state of over-heat protection or other abnormal situation.
  - Please downgrade the flash power output. If the flash is in TTL mode, please try to change it to M mode(a preflash is needed in TTL mode).
3. Whether the distance between the flash trigger and the flash is too close or not
  - Please turn on the “close distance wireless mode” on the flash trigger ( 0.5m): X1, X2 and XPro series: press the test button and hold on, then turning it on until the flash ready indicator blinks for 2 times. XPro series: Set the C.Fn-DIST to 0-30m.
4. Whether the flash trigger and the receiver end equipment are in the low battery states or not
  - Please replace the battery(the flash trigger is recommended to use 1.5V disposable alkaline battery)

### **Technical Data**

Flash Video Light	FV150	FV200
Power Supply	AC100V-240V (50/60Hz)	
Power	150W	200W
Color Temperature	5600±200K	
100% Light Brightness(LUX,1M)	≈58000	≈74000
CRI ≈	96	
TLCI ≈	97	
Light Brightness Range	10%-100%	
Operation Temperature	-10°C ~ 40°C	
Power Output	1/16-1/1 or 6.0-10.0	
Channel	32	
Group	16(A, B, C, D, E, F, 0-9)	
Dimension (not included a standard reflector)	34x20x16cm	36.7x20x16cm
Net Weight	3.13Kg	3.24Kg

## FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safekeep it. Thank you!

Product Information	Model	Product Code Number
Customer Information	Name	Contact Number
	Address	
Seller Information	Name	
	Contact Number	
	Address	
	Date of Sale	
<b>Note:</b>		

**Note:** This form shall be sealed by the seller.

## Applicable Products

The document applies to the products listed on the Product Maintenance information (see below for further information). Other products or accessories (e.g. promotional items, giveaways and additional accessories attached, etc.) are not included in this warranty scope.

## Warranty Period

The warranty period of products and accessories is implemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day (purchase date) when the product is bought for the first time, and the purchase date is considered as the date registered on the warranty card when buying the product.

## How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

## Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases: . The product or accessory has expired its warranty period; . Breakage or damage caused by inappropriate usage, maintenance or

preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc; . Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment; . The original identifying information of product or accessory is modified, alternated, or removed; . No valid warranty card; . Breakage or damage caused by using illegally authorized, nonstandard or non-public released software; . Breakage or damage caused by forc majeure or accident; . Breakage or damage that could not be attributed to the product itself. Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.


### Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following Product Maintenance Information:

Product Type	Name	Maintenance Period(month)	Warranty Service Type
Parts	Circuit Board	12	Customer sends the product to designated site
	Battery	3	Customer sends the product to designated site
	Electrical parts e.g.battery charger, power cord, sync cable, etc .	12	Customer sends the product to designated site
Other Items	Flash tube, modeling lamp, lamp body, lamp cover, lockingdevice, package, etc.	No	Without warranty

Godox After-sale Service **Call 0755-29609320-8062**

### Documents / Resources

	<a href="#">Godox FV150 High Speed Sync Flash LED Light</a> [pdf] Instruction Manual FV150, FV200, High Speed Sync Flash LED Light
-------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------

### References

-  [GODOX Photo Equipment Co.,Ltd.](#)

Manuals+.