



Godox LC30D Litemons Tabletop LED Light Instruction Manual

[Home](#) » [Godox](#) » Godox LC30D Litemons Tabletop LED Light Instruction Manual 

Contents

- [1 Godox LC30D Litemons Tabletop LED Light](#)
- [2 Safety Instructions and Attentions](#)
- [3 Foreword](#)
- [4 Main Features](#)
- [5 Name of Parts](#)
- [6 Included Items](#)
- [7 Optional Accessories](#)
- [8 Operating Instruction](#)
- [9 Technical Data](#)
- [10 FCC Statement](#)
- [11 Warranty](#)
- [12 Documents / Resources](#)
- [13 Related Posts](#)



Godox LC30D Litemons Tabletop LED Light



Safety Instructions and Attentions

First of all, as the most basic principle: This product is a professional lighting set equipment and should be used by professional lighting engineers or under the guidance of professionals. Basic safety attentions must always be followed during use, as follows:

1. Before use, please read and understand these instructions and attentions.
2. Professional lighting is prohibited for children. When children are near, parents or accompanying persons must supervise closely to prevent children from personal injury due to collision with lamps or private use of lamps.
3. This lighting product is not ordinary lighting product and cannot be used for general lighting. Anyone who has suffered eye damage or has sensitive eyes should avoid using this product.
4. When the lamp is on, it must be used with care. Do not touch high-temperature parts, such as LED lamp beads, to avoid burns.
5. When the lamp is on, it is forbidden to look directly at the lamp beads under any circumstances. Strong light should be used under the guidance of professional lighting engineers. Avoid prolonged exposure to strong light under any circumstances. If eye discomfort, please turn off the lamp in time, suspend use, and see a doctor immediately.
6. If the lamp bead is damaged or deformed by heat, stop using this equipment, and contact the manufacturer, service agent or qualified maintenance personnel to replace the lamp bead in time to avoid accidents.
7. This product is only suitable for use in -10°C to 40°C operating environment and normal humidity environment.
8. Do not use damaged equipment or accessories, and wait for professional maintenance personnel to check and repair to confirm being normal before use.
9. During using, if the casing of this product is broken due to being dropped, squeezed or subjected to strong impact, please do not use it, so as to avoid electric shock injury due to contact with internal electronic components.
10. If an extension cord is required, please use an extension cord with a current rating greater than or equal to that of the equipment. If an extension cord is rated less than the equipment, overheating may result.
11. Some products have long power cords, please place the power cords properly and keep them in a safe place. Avoid contacting the power cord with overheating surfaces, avoid improper placement that could cause pulling damage, or trip on-site personnel. Please use the certified power cord from the original manufacturer. If the product is damaged by using a non-certified power cord, it will not be repaired by our factory.

12. Be sure to unplug equipment from the power outlet before cleaning and repairing. When not in use, do not pull the power cord to unplug the equipment. For normal power-off, please hold both ends of the plug of the equipment with your hands and pull the plug out of power outlet. This equipment needs to be connected to a grounded outlet.
13. This equipment is not waterproof, please keep it dry and do not immerse it in water or other liquids. The equipment should be installed in a dry and ventilated place, and avoid using it in rainy, humid, dusty or overheated environments. Do not place any objects on the lamp or let liquid flow into the lamp to avoid accidents.
14. Do not disassemble the product without permission. If the product fails, it must be checked and repaired by authorized maintenance personnel.
15. Before storing, make sure that the equipment has cooled down completely. For storage, unplug the power cord from the equipment. The equipment should be placed in the carrying case or in a ventilated dry place.
16. Do not place equipment near flammable and volatile solvents such as alcohol and gasoline.
17. Do not use accessories that are not recommended by our factory to avoid fire, electric shock or personal injury.
18. When cleaning, do not wipe it with a damp cloth, please use a dry cloth or a soft cloth to wipe the dirt of the equipment.
19. Please take off the protective cover before using.
20. This product complies with ROHS, CE, KC and FCC certification, please refer to the relevant national standards for use and operation.
21. The safety instructions are formulated according to the strict testing of the factory, and the design and specifications of the equipment are subject to change without prior notice. For latest product information, please check the GODOX website and view latest electronic instruction.
22. Some products have built-in lithium batteries. Please use specified chargers, and use them within a proper range of the specified voltage and temperature according to the correct operating instructions.
23. Some products are battery powered. Do not use any batteries, power sources or accessories not specified in the instructions for such products. Keep batteries and other accessories out of the reach of children and infants. In the instance that a child or infant swallows a battery or accessory, immediate emergency medical attention is required. If the battery leaks, becomes discolored, deformed, emits smoke, or emits an abnormal odor, remove it immediately. Be careful during removal to avoid burns. Continued use could result in fire, electric shock, or burns. Do not use any deformed or modified batteries. Do not disassemble or modify this product or battery. Do not heat or solder the battery. Keep the battery away from fire or water. Do not incorrectly insert the positive and negative ends of batteries, or mix old and new batteries or batteries of different types together.
24. one-year warranty period, accessories such as consumable batteries, adapters, power cords, etc. are not covered by this warranty.
25. If it is found that the equipment is repaired without authorization, the one-year warranty period will be cancelled and relevant fees will be charged for maintenance.
26. Machine failures caused by non-standard operation are not covered by the warranty.

Foreword

Thank you for purchasing Godox product! LC30D and LC30Bi are two new Litemons series LED lights. With compact structure, net weight of 299g and mountable light stand to make them handheld, they are preferential choice for mobile lighting. They can be collocated with optional Accessory Kit for ML Series Video Lights ML-AK which has detachable charging case and NP-F970 battery, and Godox Diffusion Dome through magnetic mount.

The super spotting effect and bright lighting output make them quite suitable for outdoor shooting, short film shooting, live streaming and short video lighting.

 
Main Features

- Compact and portable, flexible lightning;
- **LC30D**: preset 8 light effects and stable color temperature;
- **LC30Bi**: preset 11 light effects and adjustable color temperature from 3200K to 6500K;
- Scientific cooling system, CR1e95, TLC1e96;
- DC power supply or NP-F970 battery power supply (charging case is sold separately);

Warning


- When using your photographic equipment, basic safety precautions should always be followed, including the following:
- Read and understand all instructions before using.
- Close supervision is necessary when any appliance is used by or near children. Do not leave appliance unattended while in use.
- Care must be taken as burns can occur from touching hot parts.
- Do not operate appliance with a damaged cord or if the appliance has been dropped or damaged – until it has been examined by a qualified serviceman.
- Position the cord so that it will not be tripped over, pulled, or contact hot surfaces.
- If an extension cord is necessary, a cord with a current rating at least equal to that of the appliance should be used. Cords rated for less amperage than the appliance may overheat. & Always unplug appliance from electrical outlet before cleaning and servicing and when not in use. Never yank cord to pull plug from outlet. Grasp plug and pull to disconnect.
- This appliance is not waterproof device. To reduce the risk of electric shock, do not immerse this appliance in water or other liquids.
- Do not disassemble. Should repairs become necessary, this appliance must be sent to an authorized maintenance center. Incorrect maintenance behavior may cause electric shock when the appliance is subsequently used.
- When this appliance is working, please do not cover the thermovent, and please do not look directly at or touch the COB lamp beads under any circumstances.

Name of Parts

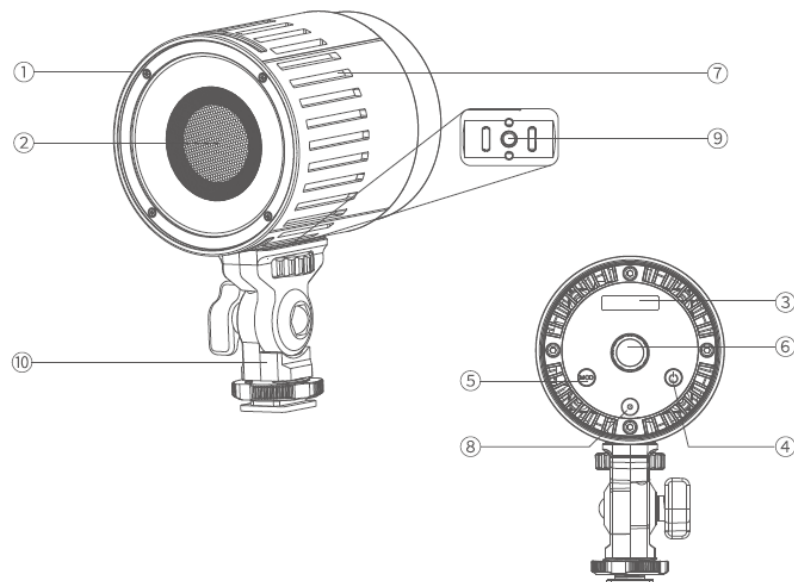

1. Light Body
2. Optical Lens
3. LCD Panel
4. Power Switch Button
5. MOD Button
6. Adjust Dial
7. Thermovent
8. DC Input Port
9. 1 / 4" Screw Hole
10. Adapter Holder AH-01

 Included Items

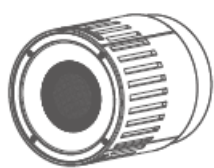

Light Body*1



Adapter Holder AH-01*1



Adapter*1

 


Power Cable*1




Instruction Manual*1

Optional Accessories

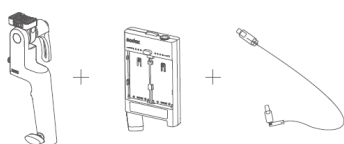

 Accessory Kit for ML Series Video Lights ML-AK*1

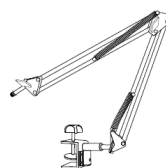

Cantilever Bracket*1



Collapsible Diffusion Dome*1

Operating Instruction

Connect to Power Supply

Connect the LED light to AC power supply through DC adapter, short press the power switch button to turn on or off.

Mode Switch: CCT Mode/FX Mode

1. **CCT Mode (LC30D/LC30Bi)** : The CCT mode is on the main interface. LC30D has a stable color temperature of 5600K, while LC30Bi needs to short press MOD button to make the arrow aiming at the CCT value then turn the adjust dial to adjust color temperature from 3200K to 6500K.
2. **Brightness Adjustment (LC30D)** : Turn the adjust dial on the main interface to adjust brightness from 0% to 100%, turn left to decrease while turn right to increase with 1 unit of increment.
3. **Brightness Adjustment (LC30Bi)** : Short press MOD button to make the arrow aiming at the brightness value then turn the adjust dial to adjust brightness from 0% to 100%, turn left to decrease while turn right to increase with 1 unit of increment.
4. **FX Mode (LC30D)** : Long press MOD button to enter FX mode, short press MOD button to make the arrow aiming at the FX icon then turn the adjust dial to switch among different light effects.

| Display | FX1 | FX2 | FX3 | FX4 | FX5 | FX6 | FX7 | FX8 |
|---------|---------|---------|---------|---------|---------|---------|-------------|-----|
| Scene | Flash 1 | Flash 2 | Flash 3 | Storm 1 | Storm 2 | Storm 3 | Broken Blub | TV |

5. **FX Mode (LC30Bi)** : Long press MOD button to enter FX mode, short press MOD button to make the arrow aiming at the FX icon then turn the adjust dial to switch among different light effects.

| Display | FX1 | FX2 | FX3 | FX4 | FX5 | FX6 | FX7 | FX8 | FX9 | FX10 | FX11 |
|---------|---------|---------|---------|---------|---------|---------|-------------|-----|--------|------|-----------|
| Scene | Flash 1 | Flash 2 | Flash 3 | Storm 1 | Storm 2 | Storm 3 | Broken Blub | TV | Candle | Fire | Fire work |

| LC30D | | | | |
|-------|------------------|-------|------|------|
| CTT | Illuminance unit | 0.5m | 1m | 2m |
| 5600K | lux | 35800 | 9600 | 2500 |
| | fc | 3300 | 900 | 230 |

| LC30Bi | | | | |
|--------|------------------|-------|------|------|
| CTT | Illuminance unit | 0.5m | 1m | 2m |
| 3200K | lux | 28200 | 6750 | 1830 |
| | fc | 2110 | 627 | 170 |
| 4300K | lux | 30100 | 8890 | 2420 |
| | fc | 2800 | 826 | 225 |
| 5600K | lux | 27300 | 8010 | 2190 |
| | fc | 2540 | 745 | 204 |
| 6500K | lux | 25200 | 7320 | 2010 |
| | fc | 2340 | 680 | 187 |

All the above tests are based on the condition of 100% brightness

Technical Data

| | | |
|---------------------------------|-------------|-------------|
| Model | LC30D | LC30Bi |
| Power Supply | DC 14V | DC 14V |
| Power | Max, 33W | Max, 38W |
| Color Temperature | 5600K | 3200K-6500K |
| FX type | 8 | 11 |
| Brightness Range | 0%-100% | |
| CRI ≈ | 95 | |
| TLCI ≈ | 96 | |
| Working Environment Temperature | -10°C~40°C | |
| Dimension | ≈76*76*92mm | ≈76*76*92mm |
| Net Weight | ≈299g | ≈299g |

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Declaration of Conformity:

GODOX Photo Equipment Co,Ltd. hereby declares that the This equipment are in compliance with the essential requirements and other relevant provisions of EU Directive 2014/35/EU, 2014/30/EU. They are allowed to be used in all EU member states. For more information of DoC, Please click this web link:

http://www.godox.com/D0C/Godox_LC30D_LC30BI_DOC.pdf.

Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safe-keep it. Thank you!

- Product Model
- Product Code Number Information
- Customer Name Contact Number

- Address
- Seller Name
- Information Contact Number
- Address
- Date of Sale
- Note

Note: This form shall be sealed by the seller.

Applicable Products

The document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g. promotional items, giveaways and additional accessories attached. etc.) are not included in this warranty scope.

Warranty Period

The warranty period of products and accessories is implemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day(purchase date) when the product is bought for the first time, And the purchase date is considered as the date registered on the warranty card when buying the product.

How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases: The product or accessory has expired its warranty period; Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc; Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment; The original identifying information of product or accessory is modified, alternated, or removed

No valid warranty card; ®· Breakage or damage caused by using illegally authorized, nonstandard or non-public released software; Breakage or damage caused by force majeure or accident; ®· Breakage or damage that could not be attributed to the product itself. Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.

Maintenance and Service Support Information


The warranty period and service types of products are implemented according to the following

Product Maintenance Information:

| Product Type | Name | Maintenance Period(mon th) | Warranty Service Ty pe |
|--------------|---|-------------------------------|------------------------------------|
| | Circuit Board | 12 | Customer sends |
| Parts | Battery | 12 | the product to design ated site |
| Other Items | Electrical parts e.g.battery charger, power cord, sync cable, etc Flash tube, modeling lamp, lamp body, lamp cover, locking device, package, etc | NO | Without warranty |

Godox After-sale Service Call 0755-29609320-8062

Documents / Resources

| | |
|---|---|
|  | Godox LC30D Litemons Tabletop LED Light [pdf] Instruction Manual LC30D Litemons Tabletop LED Light, LC30D, Litemons Tabletop LED Light, Tabletop LED Light, LED Light, Light |
|---|---|