

 


Godox RC-R9II Remote Control Instruction Manual

[Home](#) » [Godox](#) » Godox RC-R9II Remote Control Instruction Manual 




R9II Remote Control Instruction Manual

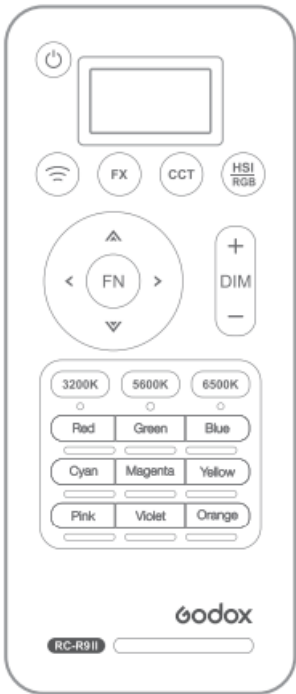

Contents

- [1 Names of Parts](#)
- [2 Remote Control Setting](#)
- [3 Light Brightness Adjustment:](#)
- [4 Technique Data](#)
- [5 FCC Statement](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

 Names of Parts

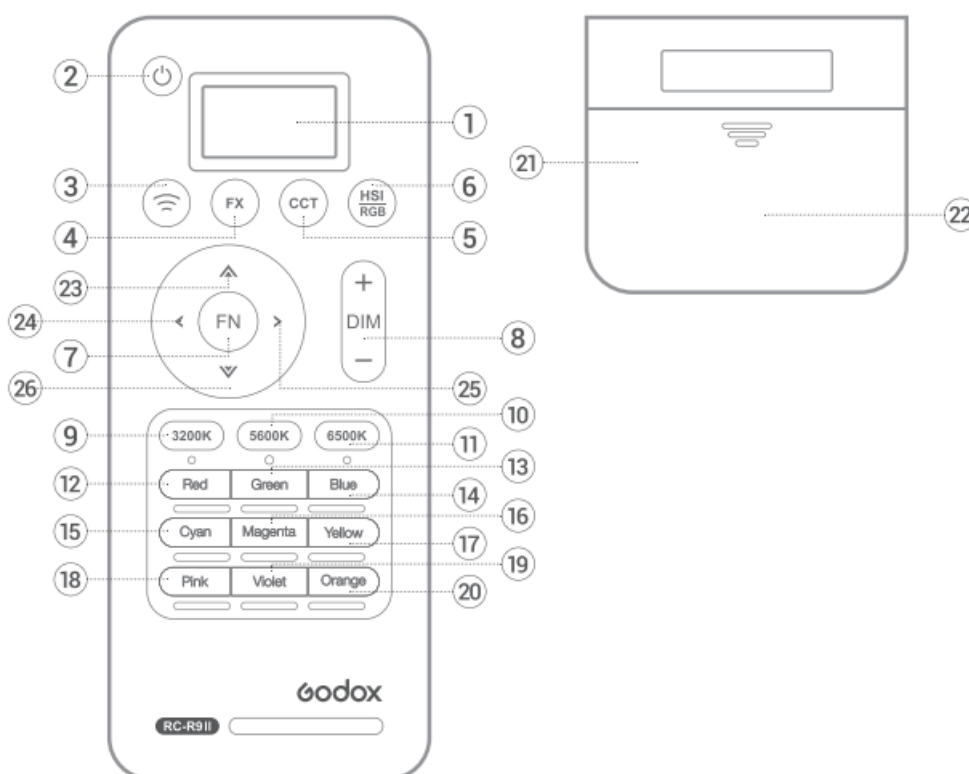


01. OLED Panel	14. Blue Button
02. Power Switch	15. Cyan Button
03. Wireless Setting Button	16. Magenta Button
04. FX Mode Button	17. Yellow Button
05. CCT Bicolor Mode Button	18. Pink Button
06. HSI Colorful Light Mode Button	19. Violet Button
07. FN Button	20. Orange Button
08. DIM Brightness Adjustment Button	21. Battery Compartment
09. 3200K Color Temperature Button	22. Battery Compartment Cover
10. 5600K Color Temperature Button	
11. 6500K Color Temperature Button	
12. Red Button	
13. Green Button	


Remote Control Setting

Short press the power switch button to power on or off the remote control.

 Remote Control Channel/Group/ID Adjustment

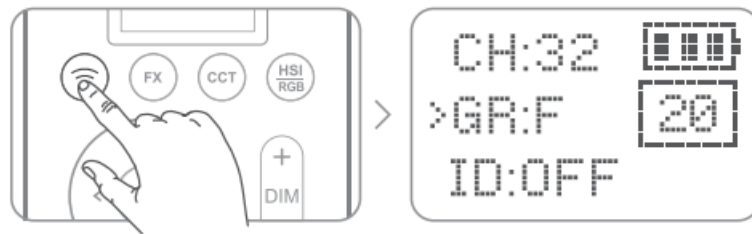

 
Press the wireless setting button to enter the channel/group/ID setting interface.

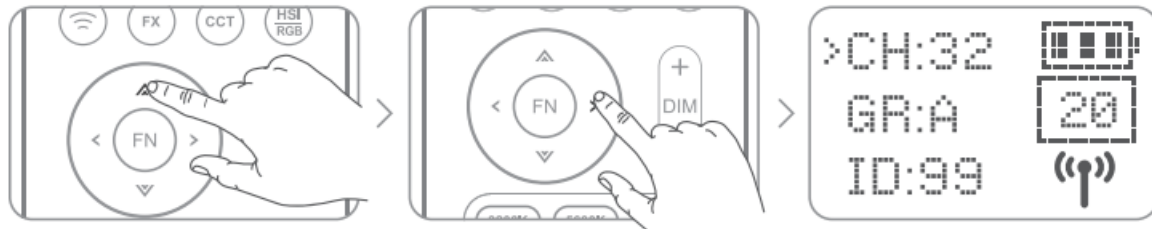

 CH Setting: Press the up and down button to choose the CH channel and press the left or right button to choose the channel value from 1 to 32.





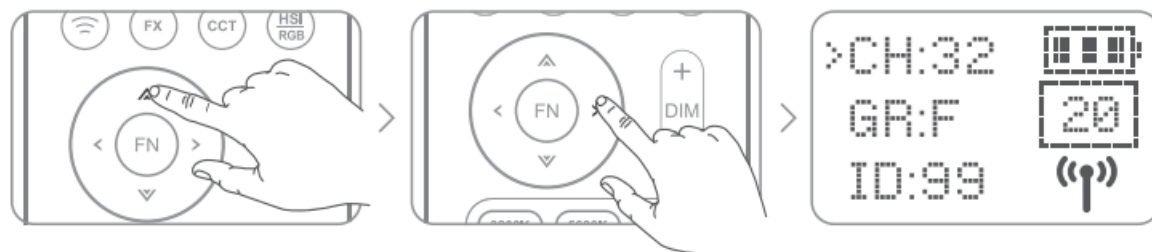










GR Setting: Press up and down button to choose GR group and press left or right button to choose group value from A to F and 0 to 9.



ID Setting: Press up and down button to choose ID and press the left or right button to choose the ID value from 1 to 99.


FX Modes Setting

Press FX to enter FX modes and press left or right button to choose their categories of them. After choosing the kinds, there are I, II and III modes can be selected. There are 39 kinds of situational FX modes which are divided into 14 categories for your choice.

No.	Display	Situation	Display I	Display II	Display III
1		Colorful lights recycle	Slow speed	Medium speed	Quick speed
2		Flash	Flash	Press conference	Paparazzi
3		Party	Birthday party	KTV	Disco
4		Lightning	Discontinuous	Frequent	Sustainable
5		Broken bulb	Discontinuous	Frequent	Sustainable
6		TV	Slow speed	Medium speed	Quick speed
7		Candle	Discontinuous	Frequent	Sustainable
8		Fire	Firewood	Campfire	Fire hazard
9		Firework	Brief	Continuous	Show
10		Police car	Strong flash	Frequent flash	Quick flash
11		Firetruck	Strong flash	Frequent flash	Quick flash
12		Ambulance	Strong flash	Frequent flash	Quick flash
13		Music	Music I	Music II	
14	SOS	SOS			


Bicolor Modes

 Press the CCT button to enter bicolor modes and press up, down, left and right buttons to choose the color temperature from 2500K to 8500K. Pressing the up and down button will change the color temperature by ± 1000 per time while pressing the left and right buttons by ± 100 per time. You can also choose 3200K, 5600K, and 6500K directly by pressing the corresponding buttons.

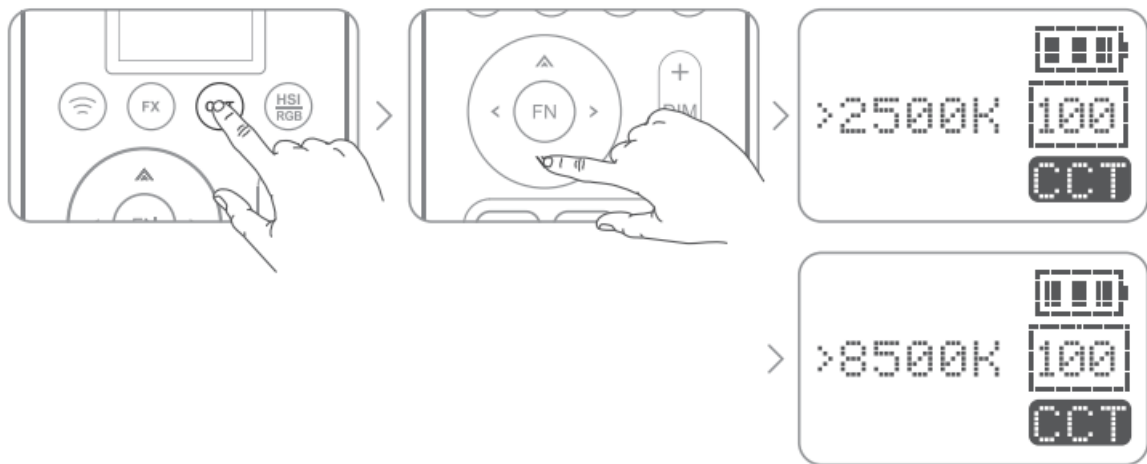


Colorful Light Mode Setting

 Press the HSI button to enter colorful light modes. Adjust hue H: press the up or down button to choose hue H. Then, press the left or right button to adjust hue value from 0 to 360°.

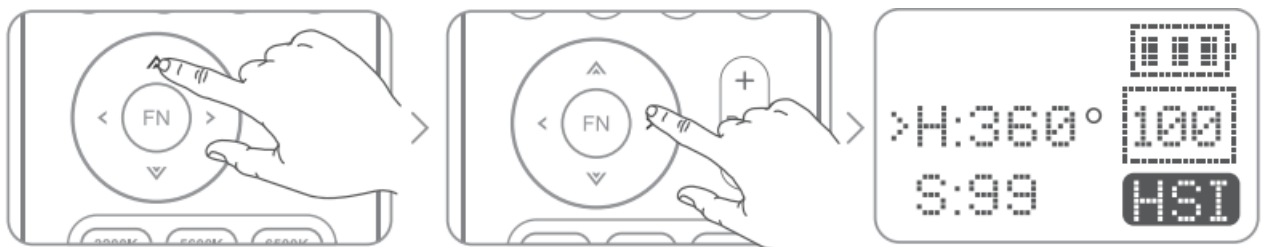

 Adjust saturation S: press the up or down button to choose saturation S. Then, press the left or right button to adjust the saturation value from 0 to 100.

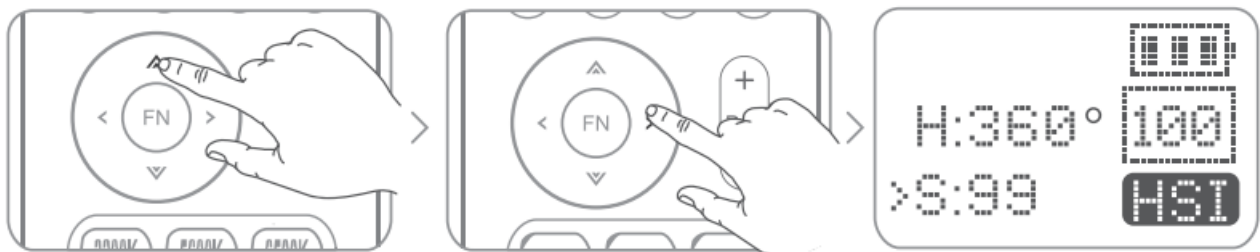

You can also choose Red, Green, Blue, Cyan, Magenta, Yellow, Pink, Violet, and Orange colors directly by pressing the corresponding buttons.

Light Brightness Adjustment:

1. When the current single light's brightness is displayed, press the DIM "+" or "-" button to adjust the brightness from 0 to 100%.



2. Turn on/off the single group's brightness: press the wireless setting button to enter the wireless setting interface. Press the up or down button to choose the group GR and press the FN button to turn on or off the

single group's brightness. When the brightness is off, OFF will be displayed. When the brightness is on, figure 0 to 100 will be displayed.

Note: Wireless signals can only be received when the receiving end is powered on.

Technique Data

Remote Control	RC-R911
Power Supply	3.0V(AAA*2)(battery not included)
2.4G Frequency Range	2413.0MHz-2464.5MHz
Max. Transmitting Power	5dbm
Distance(empty)	100m
Channel	32(1 to 32)
Grouping	16 Group(A B C D E F, 0 to 9)
ID	99 (1-99)
Working Environment Temperature	-10-40°C
Dimension	55x133x10mm
Net Weight	63g



Warning

Operating frequency:2413.0MHz-2464.

5MHz Maximum EIRP Power: 5dBm

Declaration of Conformity

GODOX Photo Equipment Co., Ltd. hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. In accordance with Article 10(2) and Article 10(10), this product is allowed to be used in all EU member states. For more information of DoC, Please click this web link: https://www.godox.com/DOC/-Godox_RC-R911_DOC.pdf. The device complies with RF specifications when the device used at Omm from your body.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet the general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safe-keep it. Thank you!

Product Information	Model	Product Code Number
Customer Information	Name	Contact Number
	Address	
Seller Information	Name	
	Contact Number	
	Address	
	Date of Sale	
Note:		

Note: This form shall be sealed by the seller.

(Applicable Products)

The document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g. promotional items, giveaways and additional accessories attached, etc.) are not included in this warranty scope.

(Warranty Period)

The warranty period of products and accessories is implemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day(purchase date) when the product is bought for the first time, And the purchase date is considered as the date registered on the warranty card when buying the product.

(How to Get the Maintenance Service)

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide a valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

(Inapplicable Cases)

The guarantee and service offered by this document are not applicable in the following cases: O. The product or accessory has expired its warranty period; C). Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by an external force, contacting or exposure to the improper temperature, solvent, acid, base, flooding and damp environments, etc; ®. Breakage or damage caused by the non-authorized institution or staff in the process of installation, maintenance, alteration, addition and detachment; ®. The original identifying information of the product or accessory is modified, alternated, or removed; ®. No valid warranty card;. Breakage or damage caused by using illegally authorized, nonstandard or non-public released software; C). Breakage or damage caused by force majeure or accident; ®. Breakage or damage that could not be attributed to the product itself. Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories, and software that is beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion, and consumption are not breakages within the maintenance scope.

Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following Product Maintenance Information:

Product Type	Name	Maintenance Period(month)	Warranty Service Type
Parts	Circuit Board	12	The customer sends the product to the designated site
	Battery	3	The customer sends the product to the designated site
	Electrical parts e.g.battery charger, etc.	12	The customer sends the product to the designated site
Other Items	Flash tube, modeling lamp, lamp body, lamp cover, locking device, package, power cord, sync cable, etc.	No	Without warranty

Godox After-sale Service Call 0755-29609320-8062



GODOX Photo Equipment Co., Ltd.

Add: Building 2~ Yaochuan Industrial Zone,
Tangwei Community~ Fuhai Street~ Baoan District, Shenzhen~
China Tel: +86-755-29609320(8062) Fax: +86-755-25723423

Email: godox@godox.com
godox.com

Made in China I 705-RCR900-02



Documents / Resources

	<p>Godox RC-R9II Remote Control [pdf] Instruction Manual 071, 2ABYN071, RC-R9II, Remote Control, RC-R9II Remote Control</p>
--	---