

godox

Godox WEC-CS
Microphone
System 2 Kit



Godox WEC-CS Microphone System 2 Kit Owner's Manual

[Home](#) » [Godox](#) » Godox WEC-CS Microphone System 2 Kit Owner's Manual 

Contents

- 1 [Godox WEC-CS Microphone System 2 Kit](#)
- 2 [Main Features](#)
- 3 [Structure of Product](#)
- 4 [Instructions for Use](#)
- 5 [Technical Data](#)
- 6 [FCC Statement](#)
- 7 [Warranty](#)
- 8 [Maintenance and Service Support Information](#)
- 9 [Documents / Resources](#)
 - 9.1 [References](#)
- 10 [Related Posts](#)

Godox

Godox WEC-CS Microphone System 2 Kit



Foreword

Thank you for purchasing! WEC-CS is the charging case of Godox's latest wireless lavalier microphone system for Sony cameras. It has three built-in slots, which can store and charge three devices at the same time. Three internal status indicators conveniently show charging status of the devices, while the external charging indicators clearly show the battery level of itself. Please read this manual carefully before using to make sure the correct operation and exert the optimum function.

Main Features

- Built-in lithium battery can charge three devices at the same time.
- Three internal status indicators show charging status of the devices.
- External charging indicators show the battery level of itself.
- Support charging through USB-C cable.

Warning

Do not disassemble. Should repairs become necessary, this product must be sent to our Company or an authorized maintenance center.

Always keep this product dry. Do not use in rain or damp conditions.

Do not leave or store this product in the environment of direct sunlight, near heating devices, or in hot, humid or dusty.


Keep out of reach of children.

Do not use in flammable and explosive environments. Pay attention to the relevant warning signs.

Do not leave or store the product if the ambient temperature reads over 50

& Please read carefully and follow the warnings or instructions provided by the manufacturer.

Structure of Product

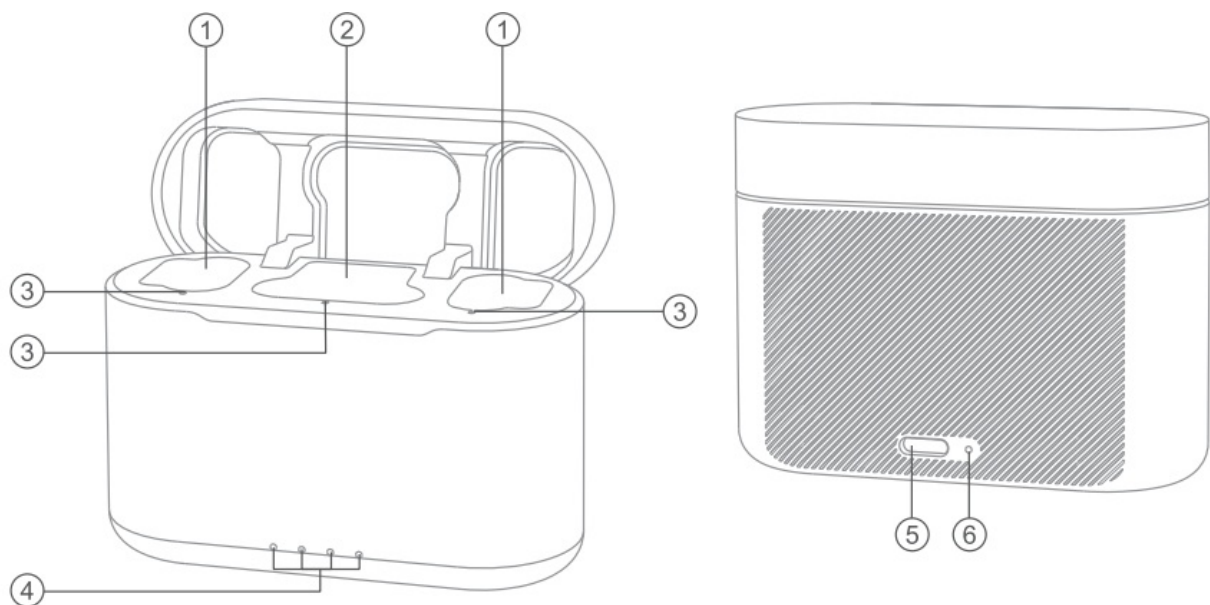


1. Transmitter's Slot
2. Receiver's Slot
3. Internal Status Indicator
4. External Charging Indicator
5. USB-C Charging Port
6. Reset Hole

What's Inside



Charging Case
× 1

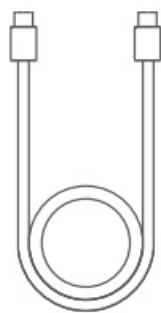

USB-A to USB-C Data Cable
× 1



Instruction Manual
× 1

Note: Due to continuous updates and upgrades of the products, there may be differences between the actual products and the pictures. Therefore, the pictures are for reference only, products to prevail in kind.

Instructions for Use

Put the transmitter/receiver into the charging case, the case will first detect whether the transmitter/receiver is correctly inserted into the corresponding slot, the corresponding internal indicator will light up if the pins inside touched the charging points of the transmitter/receiver. Then it will detect whether the transmitter/receiver is fully charged, if not, it will start charging until it's fully charged. The internal status indicators and external charging indicators will light up at the same time to show the battery level of the transmitter/receiver and the charging case

itself if the charging case lid is open.

When charging the case itself, the four external charging indicators will flash white incrementally, and be constant on white after the charging case is fully charged.

Indicator Status	Meaning
Internal status indicator flashes white	The transmitter/receiver being charged
Internal status indicator is constant on white	The transmitter/receiver is fully charged
Four external charging indicators are constant on white	Charging case battery level is 100%
The first three external charging indicators from left to right are constant on white after the lid is open, while the last one is off	Charging case battery level is 75%
The first two external charging indicators from left to right are constant on white after the lid is open, while the other two are off	Charging case battery level is 50%
The first external charging indicator from left to right is constant on white after the lid is open, while the last three are off	Charging case battery level is 25%
The first external charging indicator from left to right flashes white after the lid is open, while the last three are off	Charging case battery level is low, please charge in time
Four charging indicators are all off after the lid is open	Charging case battery level is 0%, it will automatically turn off

Technical Data

Name Model	Charging Case WEC-CS
Lithium Battery Parameters	3.7V=1400mAh. 5.18Wh
USB-C Input	5V=1.3A
Working Time	Charge 3 devices for about twice
Charging Time	Approx. 2h
Working Environment Temperature	-10~50°C
Dimension	2.48"x3.35"x1.42"
Net Weight	87g

Specifications and data may subject to changes without notice.

Maintenance

Avoid falling. Strong collision or vibration may malfunction the device. Keep dry. This product is not water-proof. Malfunction, rust, and corrosion may occur and go beyond repair if soaked in water or exposed to high humidity.

Avoid sudden temperature changes. Condensation happens in sudden temperature changes such as the circumstance when taking the product out of a building with higher temperature to outside in winter. Please put the product in a handbag or plastic bag beforehand. Keep away from strong magnetic field. The strong static or magnetic field produced by devices such as radio transmitters leads to malfunction. Specifications and data may

subject to changes without notice.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a

residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Declaration of Conformity

GODOX Photo Equipment Co.,Ltd. hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive 2014/35/EU,2014/30/EU. They are allowed to be used in all EU member states. For more information of DoC, Please click this web link: <https://www.godox.com/eu-declaration-of-conformity>

Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safe-keep it. Thank you!

Product Information	Model	I Product Code Number
Customer Information	Name	I Contact Number
	Address	
Seller Information	Name	
	Contact Number	
	Address	
	Date of Sale	
Note		

Applicable Products I

The document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g. promotional items, giveaways and additional accessories attached, etc.) are not included in this warranty scope.

Warranty Period I

The warranty period of products and accessories is implemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day (purchase date) when the product is bought for the first time, and the purchase date is considered as the date registered on the warranty card when buying the product.

How to Get the Maintenance Service I

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

Inapplicable Cases I

The guarantee and service offered by this document are not applicable in the following cases:

1. The product or accessory has expired its warranty period;
2. Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc;
3. Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment;
4. The original identifying information of product or accessory is modified, alternated, or removed;
5. No valid warranty card;
6. Breakage or damage caused by using illegally authorized, nonstandard or non-public released software;
7. Breakage or damage caused by force majeure or accident;
8. Breakage or damage that could not be attributed to the product itself.

Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.

Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following Product Maintenance Information.

Product Type	Name		Warranty Service Type
Parts	Product Main Body	12	Customer sends the product to designated site
	Battery		Customer sends the product to designated site
	Charger, Electrical Parts etc.	12	Customer sends the product to designated site
Other Items	Battery Case, Windscreen Foam, Wind Cap, Locking Device, Lanyard, Tie, Velcro Tape, Clip, Bag, Package etc	No	Without warranty

Godox After-sale Service Call 0755-29609320-8062



Godox Audio Wechat Official Account



Overseas Official Accounts & Updates

GODOX Photo Equipment Co., Ltd.

Address: Building 2, Yaochuan Industrial Zone, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen 518103, China

Tel: +86-755-29609320(8062)

Fax: +86-755-25723423

Email: aodox@aodox.com

Website: www.godox.com

Made in China | 705-WECCS0-00



Documents / Resources

	Godox WEC-CS Microphone System 2 Kit [pdf] Owner's Manual WEC-CS Microphone System 2 Kit, WEC-CS, Microphone System 2 Kit, System 2 Kit, 2 Kit, Kit
--	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.