

Godox
Godox WEC
Kit1,WEC Kit2
Wireless Lavalier
Microphone
System



Godox WEC Kit1,WEC Kit2 Wireless Lavalier Microphone System Instruction Manual

[Home](#) » [Godox](#) » Godox WEC Kit1,WEC Kit2 Wireless Lavalier Microphone System Instruction Manual 

Contents

- [1 Godox WEC Kit1,WEC Kit2 Wireless Lavalier Microphone System](#)
- [2 Structure of Product](#)
- [3 What's Inside](#)
- [4 Instructions for Use](#)
- [5 Pairing](#)
- [6 Denoise](#)
- [7 Charging](#)
- [8 Instructions for Installation](#)
- [9 Technical Data](#)
- [10 Maintenance](#)
- [11 FCC Statement](#)
- [12 Declaration of Conformity](#)
- [13 Marking Information](#)
- [14 Documents / Resources](#)
 - [14.1 References](#)
- [15 Related Posts](#)

Godox

Godox WEC Kit1,WEC Kit2 Wireless Lavalier Microphone System

 
 


Warning

- This product is high-precision instrument, please avoid falling, collision or pounding .
- Do not disassemble. Should repairs become necessary, this product must be sent to our Company or an authorized maintenance center .
- Always keep this product dry. Do not use in rain or damp conditions .
- Do not leave or store this product in the environment of direct sunlight, near heating devices, or in hot, humid or dusty .
- Keep out of reach of children .
- Do not use in flammable and explosive environments. Pay attention to the relevant warning signs
- Do not leave or store the product if the ambient temperature reads over 50°C .
- Please read carefully and follow the warnings or instructions provided by the manufacturer.




Structure of Product

1. Power Switch Button
2. Pairing/Denoise Button
3. Built-in Microphone
4. Back Clip
5. Indicator
6. USB-C Charging Port
7. Charging Points

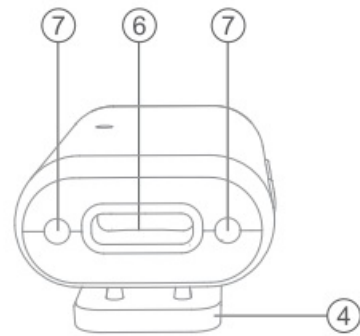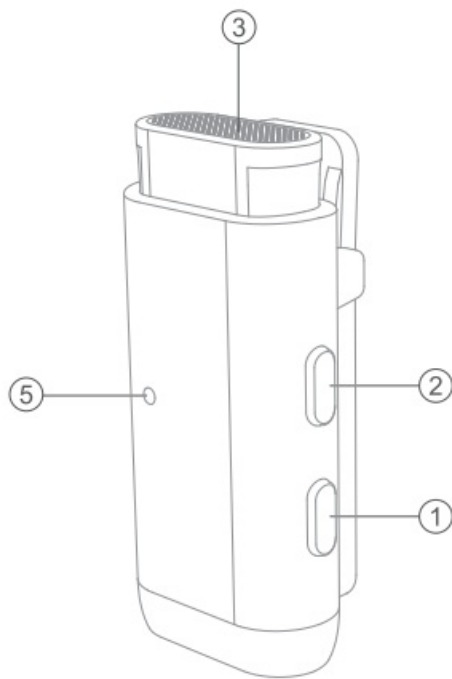


Receiver

   1. Power Switch Button
2. 3.5mm Audio Output Port
3. Indicator
4. USB-C Charging Port
5. Pairing/Volume + Button
6. Mode/Volume - Button
7. Back Clip
8. Charging Points

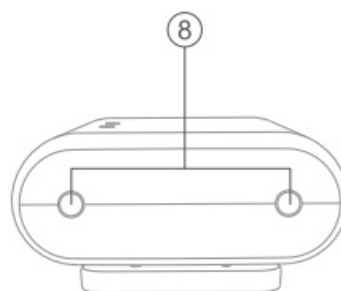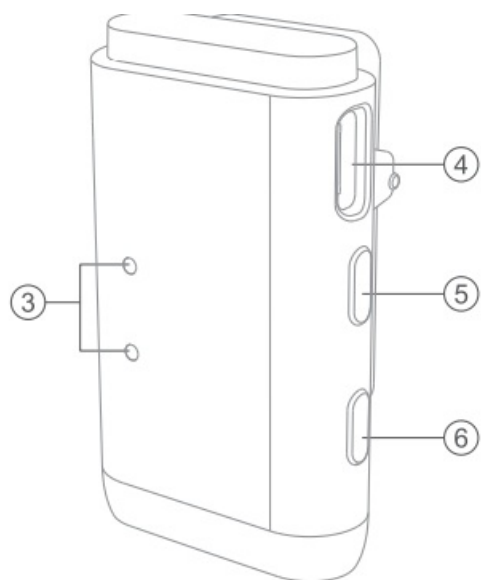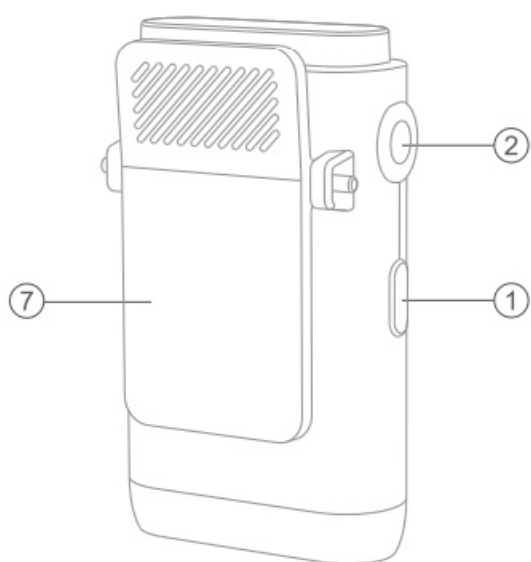


Charging Casa

 
1. Transmitter's Slot
2. Receiver's Slot
3. Indicator
4. Display
5. USB-C Charging Port
6. Reset Hole

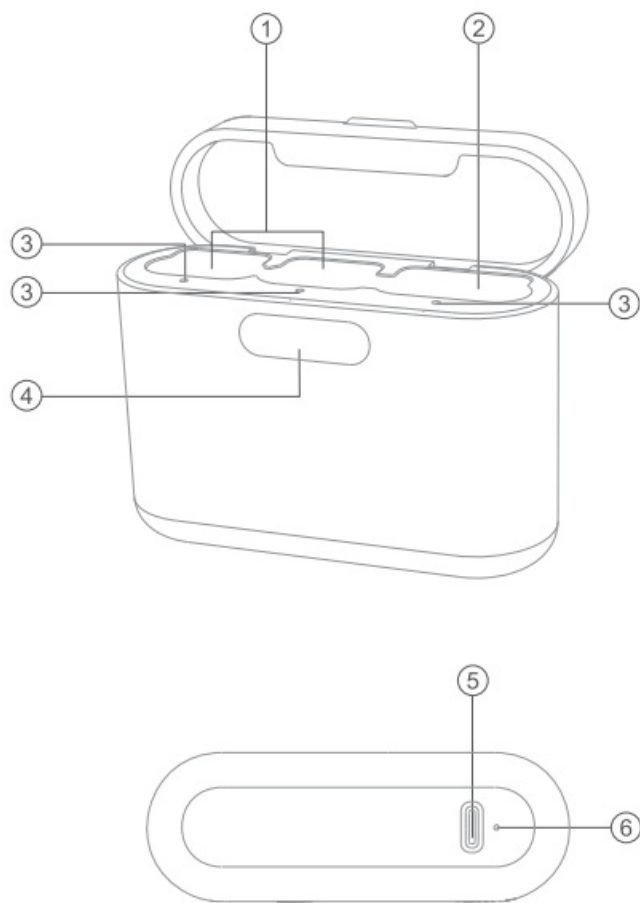

What's Inside

 


Transmitter

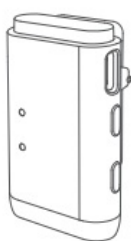 


Receiver



 
Charging Case

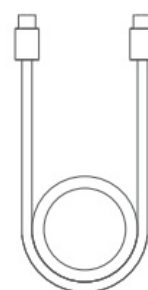

USB-A to USB-C Data
Cable

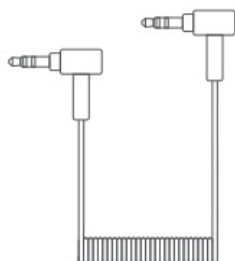 

 
3.5mm TRS-TRS
Audio Cable

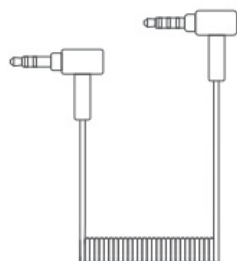

3.5mm TRS-TRRS
Audio Cable



 Furry Windscreen

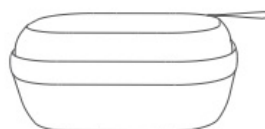

Storage Box



Instruction Manual


Product Name	Model	Package List
Wireless Lavalier Microphone System	WECKit1	Transmitter x1, Receiver x1, USB-A to USB-C Data Cable x1, Furry Windscreen x1, 3.5mm TRS-TRS Audio Cable x1, 3.5mm TRS-TRRS Audio Cable x1, Storage Box x1, Instruction Manual x1
Wireless Lavalier Microphone System	WECKit2	Transmitter x2, Receiver x1, Charging Case x1, USB-A to USB-C Data Cable x1, Furry Windscreen x2, 3.5mm TRS-TRS Audio Cable x1, 3.5mm TRS-TRRS Audio Cable x1, Storage Box x1, Instruction Manual x1

Note: Due to continuous updates and upgrades of the products, there may be differences between the actual products and the pictures. Therefore, the pictures are for reference only, products to prevail in kind.

Instructions for Use

Power Switch

Operating Instructions

Long press the power switch button  for 3s to turn on or off the transmitter and receiver. Take out the devices from the charging case, they will boot up automatically, while put them into the charging case, they will be turned off.





Note: The transmitter and receiver will be turned off if they stay unpaired in 5min after powered on.

Indicator Instructions

Indicator Status	Meaning
Indicator of transmitter flashes green every 0.5s	Unpaired after powered on
Both indicators of receiver flash green every 0.5s	Unpaired after powered on

Pairing

Operating Instructions

Long press the pairing/denoise button  / DNR  of transmitter and pairing/volume+ button  / +  of receiver for 2s to pairing them. They will exit pairing status once paired, while exit after 10s if unpaired.

Indicator Instructions

Indicator Status	Meaning
Indicator of transmitter flashes green rapidly every 0.25s	Pairing status
Indicator of transmitter is constant on green	Paired
Both indicators of receiver flash green rapidly every 0.25s	Pairing status
TX1 indicator of receiver is constant on green, TX2 indicator of receiver is off	One transmitter and one receiver are paired
Both indicators of receiver are constant on green	Two transmitters and one receiver are paired

Note: If two transmitters are paired with the receiver but one of which is turned off later, then its corresponding TX1/TX2 indicator will be off in 30s.

Denoise

Operating Instructions

Short press the pairing/denoise button  of transmitter to turn on or off the denoise function.

Indicator Instructions

Indicator Status	Meaning
Indicator of transmitter is constant on orange	Denoise function is on

Mode Switch


Operating Instructions

The sound track mode is mono by default, long press the mode/volume – button < M /- > of receiver for 5s can switch to stereo mode.

Indicator Instructions

Indicator Status	Meaning
Both indicators of receiver are constant on green	Mono mode
Both indicators of receiver are constant on blue	Stereo mode

Output Volume Adjustment

Short press the pairing/volume+ button  + > or mode/volume – button < M /- > of receiver can adjust the output volume in 3 levels with an increment of 6dB each stop. The volume is the middle level by default after first boot.

Charging

Indicator Status	Meaning
Indicators of transmitter and receiver flash white	Charging
Indicators of transmitter and receiver are constant on white	Fully charged
Indicator of transmitter flashes red every 0.5s	Battery level of transmitter is below 10%
TX1 indicator of receiver is constant on red, TX2 indicator of receiver displays normally	Battery levels of receiver and transmitter TX2 are normal, while battery level of transmitter TX1 is below 10%/4

TX1 indicator of receiver displays normally, TX2 indicator of receiver is constant on red	Battery levels of receiver and transmitter TX1 are normal, while battery level of transmitter TX2 is below 10%/4
Both indicators of receiver are constant on red	Battery level of receiver is normal, while battery levels of transmitter TX1 and TX2 are below 10%
Both indicators of receiver flash red every 0.5s	Battery level of receiver is below 10%

Charging through USB-A to USB-C Cable

The transmitter and receiver can be charged after connecting to power source through USB-A to USB-C cable.

Charging through Charging Cable

Put the devices into the charging case and open the lid: The case will first detect whether the devices are correctly inserted into the corresponding slots, the corresponding indicators in the case will light up if the pins inside touched the charging points of the devices. Then it will detect whether the devices are fully charged, if not, it will start charging until the devices are fully charged. The indicators and number display will light up at the same time if the charging case lid is open, and turn off after the devices are fully charged in 5s.

Put the devices into the charging case and close the lid:

The devices will shut down and be charged until they are fully charged. The number display will be off in 1 min after closing the lid.


Charging the case itself

The number display will increase gradually from 0 to 100, and remain 100 after the charging case is fully charged.


Indicator Status	Meaning
Indicators inside the charging case flash white every 0.25s	Charging the devices
Indicators inside the charging case are constant on white	The devices are fully charged

Instructions for Installation

 
Clip the transmitter to the collar with its back clip

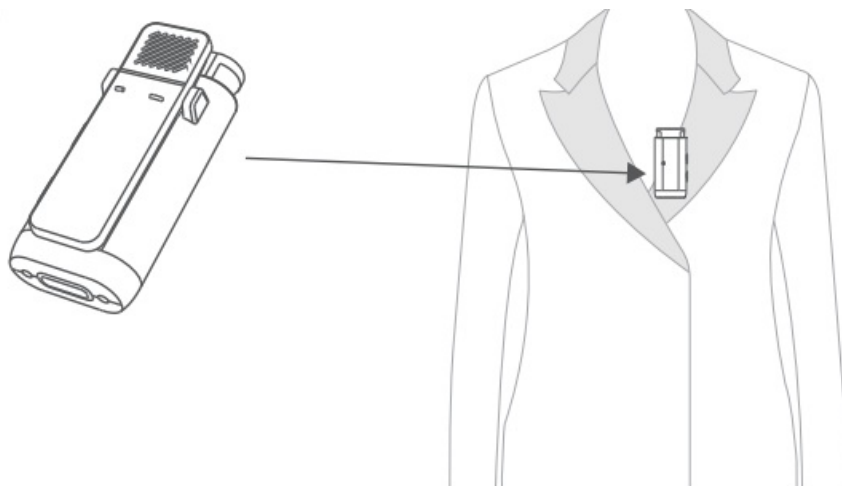

 Clip the receiver to the camera with its back clip, then connect the 3.5mm audio output port of receiver to the 3.5mm audio input port of camera with the 3.5mm TRS-TRS audio cable.

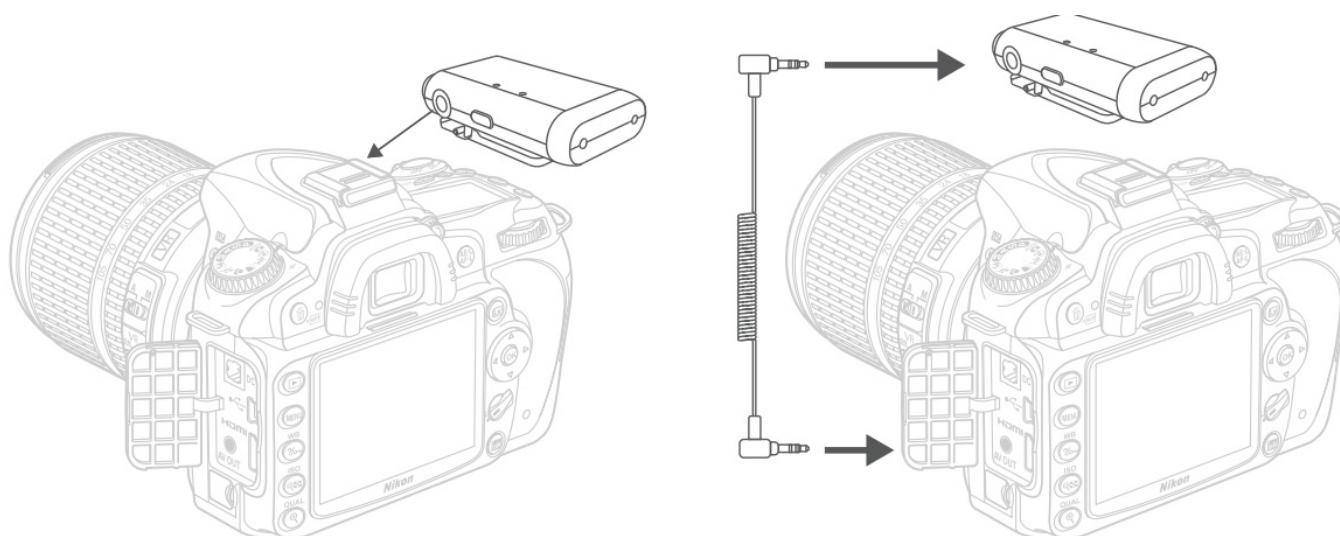

 Connect the 3.5mm audio output port of receiver to the 3.5mm earphone jack port of smartphone with the 3.5mm TRS-TRRS audio cable.

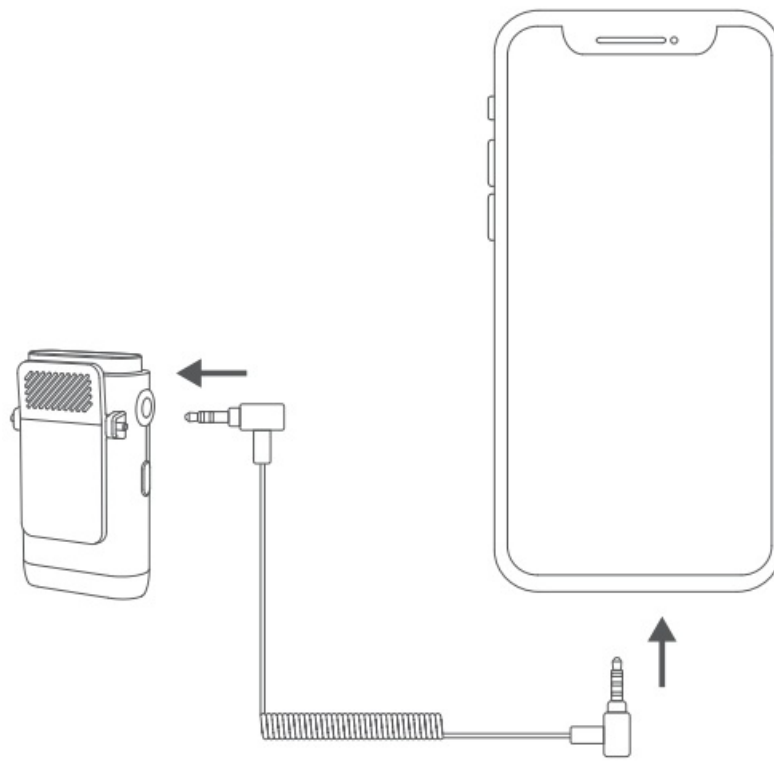

Technical Data

Name	Transmitter	Receiver	Charging Case
Model	WECTX	WECRX	WEC-CI
Transmission Type	2.4GHz Frequency Hopping System	2.4GHz Frequency Hopping System	
Pickup Pattern	Omnidirectional		
Frequency Range	20Hz-20KHz		
Max. SPL	110dB		
Dynamic Range	86dB		
Max. Wireless Distance	200m	200m	
Lithium Battery Parameters	3.7V – 140mAh, 0.518Wh	3.7V – 200mAh, 0.76Wh	3.7V – 1400mAh, 5.18Wh
USB-C Input	5V – 160mA	5V – 200mA	5V – 1.3A
Working Time	Approx. 5h	Approx. 8h	Charge 3 devices for about twice

Charging Time	Approx. 2h	Approx. 2h	Approx. 2h
Working Environment Temperature	-10~50°C	-10-50°C	-10-50°C
Dimension	48mmx22mmx16mm 1.89" x 0.87" x 0.63"	48mmx28mmx15mm 1.89" x 1.10" x 0.59"	63mmx85mmx30mm 2.43" x 3.35" x 1.18"
Net Weight	12g	16g	84g

Specifications and data may subject to changes without notice

Maintenance

- Avoid falling. Strong collision or vibration may malfunction the device.
- Keep dry. This product is not water-proof. Malfunction, rust, and corrosion may occur and go beyond repair if soaked in water or exposed to high humidity.
- Avoid sudden temperature changes. Condensation happens in sudden temperature changes such as the circumstance when taking the product out of a building with higher temperature to outside in winter. Please put the product in a handbag or plastic bag beforehand.
- Keep away from strong magnetic field. The strong static or magnetic field produced by devices such as radio transmitters leads to malfunction.
- Specifications and data may subject to changes without notice.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
 2. This device must accept any interference received, including interference that may cause undesired operation.
- Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement
The device can be used in portable exposure condition without restriction.

Warning

- Operating frequency: 2402MHz – 2480MHz (WEC TX/WEC RX)
- Maximum EIRP Power: 0.73dBm (WEC TX)/ 0.92dBm (WEC RX)

Declaration of Conformity

 
GODOX Photo Equipment Co.,Ltd. hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. In accordance with Article 10(2) and Article 10(10), this product is allowed to be used in all EU member states.

For more information of DoC, Please click this web link: <https://www.godox.com/eu-declaration-of-conformity>

The device complies with RF specifications when the device used at 0mm from your body.

Marking Information

Model: WEC TX

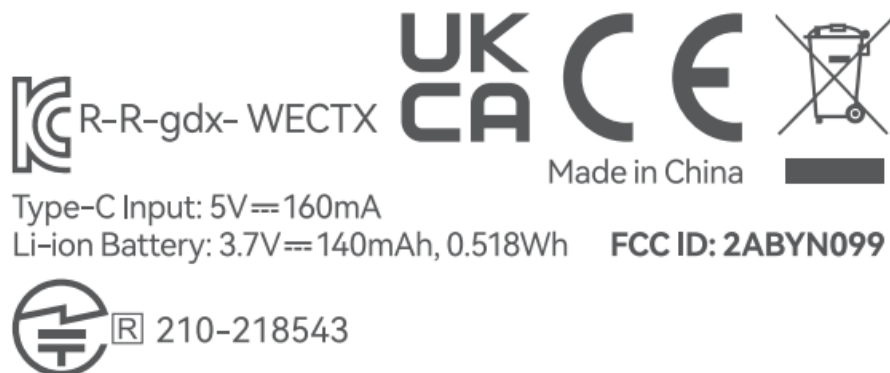

Model: WEC RX



godox@godox.com



Godox Audio Wechat
Official Account



Overseas Official
Accounts & Updates

GODOX Photo Equipment Co., Ltd.

Add.: Building 2, Yaochuan Industrial Zone, Tangwei Community, Fuhai Street. Bao'an District Shenzhen 518103, China

Tel: +86-755-29609320(8062)

Fax: +86-755-25723423

 
E-mail: godox@godox.com

www.godox.com

Made in China I 705-WECKT0-02



Documents / Resources

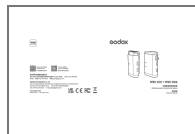

[Godox WEC Kit1, WEC Kit2 Wireless Lavalier Microphone System](#) [pdf] Instruction Manual
WEC Kit1 WEC Kit2 Wireless Lavalier Microphone System, WEC Kit1 WEC Kit2, Wireless Lavalier Microphone System, Lavalier Microphone System, Microphone System

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.