

GoGEN FRAME 20 WIFI Photo Fra



GoGEN FRAME 20 WIFI Photo Frame User Manual

[Home](#) » [Gogen](#) » [GoGEN FRAME 20 WIFI Photo Frame User Manual](#) 

Contents

- [1 GoGEN FRAME 20 WIFI Photo Fra](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 PRODUCT OVERVIEW AND CONTROL BUTTONS](#)
- [5 GETTING STARTED](#)
- [6 FRAMEO QUICK SETUP](#)
 - [6.1 START USING FRAMEO](#)
 - [6.2 VIDEO TUTORIALS](#)
- [7 SPECIFICATION](#)
- [8 Charging adapter](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)

GoGEN

GoGEN FRAME 20 WIFI Photo Fra



Product Information

Specifications

- System Operating System: Android 6.0
- Internal Memory: Approximately 4.7 GB
- External Memory: Supports external micro SD cards up to 32GB
- Display: 10.1-inch TFT LED display
- Touch Panel: 5-point touch panel
- Resolution: 1280 x 800 pixels / IPS / 16:9
- Memory Card Slot: Micro SD card slot (allows importing photos from a Micro SD memory card to the frame's memory, copying photos from the device's memory to the card, and playing photos directly from the Micro SD card)
- USB Port: Micro USB 2.0 port (allows importing photos from a USB device to the frame's memory, copying photos from the device's memory to the USB device, and playing photos directly from the USB device)
- Built-in Wi-Fi: 802.11b/g/n, Eirp 16.01 dBm; operating frequency 2412-2472MHz
- Power Input: 100-240V AC 50-60Hz
- Power Output: 5V/2A

Product Usage Instructions

Power On/Off

To turn on the product, press and hold the power button for about 5 seconds until the screen turns on. To enter the reboot or shutdown menu, press and hold the power button for about 3 seconds.

To turn off/on the screen (while keeping the photo frame on), short press the power button.

USB Connection

To transfer data, connect a USB disk to the USB port.

Reset

If you need to reset the device, use a pin or paperclip to press the reset button.

DC Input

To power the device, connect the DC adapter to the DC input.

Initial Setup

After turning on the frame for the first time, follow these steps for initial setup:

1. Select the language for the menu.
2. Connect the frame to the internet via Wi-Fi.
3. Set the current date and time. Note: Frameo may prompt you to update to the latest version. We recommend updating the frame.
4. Configure Frameo settings and the ability to send and receive photos.
5. Set the time zone if the default is incorrect.

FrameoApp

To send photos, use the Frameo app on iOS or Android. Scan the QR code below to access the app. Note:

Features may vary depending on the app version.

Video Tutorials

For video tutorials, visit <https://bit.ly/3zKtxWX>

Privacy Policy

For more information about privacy policy, visit <https://privacy.frameo.net>

FAQ

Where can I find the full user manual?

You can find the full user manual by scanning the QR code or copying the link: <https://support.frameo.net/hc/en-us>

How do I import photos to the frame?

You can import photos to the frame by using a micro SD card or a USB device. Simply connect the card or device to the corresponding port and follow the instructions in the user manual or app.

What is the maximum capacity for external memory?

The product supports external micro SD cards with a capacity of up to 32GB.

Can I connect the frame to Wi-Fi?

Yes, you can connect the frame to Wi-Fi to enable features such as sending and receiving photos.

How do I update the frame?

If prompted, you can update the frame to the latest version by following the instructions in the user manual or app.


How do I reset the frame?

To reset the frame, use a pin or paperclip to press the reset button.

INTRODUCTION

Thank you for buying our product. Please read through these operating instructions, so you will know how to operate your equipment properly. After you finished reading the instructions manual, put it away in a safe place for future reference.

PRODUCT OVERVIEW AND CONTROL BUTTONS

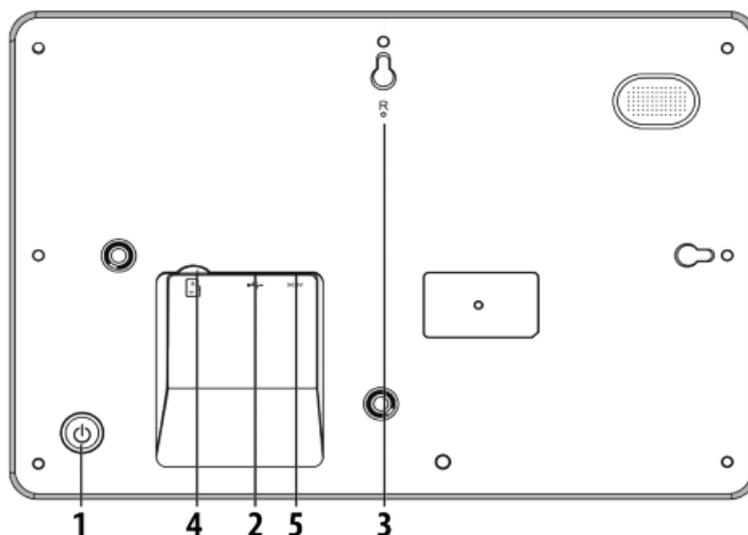

1. POWER

Press and hold the power button for about 5 seconds to turn it on (until the screen turns on).

Press and hold the power button for about 3 seconds to enter the reboot or shutdown menu.

Short press the power button to turn off/on the screen (but the photo frame stays on).

2. USB

Connect a USB flash drive to transfer data.

3. RESET

Use a needle or paper clip to reset unit.

4. Micro SD

Load external Micro SD memory cards here.

5. DC socket

Connect DC adapter to power on the device.

GETTING STARTED

- Connect the power adaptor to the back of the photo frame and plug it into a power socket.
- When powering it on for the first time, set up your photo frame by following the Frameo quick setup or follow the on-screen guide.
- Once you set up your photo frame, you can start connecting it to your friends and family.

FRAMEO QUICK SETUP

When starting your photo frame for the first time, you will need to set up the photo frame.

- Select a language. This will be the language used on the Frameo.
- Connect your frame to the internet by connecting it to Wi-Fi.
- Verify or correct the date and time.
Note: Frameo may ask you to update to the latest version. It is recommended to update your photo frame before continuing if asked to.
- Enter your name, and the location where you have placed your photo frame e.g. “Jeffrey Lebowski” and “Living room”, “Carpet” or “Bowling alley”.
- Finally set the timezone if not already correct.

START USING FRAMEO

Start by connecting with your friends and family by providing them with a unique code from your photo frame. If you want to be able to send photos to the photo frame yourself, start by downloading the app for iOS or Android on App Store or Google Play. Then use the code to connect your photo frame and app as described below.

Connecting a new friend

- Make sure that your friend has downloaded and installed the Frameo app.
- Click the add friend icon on your photo frame . A dialog will appear showing a unique code which is valid for 12 hours.
- Now share this code in whatever fashion you prefer e.g. SMS, E-Mail, IM, phone call, to your friend.

- Once your friends have added the code in their Frameo app, they will automatically appear on your photo frame and be able to send you photos.




FULL USER MANUAL

To find the full user manual scan the QR code or use the link: support.frameo.net/hc/en-us



FRAMEO APP

To send photos to your photo frame, use the Frameo app for iOS or Android.

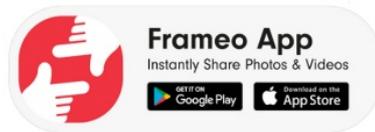

Scan QR code to find the app

NOTE: Features may change depending on the version of the application.

VIDEO TUTORIALS

Check out our Frameo Tutorials playlist on YouTube with informative videos where we guide you on how to get started using Frameo. Scan the QR code to the right or use the link to find the playlist.



bit.ly/3zKtxWX

PRIVACY

For more information regarding privacy, please visit privacy.frameo.net

SPECIFICATION

Operation System	Android 6.0
Internal memory	Approx. 4,7 GB free space
External Flash	Support external Micro SD card, up to 32GB
Display	10,1 inch TFT LED display
Touch Panel	5 point touch panel
Resolution	1280 x 800 pxl / IPS / 16:9
Memory card Slot	Micro SD card Slot (can import photos from micro SD card to photo frame, can copy photos from photo frame to SD card, can playback photos from micro SD card directly)
USB	Micro USB 2.0 (can import photos from USB to photo frame, can copy photos from photo frame to USB, can playback photos from USB directly)
WiFi	Built in 802.11b/g/n; E.i.r.p 16,01 dBm; Wireless Working Frequency 2412-2472 MHz
Power Adapter	Input: 100-240VAC 50-60 Hz Output: 5V/2A

We reserve the right to change technical specifications.

Charging adapter

A	Manufacturer's name or trademark, business registration number and address	Shenzhen Runshengfeng Power Technology Co., Ltd. 3rd Floor, Building A4, Xinfu Industrial Park, Chongqing Road, Fuyong Street, Baoan District, Shenzhen, Guangdong, China
B	Model identifier	RSF-DY080-0502000EU
C	Input voltage	100-240 V
D	Input frequency	50/60 Hz
E	Output voltage	5 V
F	Output current	2 A
G	Output power	10 W
H	Average efficiency in active mode	79,09%
I	Low load efficiency (10%)	76,55%
J	Power consumption without load	0,056 W

WARNING: DO NOT USE THIS PRODUCT NEAR WATER, IN WET AREAS TO AVOID FIRE OR INJURY OF ELECTRIC CURRENT. ALWAYS TURN OFF THE PRODUCT WHEN YOU DON'T USE IT OR BEFORE A REVISION. THERE AREN'T ANY PARTS IN THIS APPLIANCE WHICH ARE REPARABLE BY CONSUMER. ALWAYS APPEAL TO A QUALIFIED AUTHORIZED SERVICE. THE PRODUCT IS UNDER A DANGEROUS TENTION.

TO AVOID DANGER OF SUFFOCATION, KEEP THE PLASTIC BAG AWAY FROM BABIES AND CHILDREN. DO NOT USE THIS BAG IN CRIBS, BEDS, CARRIAGES OR PLAYPENS. THIS BAG IS NOT A TOY.

Disposal of old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems) This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

Hereby, ETA a.s. declares that the radio equipment type FRAME20WIFI is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

www.gogen.cz/declaration_of_conformity

www.GoGEN.cz

Documents / Resources

	<p>GoGEN FRAME 20 WIFI Photo Frame [pdf] User Manual FRAME 20 WIFI Photo Frame, FRAME 20, WIFI Photo Frame, Photo Frame, Frame</p>
--	--

References

- [YouTube](#)
- privacy.frameo.net
- [Gogen.pl - Strona główna | Gogen.pl](#)
- [Gogen.sk - Úvodná stránka | Gogen.sk](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.