

# **GoGEN VALEC Bluetooth Speaker User Manual**

Home » Gogen » GoGEN VALEC Bluetooth Speaker User Manual



USER MANUAL DECKO VALEC

#### **Contents**

- 1 INTRODUCTION
- **2 IMPORTANT SAFETY PRECAUTIONS**
- **3 CHARGING YOUR SPEAKER**
- **4 PRODUCT OVERVIEW AND CONTROL**

**BUTTONS** 

- **5 BLUETOOTH MODE**
- **6 TROUBLE SHOOTING**
- **7 SPECIFICATIONS**
- 8 Warranty
- 9 Documents / Resources
  - 9.1 References

#### INTRODUCTION

Thank you for buying our product. Please read through these operating instructions, so you will know how to operate your equipment properly. After you finished reading the instructions manual, put it away in a safe place for future reference.

#### IMPORTANT SAFETY PRECAUTIONS

When using your Bluetooth Speaker, basic safety precautions should always be followed, including the following:


- X Children should be supervised to ensure that they do not play with the device.
- X Keep this speaker and its accessories away from excessive heat.
- X No sharp object should be subjected to the speaker/speaker-drivers as it may damage the speakers.
- X Only use a soft cloth, no harsh abrasives or chemicals to clean, as it may damage the surface finishing.
- X Ensure the speaker is waterproof by removing all the connected cables and the cap is tightly closed before exposing the speaker to liquid.
- X NEVER expose the speaker to water while charging, as doing so may result in damage to the speaker or the power source.
- X NEVER operate this speaker with a damaged cable or after it has malfunctioned or has been damaged in any manner.
- X NEVER leave the speaker unattended while charging. If the speaker becomes hot, smokes, or gives off an odor during charging, terminate charging immediately.

# **CHARGING YOUR SPEAKER**

The charger is not included in the package, please charge the speaker via a standard  $5 \text{ V} / 1 \sim 2 \text{ A}$  charger or via a PC.

The LED indicator will glow red during charging. The LED indicator turns off when the speaker is fully charged. **IMPORTANT:** Please make a complete charge every three months to avoid shortening the battery lifespan.

# PRODUCT OVERVIEW AND CONTROL BUTTONS

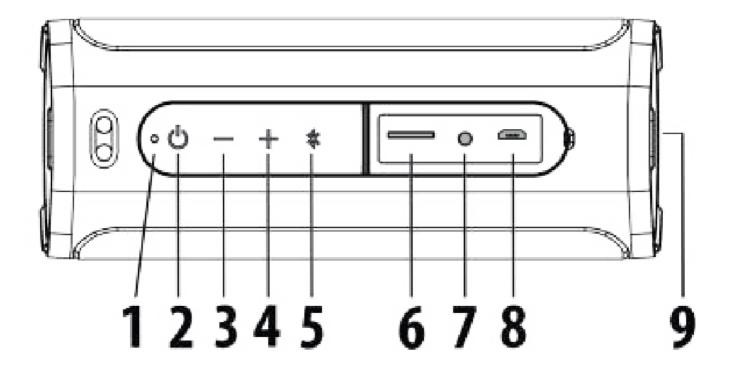

- 1. LED indicator
- 2. Power On/Off button

Press and hold to turn on/off the speaker.

Press twice briefly to change the LED lights mode.

3. Previous song / Vol – button

Press to decrease the volume.

Press and hold to skip to the previous track.

4. Next song / Vol + button

Press to increase the volume.

Press and hold to skip to the next track.

- 5. Bluetooth / Play / Stop / Phone button Press to start/stop playback.
- 6. Micro SD card slot
- 7. AUX IN input
- 8. Micro USB charging port Use the USB charging cable (included) for charging.
- 9. LED lights

Package contents: Speaker, USB Charging cable, Audio cable, Strap, User manual

# **BLUETOOTH MODE**

x Press and hold the 1 button to turn on the speaker.

X The speaker is ready to pair if the LED light flashes blue.

X Activate Bluetooth of mobile phone and search for device name "REPRO VENA" then connect it. If the pairing is successful, the LED light will be solid and you can use the speaker to listen to audio from your mobile phone.

**Note:** For more information, see your mobile phone's user manual. If you are asked to enter a passcode, enter 0000. After you've paired a mobile phone, the speaker remembers it for the next time.

## Disconnecting the paired mobile phone

X Press and hold the 5 button to disconnect your mobile phone from the speaker.

**Note:** The speaker will auto power off after 10 minutes if there is no operate.

TWS (TRUE WIRELESS STEREO) MODE

- X Turn on both speakers. Make sure both speakers are without any Bluetooth connection.
- X Press the 5 button on one of the speakers, the second speaker will connect automatically.

The first speaker LED light flashes blue and the LED light of the second speaker one keeps solid, which means both speakers are connected successfully.

- X Pair your mobile phone with the first speaker, the blue LED light of both speakers will be solid.
- X Press and hold the 5 button on one of the speakers to cancel the TWS connection.

#### HANDS-FREE FUNCTION

When phone or other smartphone is connected to your speaker, follow the steps below to take calls hands-free.

- X Press the 5 button to pick up the call.
- X Press and hold the 5 button to reject the call.
- X During a call, press the 5 button to hang up the call.

# **SD CARD MODE**

Insert Micro SD card into the speaker. The speaker will play the stored music automatically.

**NOTE:** The LED indicator will light green after connection and during playback.

## **AUX IN MODE**

The speaker automatically switches to AUX IN mode when you connect your device with the audio cable (included). When using an external device, all functions can only be controlled by the external device.

NOTE: The LED indicator will light green after connection and during playback.

## TROUBLE SHOOTING

# X The speaker does not turn on.

Charge the speaker. If the speaker does not turn on even after charging, contact customer service.

# X A tone is heard every few seconds.

The speaker needs to be charged.

## X The speaker does not charge.

Check whether the USB charging cable has been properly connected to the speaker and the power source.

Check whether the PC power is on and that it is properly connected.

When using a separately purchased USB power adapter, make sure that it is properly connected.

## X The speaker does not pair.

Check whether the Bluetooth device is powered on.

Check whether Bluetooth is enabled on the Bluetooth device.

Check whether the Bluetooth device is within 1 meter from the speaker.

Check whether the Bluetooth device is compatible with the speaker.

## X Music will not play through the speaker.

Check whether the speaker and Bluetooth device are powered on.

Check whether the music is playing on your Bluetooth device.

Check the volume level on your Bluetooth Device.

#### X Sound lag / distortion / noise.

Check id there is a 2,4 GHz device near your speaker or Bluetooth device.

Check whether the Bluetooth device is within 10 meters of your speaker.

#### X Caller cannot be heard.

Check whether the speaker is connected to the Bluetooth device.

Check whether Bluetooth is enabled on your Bluetooth device.

# **SPECIFICATIONS**

Bluetooth version: 5.0

IPX6 Waterproof Bluetooth Speaker Built-in battery: Li-ion 3,7 V / 2000mAh Battery Charging Time: approx. 2 hours Battery Playback Time: 7 hours (50 % Volume)

Bluetooth Frequency: 2402 - 2480 MHz, EIRP 1,45 dBm

Bluetooth connecting range: 10 m

Supported Micro SD card: FAT32 / exFAT, 128GB (max)

Supported audio formats: MP3 / WAV / WMA

Frequency Response: 80 Hz - 20 kHz

Power output: 2 x 5 W

Product size: 173 x 67 x 76 mm / Weight: 400 g

We reserve the right to change technical specifications.

# Warranty

Our product is warranted for 2 full year from the date of purchase. The warranty is provided on all material defects and workmanship. Guarantee of 24 months does not apply to decrease in the accumulator's effective capacity caused by its use or age. Effective capacity gradually decreases depending on the method of use of the accumulator.

To avoid danger of suffocation, keep the plastic bag away from babies and children. Do not use this bag in cribs, beds, carriages or playpens. This bag is not a toy.

Disposal of old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring

this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to

conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

Hereby, ETA a.s. declares that the radio equipment type DECKOVALEC is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <a href="http://www.gogen.cz/declaration.of">http://www.gogen.cz/declaration.of</a> conformity

www.gogen.cz

# **Documents / Resources**



Gogen Valed Bluetooth Speaker [pdf] User Manual VALEC Bluetooth Speaker, VALEC Speaker, Bluetooth Speaker, VALEC, Speaker

## References

- Gogen.cz Úvodní stránka | Gogen.cz
- Declaration of conformity | Gogen.cz
- Ogen.hu | Gogen.hu
- O Gogen.pl Strona główna | Gogen.pl
- Ogen.sk Úvodná stránka | Gogen.sk

