



## GOLD NOTE CD-1000 CD-Player High-End Studios User Manual

[Home](#) » [GOLD NOTE](#) » GOLD NOTE CD-1000 CD-Player High-End Studios User Manual 



### USER MANUAL CD-1000

Thank you for purchasing one of our units and welcome into the Gold Note world, where we turn High-End audio and music into a new experience.

Maurizio Aterini, founder of Gold Note

A handwritten signature in black ink, appearing to read 'Maurizio Aterini'.

## Contents

<b>1</b>	<b>IMPORTANT SAFETY INFORMATION</b>
<b>2</b>	<b>PACKAGE CONTENT</b>
<b>3</b>	<b>INTRODUCTION AND FEATURES</b>
<b>4</b>	<b>TECHNICAL SPECIFICATIONS</b>
<b>5</b>	<b>FRONT PANEL</b>
<b>6</b>	<b>REAR PANEL</b>
<b>7</b>	<b>DISPLAY</b>
<b>8</b>	<b>REMOTE CONTROL</b>
<b>9</b>	<b>PRODUCT REGISTRATION</b>
<b>10</b>	<b>TROUBLESHOOTING</b>
<b>11</b>	<b>RELATED PRODUCTS</b>
<b>12</b>	<b>Documents / Resources</b>
<b>12.1</b>	<b>References</b>
<b>13</b>	<b>Related Posts</b>

## IMPORTANT SAFETY INFORMATION

### PLEASE NOTE

1. Do not disassemble any part of the product.
2. Do not use any part of the product for other purposes.
3. For service and problems of any kind, contact qualified Gold Note personnel.
4. Protect the product from rain, humidity and keep away from heat sources, electric and electronic motors, etc.  
The power cord supplied must be used only on this unit.
5. Gold Note does not have responsibility for any improper use of this unit.




### GENERIC INFORMATION

- Read these instructions and store them.
- Heed all warnings.
- Follow the instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block the ventilation openings and install them in accordance with the manufacturer's instructions.
- Do not install near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarised or grounding-type plug: a polarised plug has two blades with one wider than the other.
- A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet. or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.  
When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

- Unplug this apparatus during lightning storms or when unused for long periods of time. Refer all servicing to qualified service personnel only. Servicing is required when the apparatus has been damaged in any way (such as when the power cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture) and in any case when the apparatus does not operate normally or has been dropped.

This appliance has a serial number located on the rear panel.  
Please record the model and serial number and retain them for your records.

**MODEL**  
**SERIAL NUMBER**

<div>  <div> <b>CAUTION</b>  RISK OF ELECTRIC SHOCK  DO NOT OPEN </div>  </div>		
<b>CAUTION!</b> To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer only to qualified Gold Note service personnel for service.		<b>WARNING!</b> To prevent fire or appliance to rain



**GOLD NOTE – Information on the correct management of waste from household Equipment pursuant to the European Directive 2012/19/EU**  
The crossed-out wheeled bin symbol shown on the equipment or its packaging indicates that the product, at the end of its useful life, must be collected separately from other waste to allow its proper treatment and recycling. The user must therefore deliver, free of charge, the end-of-life equipment to the centers for the separate collection of waste electrical and electronic equipment, or return it to the dealer in accordance with the procedures established by the legislation.

The appropriate separate collection of discarded equipment allows for proper recycling, treatment, and environmentally compatible disposal, helping to avoid the possible dispersion of hazardous substances and negative effects on the environment and health, favoring the reuse and/or recycling of the materials of which the equipment is composed of. Illegal dumping of the product by the user involves the application of administrative sanction provided for by the legislation in force. We invite you to consult the current legislation and the measures adopted by the public service operating in your country or territory.

**PACKAGE CONTENT**

1x CD-1000	1x POWER CABLE	1x USER MANUAL	1x REMOTE CONTROL
---------------	----------------------	----------------------	-------------------------

**INTRODUCTION AND FEATURES**

**CD-1000**

Looks amazing, sounds even better: introducing CD-1000, the most musical High-End CD Player we have ever designed. Integrating digital and analogue stages into one, versatile source. The CD-1000 features a top-class 24bit 192kHz high-resolution D/A converter with S/PDif coaxial and TOS optical digital inputs to deliver extraordinary performance.

**TRANSPORT MECHANISM**

The transport mechanism, the acclaimed JPL2800 drawer type by the Austrian Stream-Unlimited, guarantees top audiophile performance. Made of aluminium, its design enables the smoothest rotational stability and minimises speed fluctuation.

## **OUTPUT STAGE**

The CD-1000 output stage is a fully balanced, solid-state design centred on the high-quality Dual-Mono PCM1796 and PCM1792A D/A chipset by Burr-Brown. Optionally, the CD-1000 can be enhanced with our exclusive tube output stage – a discrete external unit designed with Class-A components, double triode tubes, and an ultra-low distortion power supply with low impedance output. The result is a warm, exceptionally analogue presentation of the sound.

## **MODULAR PHILOSOPHY**

The CD-1000 may be equipped with dedicated external devices to enhance the performance of the CD player to top audio performance, such as the external Tube Output Stage and the dedicated Power Supplies.

## **POWER SUPPLY**

The CD-1000 is powered by a proprietary Dual-Mono power supply. The power supply provides an extremely stable voltage, reducing speed fluctuations and enhancing audio performance. The power supply stage is designed to reduce the background noise and FI/EMI interferences.

## **PLEASE NOTE**

The mechanism features a recessed discloading area so it's important to align the disc at the center before closing the tray to avoid the risk of jamming.

## **TECHNICAL SPECIFICATIONS**

### **MAIN FEATURES**

- D/A Converter:  
24bit/192kHz DAC PCM1792A
- Frequency response:  
20Hz-20kHz @  $\pm 0.3\text{dB}$
- THD – Total Harmonic Distortion:  
0.001% max
- Signal to noise ratio:  
128dB
- Dynamic response:  
127dB
- Output impedance:  
50 $\Omega$
- Mechanism:  
Aluminium JPL-2800 Stream-Unlimited
- Speed fluctuation:  
0.0001%
- Volume control:  
Digital partializer, switchable ON/OFF (off by default)

### **DIGITAL INPUTS**

1x **RCA** S/PDIF coaxial

1x **TOS-Link** asynchronous 24bit/192kHz

## ANALOGUE OUTPUTS

1x **RCA** unbalanced @ 2V

1x **XLR** balanced @ 2V

1x **Tube** Stage

## DIGITAL OUTPUTS

1x Coax S/PDIF 75Ω

## FORMATS

- CD formats:  
Red Book
- Disc compatibility:  
CD, CD-R, CD-RW, MP3

## POWER

- Dual-Mono Power supply:  
100-120V or 220-240V, 50/60Hz
- Power consumption:  
30W

Fuse

220/240V 1A F/T

100/120V 2A F/T

## DIMENSIONS AND WEIGHT

Dimensions:

430mm W | 135mm H | 375mm D


Weight:

Kg. 12

Kg. 16 – boxed

## FRONT PANEL

 
### FRONT PANEL OVERVIEW

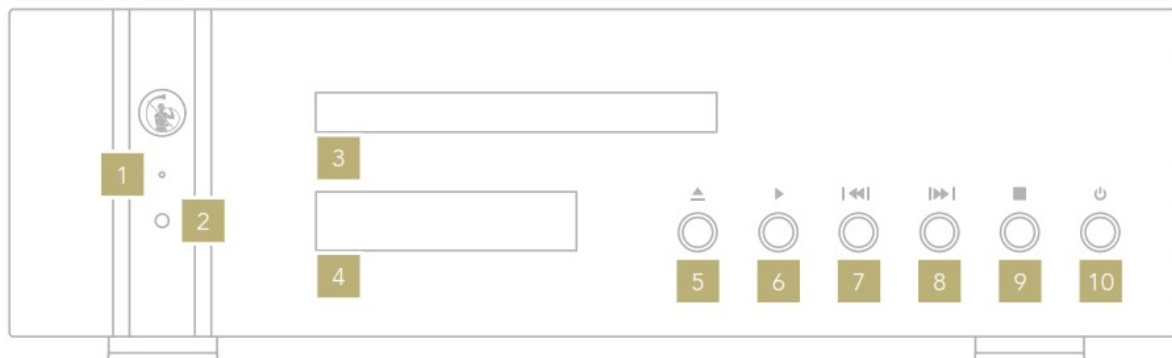

1 LED status light	6 Play & Pause
2 IR	7 Skip & Search reverse
3 CD Tray	8 Skip & Search forward
4 Display	9 Stop
5 Eject	10 Standby

## REAR PANEL

### REAR PANEL OVERVIEW

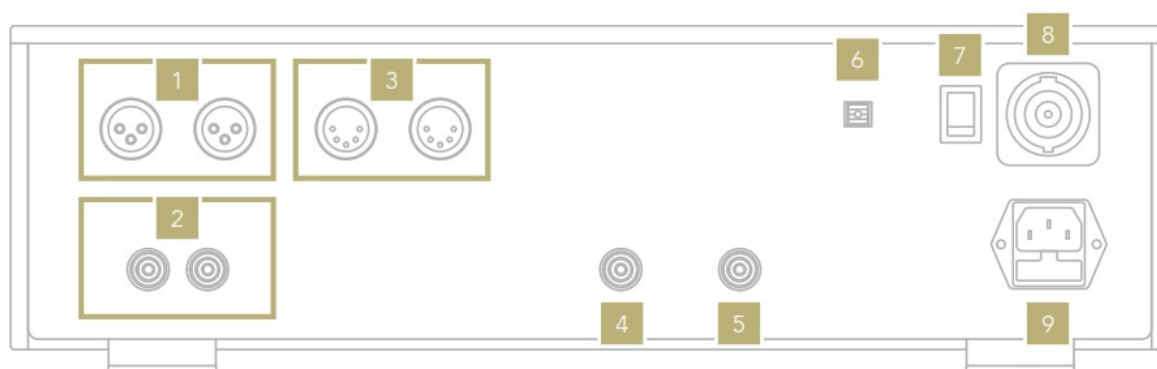

### ANALOGUE OUTPUTS

1. XLR balanced
2. RCA unbalanced
3. Tube Stage

#### DIGITAL INPUTS

4. COAX
5. TOS-Link

#### DIGITAL OUTPUTS

6. COAX

#### POWER AND OTHERS

7. Master Switch
8. PSU-IN (for the external power supply PSU-1250/1000)
9. AC plug IEC standard

## DISPLAY

### DISPLAY OVERVIEW


Overview of the functions and features available on the display




No CD inserted or format not recognised.



Total time and number of tracks are displayed when the CD is not playing.

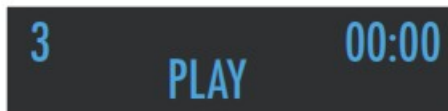

Press SKIP to skip tracks.

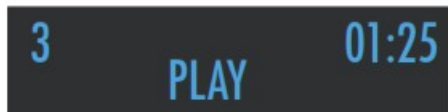

Press PLAY to play the selected track. The display shows the track number and the time progression.



Press and hold SKIP to move forward/back on the track at low speed.



Press and hold SKIP for more than 5 sec to move forward/back on the track at high speed.



When the volume control is enabled, use VOL+ and VOL- to adjust the volume level.

## REPEAT FUNCTION

Use the RPT button, to set the repeat function. The CD-1000 can be set on repeat track, repeat all, and shuffle.



Press RPT once to repeat the current track.



Press RPT twice to repeat all the tracks on the CD.



Press RPT three times to shuffle the tracks (plays all the tracks on the CD in a random order).

## REMOTE CONTROL

 
### GN REMOTE CONTROL

To use the remote, please ensure that the CD mode is selected.

## VOLUME CONTROL

To enable or disable the digital volume control:

1. Ensure there is no CD and the display shows "NO DISC"
2. Select CD from the remote.
3. Enter the sequence F1-1-7-F2 on the remote.
4. The display will show "VOLUME CONTROL ENABLED" or "VOLUME CONTROL DISABLED".

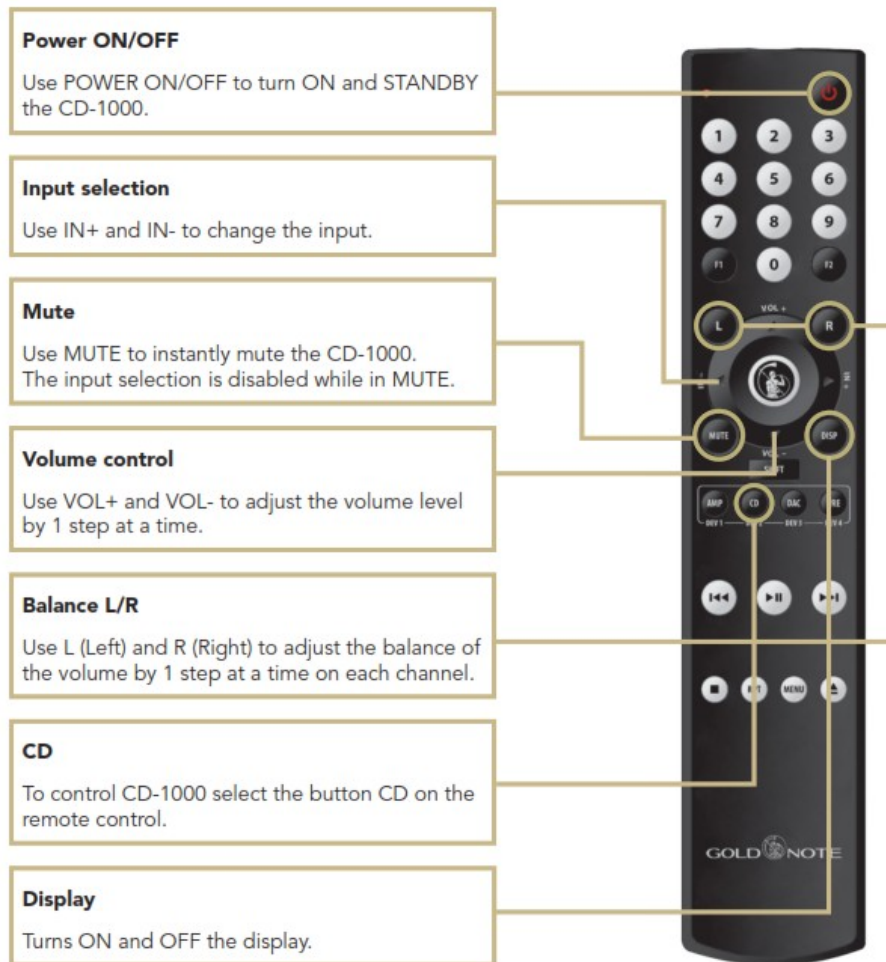

## PRODUCT REGISTRATION

### PRODUCT REGISTRATION

We recommend to register the unit on our internet website within 15 days from the purchase at [www.goldnote.it/product-registration](http://www.goldnote.it/product-registration). If the unit is not registered correctly or has been purchased from a different country of the purchaser home address the unit will not be covered by any warranty and the registration will be refused. Please note that the warranty does not cover in any case: Tubes, Phono Cartridge Stylus and Batteries.





[www.goldnote.it/productregistration](http://www.goldnote.it/productregistration)

#### **WARNING**

Gold Note products should only be opened, serviced, and inspected by certified Gold Note technicians and dealers. Work performed by unqualified personnel may cause serious damage or personal injury. Opening of the product by non-authorized personnel will void the guarantee. In this case, contact your dealer to be advised on how the fault can be solved. Do not return any object directly to the factory or to the distributor without being authorised to do so.

#### **WARRANTY**

All Gold Note products come with a warranty against defective materials and workmanship. Any service and inspection must be carried out by a Gold Note dealer or distributor so in case you need any assistance with this product, please contact the seller.

#### **PLEASE NOTE**

Descriptions and technical characteristics may vary at any time and without notice.

#### **WARNING**

Gold Note products should only be opened, serviced, and inspected by certified Gold Note technicians and dealers. Work performed by unqualified personnel may cause serious damage or personal injury. Opening of the product by non-authorized personnel will void the guarantee. In this case, contact your dealer to be advised on how the fault can be solved. Do not return any object directly to the factory or to the distributor without being authorised to do so.

#### **TROUBLESHOOTING**

PROBLEM	CAUSE	SOLUTION
The remote doesn't work.	The GN remote can be used to control more than one unit. To control each unit the correct mode must be selected on the remote.	Press the "CD" button on the remote.
	The batteries are too low.	Replace the batteries in the remote.
	The unit is not powered correctly.	Check that the power cord and the wall outlet are working.

The unit doesn't work.	The unit has triggered the protection mode due to improper use or unstable power supply.	Switch off the master switch and wait 60 seconds, then turn the unit on.
	The fuse in the AC socket is blown.	Call a certified Gold Note dealer to schedule a service operation. Do not attempt to replace the blown fuse on your own
The digital RCA output doesn't work.	The connection cable used is not a 75Ω digital cable.	Use a 75Ω digital cable.
	Your AC power system is not grounded.	Contact a certified dealer for assistance.
There are issues with the performance of the unit.	The unit is not properly levelled.	Make sure the unit is perfectly levelled with the help of a spirit level or a high precision level.
The CD is not recognised or can't be played by the unit.	The CD is not correctly inserted.	Make sure the CD is properly inserted and with the label/printed side facing up.
	The CD is too dirty or ruined to be read.	Check the CD for scratches and dirt, try to clean the CD using a soft dry cloth.
	The CD is stuck inside the tray.	Contact a certified Gold Note dealer to remove the CD and check the unit for damages.
	The CD format is not compatible.	The CD Player is designed under the RED BOOK standard technology. Always verify that the CDs are compatible with the unit
The output signal is distorted.	Your amplifier is overloaded, resulting in overmodulation of the signal.	Try to use the RCA connection and contact the manufacturer of the amplifier to receive further information.
The audio signal is unstable and/or the audio output is not balanced.	Some components are not working correctly and might have been damaged.	Contact a certified Gold Note dealer for assistance.

## CLEANING THE UNIT

With **EXTREME** care use **ONLY** water or detergents for delicate surfaces with a very soft cloth to sweep dust and remove stains. Any acid or not extremely soft cloth will irreversibly damage the unit. Do not use alcohol.

## RELATED PRODUCTS

### ELECTRONICS

#### IS-1000

Class-A/B streaming amplifier delivering 125Watt @ 8Ω per ch. with High-Current Mosfet technology. Features

UPnP streamer, BurrBrown PCM1796 DAC, MM/ MC phono stage.

#### **P-1000**

High-quality Class-A line preamp with 8 XLR/RCA inputs and optional external power supply.

#### **PA-1175**

Class-A/B power amplifier with variable Damping Factor technology for a perfect match with all types of loudspeakers.

#### **TUBE-1012/1006**

Class-A valve output stage available with 6 or 12 valves, dedicated to the 1000 Line of electronics or units from other manufacturers.

#### **POWER SUPPLIES**

##### **PSU-1250/1000**

External power supplies dedicated to the 1000 Line of electronics to enhance musical realism, staging and deliver even finer details.

#### **LOUDSPEAKERS**

##### **XT-7**

Innovative full-range loudspeaker with a 3-way design, bass reflex port and AMT ribbon tweeter.

##### **A6 EVO II**

A slim loudspeaker with a modern Italian look for excellent sound performances.



Discover more on our website

[www.goldnote.it](http://www.goldnote.it)

Vielen Dank, dass Sie sich für eines unserer Geräte entschieden haben und herzlich Willkommen in der Welt von Gold Note, wo


wir High-End Audio und Musik in eine neue Erfahrung verwandeln.

Maurizio Aterini,  
Gründer von Gold Note





A handwritten signature in black ink, appearing to read 'Maurizio Aterini', written in a cursive style.

**GOLD**  **NOTE**  
il suono italiano

## Documents / Resources

 The image shows the cover of the Gold Note CD-1000 User Manual. It is a white cover with the Gold Note logo at the top left, the text 'USER MANUAL' in bold, and 'CD-1000' at the bottom left. There is a small gold-colored square on the right side of the cover. <p><b>USER MANUAL</b></p> <p>CD-1000</p>	<p><a href="#">GOLD NOTE CD-1000 CD-Player High-End Studios</a> [pdf] User Manual CD-1000, CD-Player High-End Studios</p>
--	---

## References

-  [Gold Note | Il Suono Italiano](#)
-  [Gold Note | Product registration](#)
-  [Gold Note | Produktregistrierung](#)
-  [Gold Note | Registrazione prodotto](#)