



Goldair GPH460 Convactor Panel Heater Instruction Manual

[Home](#) » [GOLDAIR](#) » Goldair GPH460 Convactor Panel Heater Instruction Manual 

Contents

- [1 Goldair GPH460 Convactor Panel Heater](#)
- [2 General Care and Safety Guide](#)
- [3 General Care and Safety Guide](#)
- [4 Installation Instructions](#)
- [5 Operating Your Heater](#)
- [6 Operating Your Heater](#)
- [7 CARE AND CLEANING](#)
- [8 Two Year Warranty](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)



Goldair GPH460 Convactor Panel Heater



General Care and Safety Guide

YOUR SAFETY IS IMPORTANT TO US. PLEASE ENSURE YOU TAKE NOTE OF THE INSTRUCTIONS AND WARNINGS OUTLINED IN THIS MANUAL.

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

WARNING: You must not cover this appliance. Covering this appliance presents fire risk and will activate the safety fuse; permanently disabling the unit.

WARNING: Do not use this appliance in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

WARNING: To reduce the risk of fire, keep textiles, curtains, or any flammable material a minimum distance of 1 metre from the air outlet.

- Use only the voltage specified on the rating label of the appliance.
- Keep all objects at least 1 metre from the front, sides and rear of the appliance.
- This appliance is intended for household use only and not for commercial or industrial use.
- Indoor use only.
- Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.
- Do not use the appliance if it has been dropped or damaged.
- The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are

removed regularly by unplugging the appliance and vacuum cleaning the air vents and grills.

General Care and Safety Guide

- Never use the appliance to dry clothes.
- Always unplug appliance when not in use.
- When the appliance has been unpacked, check it for transport damage and ensure all parts have been delivered. If parts are missing or the appliance has been damaged, contact the Customer Services Team.
- Do not use if there are visible signs of damage to the appliance.
- Do not connect the appliance to mains supply until completely assembled and adjusted.
- Ensure hands are dry before handling the plug or main unit.
- Ensure appliance is on a flat, stable, heat-resistant surface.
- Do not operate with cord set coiled up as a heat build up is likely, which could be sufficient to become a hazard.
- Carry out regular checks of the supply cord to ensure no damage is evident
- Do not operate this appliance with a damaged cord, plug or after the appliance malfunctions or has been dropped or damaged in any manner. Take to a qualified electrical person for examination, electrical service or repair.
- Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that all cord has been removed from any cord storage area and is unrolled before use.
- It is recommended that this appliance is plugged directly into the wall socket. Power boards are not rated to supply power to high wattage appliances.
- A correctly specified, undamaged extension cord may be used with this appliance provided it is used in a safe manner.
- Do not remove plug from power socket until the appliance has been switched off.
- Do not remove plug from power socket by pulling cord; always grip plug.
- Do not place cord under carpet or cover with rugs or furniture. Arrange the cord so it cannot be tripped over.
- Don't place appliance on bedding or on thick & long carpet where the openings may get blocked.
- Switch off and use handle provided when moving
- Do not place appliance close to radiant heat source.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
- Do not sit on the appliance.
- Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning.
- Do not operate in areas where petrol, paint or other flammable liquids are used or stored.
- Do not use this appliance in the immediate surrounds of a bath, a shower, or a swimming pool or other liquids.
- The appliance must not be immersed in any liquids.
- There are no user serviceable parts installed in the unit.
- Do not place the unit in wardrobes or other enclosed spaces as this may cause fire hazards.
- This unit is not supposed to be used in or around locations where foodstuffs, works of art or delicate articles of science, etc. are stored.
- If your appliance does not work, or is not working properly, contact the place of purchase or the Customer Services Team.

Assembly Instructions

Before using this appliance, it must either be wall mounted or have the castor plates and castors fitted. This appliance has been supplied with '1 way screws' for permanent installation of the feet. This is a safety requirement for the New Zealand and Australian market.

FREE STANDING

1. Ensure the appliance is unplugged and power switches are off.
2. Carefully turn the main body upside-down on a scratch-free and stable surface. Be careful to prevent damage to the cosmetic finish or your floor surfacing.
3. Align the screw hole on the Castor Wheel Bracket with the screw hole on the base of the appliance.
4. Attach Castor Wheel Bracket with the '1 way screws' provided and ensure the bracket sits firmly in place (do not over tighten). Firmly press Castor Wheels into the slots provided on the Castor Wheel Bracket until they click into place. Some force may be required.
5. Set appliance upright.

NOTE: The wall bracket edges may be sharp. It is recommended that if using as a free standing appliance please remove the wall bracket from the back of the heater.



Installation Instructions

 
The appliance must not be located immediately below a socket outlet.

NOTE: Your Panel Heater should be installed with at least 150mm clearance from the floor and any other surrounding parts including other appliances and side walls.

At least 300mm clearance from ceilings, shelves and soft furnishings.


Note: Do not run the power cord behind the heater.

WALL MOUNTED HEATERS ARE ONLY TO BE MOUNTED ON HEAT RESISTANT WALLS THAT COMPLY WITH CURRENT AS/NZS SPECIFICATIONS & BUILDING REGULATIONS

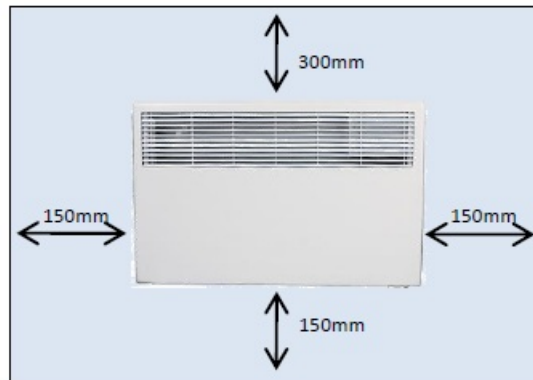


WALL MOUNTED

 1. Make sure the appliance is unplugged and power switches are off.
2. Position the panel appliance within one metre of a wall socket. Do not mount in front of or below the wall socket. Ensure there is at least 150mm clearance from the bottom and sides of the appliance and at least 300mm above.
3. Measure the distance between the mounting bracket positions on the back of the heater.
4. Mark the hole positions on the wall with a pen or pencil and check they are horizontal with a spirit level. Ensure the mount holes allow for the heater to be at least 150mm from the floor and drill holes as required.
5. Secure the mounting brackets to the wall with the mounting screws. (For masonry walls use the plastic sheaths).

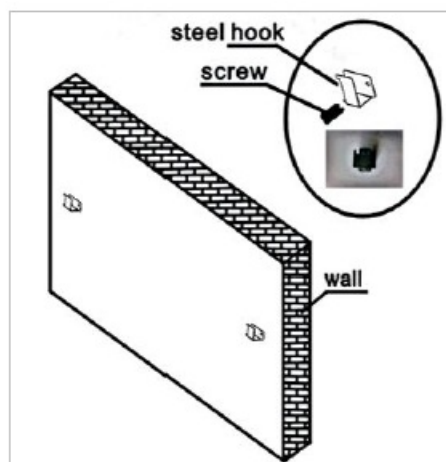

 6. Mount the 2 wall stand off fittings to the back of the heater as shown below.

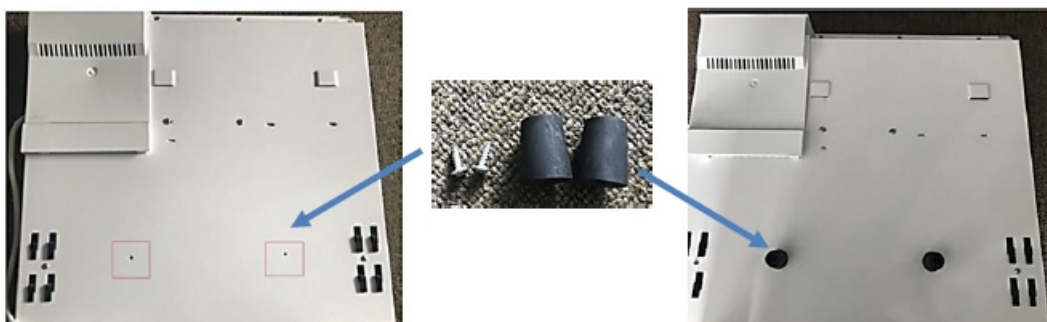

7. Slot the back of the appliance onto the mounting brackets.

8. Plug appliance into a standard 240 volt AC electrical outlet.

Operating Your Heater

Always choose a safe location for the heater, keeping in mind the safety precautions outlined. Ensure all packaging has been removed from the unit before use. Please follow the below instructions.

WARNING: In order to avoid overheating or fire, do not cover the heater.

WARNING: Keep all objects at least 1 metre from the front and 150mm from the sides of the appliance.

WARNING: Do not use this heater with a programmer, separate timer, remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.

WARNING: Never leave this heater unattended when in use.

If mounted on castors, ensure heater is on a flat, stable, heat-resistant surface.

Once the heater is in a safe operating position and all switches are in the off position, insert the power plug into the mains outlet and switch on.

CAUTION: Ensure the power cord is not tight because if pulled it may partially pull the plug from the socket. A partially inserted plug will overheat the plug and socket and could result in fire.

Operating Your Heater

CONTROL PANEL

Check that the heater is switched off before plugging into the mains supply. Turn the Power switch "ON", which is on the right hand side of the heater just below the control panel. Press the power button. A beep will sound indicating the heater is either in standby mode or in the mode prior to being turned off. Press the button to select the power setting options are either full setting or half setting

THERMOSTAT

Set the desired temperature setting by pressing the UP or DOWN buttons in the normal operating mode To find your desired temperature setting set the thermostat to the maximum heat, when the room gets to a level of warmth that is comfortable to you turn the thermostat down until it turns off The heater will now cycle on and off to maintain the rooms heat level Remember this setting for future use

COUNTDOWN TIMER

Set the timing function by pressing the button in the normal operating mode, When the " sign on the screen starts flashing, use the UP or DOWN buttons to set the desired shutdown time From 1 to 24 hours

Note You cannot set a specific turn on or turn off time

SAFETY DEVICES

This appliance has two protection devices

- Tilt Switch this will automatically turn the appliance off if the appliance is not in the correct operating position
- Thermal Fuse this disconnects the appliance permanently in case of overheating (It is non resettable)

CAUTION

The appliance generates heat during use Precautions must be taken to prevent the risk of burns, scalds, fires or other damage to persons

CARE AND CLEANING

The heater requires regular cleaning to ensure trouble free operation

- Unplug the heater from the mains supply before cleaning.
- Ensure that the heater has been allowed to cool down completely before cleaning.
- The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air vents and grills.
- Use a damp cloth (not wet) to wipe the exterior of the heater to remove dust and dirt.
- Never use solutions such as petrol, thinners or polishing agents.
- Ensure the heater is dry before plugging back into the mains supply.
- Do not attempt to dismantle the heater.
- There are no user serviceable parts. For service or repair, contact an authorised electrical service technician.



Two Year Warranty

Thank you for purchasing this Goldair product. Your product is warranted against faults and manufacture when used in normal domestic use for a period of two years. In non-domestic use Goldair limits the voluntary warranty to three months. Goldair undertake to repair or replace this product at no charge if found to be defective due to a manufacturing fault during the warranty period. This warranty excludes damage caused by misuse, neglect, shipping accident, incorrect installation, or work carried out by anyone other than a qualified electrical service technician. PLEASE KEEP YOUR RECEIPT AS THIS WILL HELP VERIFY YOUR WARRANTY. The benefits given to you by this warranty are in addition to other rights and remedies available to you under law in relation to the goods or services to which this warranty relates. In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. In New Zealand this warranty is additional to the conditions and guarantees of the Consumers Guarantee Act (1993).

Goldair – New Zealand CDB Goldair

PO Box 100-707 N.S.M.C Auckland Phone +64 (0)9 917 4000 Phone 0800 232 633 www.goldair.co.nz

Documents / Resources

	<p>Goldair GPH460 Convector Panel Heater [pdf] Instruction Manual GPH460 Convector Panel Heater, GPH460, Convector Panel Heater</p>
	<p>Goldair GPH460 Convector Panel Heater [pdf] Instruction Manual GPH460 Convector Panel Heater, GPH460, Convector Panel Heater, Panel Heater, Heater, Convector Heater</p>

References

-  [Goldair – Goldair.nz](#)
-  [Goldair – Goldair.nz](#)
-  [Goldair Australia](#)
-  [Goldair Australia](#)

Manuals+.