



 
Goldstar Electronics S3 Helmet Intercom Recorder Bluetooth Headset User Manual

[Home](#) » [Goldstar Electronics](#) » Goldstar Electronics S3 Helmet Intercom Recorder Bluetooth Headset User Manual 

GoldStar

Helmet Intercom Recorder Bluetooth Headset
User Manual





View angle wide as 135°



Sony high-definition
wide angle camera



Shoot videos and photos
of excellent resolution



Smartphone APP linkage



2350mAh battery



Intercommunication
range long as 1,000 meters

 
Contents

- [1 Product introduction](#)
- [2 Main features](#)
- [3 Installation steps](#)
- [4 Button description](#)
- [5 Operation instructions](#)
- [6 Bluetooth power on-and-off](#)
- [7 Connect to the smartphone](#)
- [8 Bluetooth walkie-talkie](#)
- [9 Product specifications](#)
- [10 Safety precautions](#)
- [11 WARRANTY CARD](#)
- [12 Documents / Resources](#)
- [13 Related Posts](#)

Product introduction


This Bluetooth integrated recorder — The Bluetooth recorder headset is designed as... phone, you can listen to the music and FM programs, make calls, and communicate with other similar products through the recorder. What is more? it can also be deployed to shoot videos and photos as well along the journey, making the whole time more fun and the companionship more memorable.

Main features

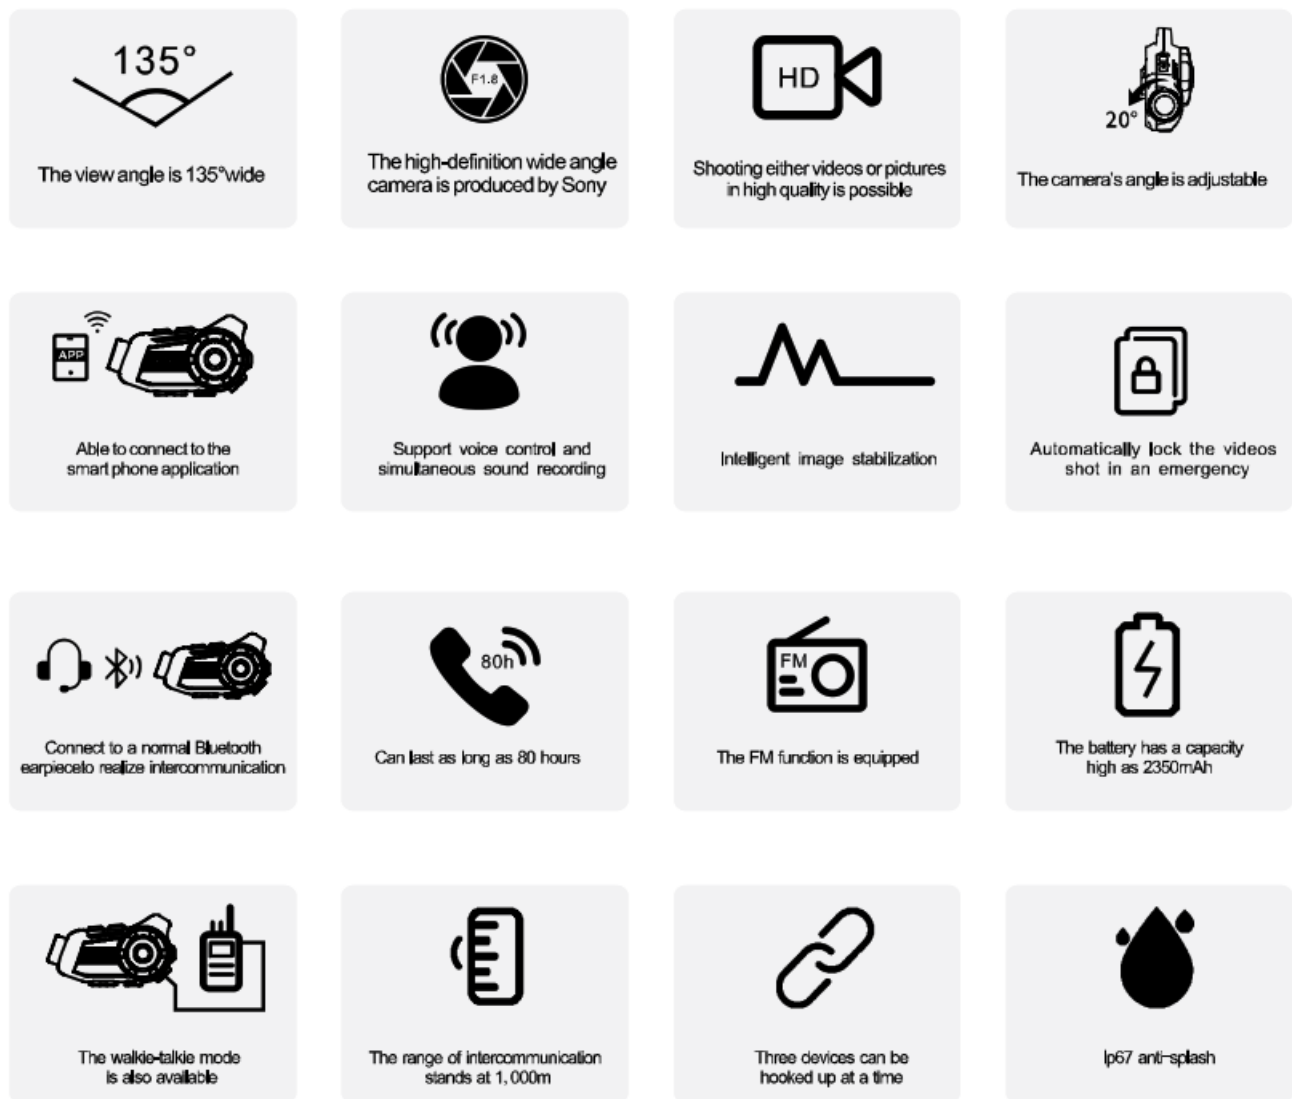

Installation steps

 1. How to attach the clamp to a helmet

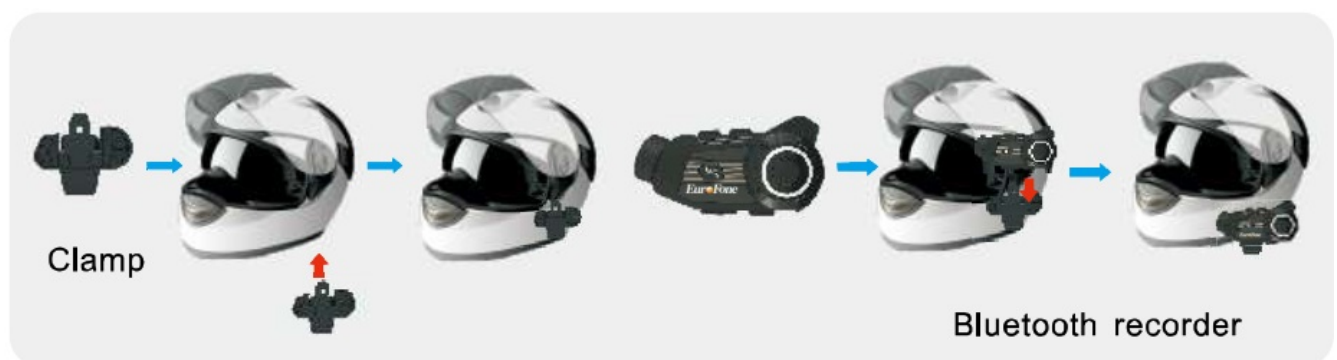


2. How to attach the Hook & Loop fastener clamp




Hook & Loop fastener clamp	Wipe clean the helmet and stick the fastener's loop side	Tap the recorder with the fastener's hook its loop side
----------------------------	--	---

 3. Memory card installation

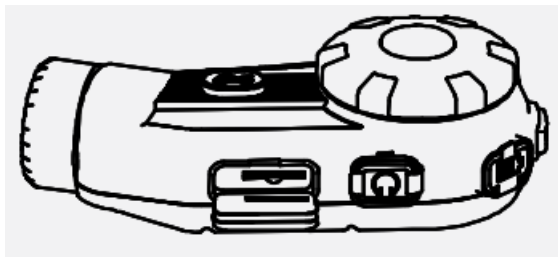


 Open the cover of the Load the card into the slot
Memory card speed: Class 10 or More

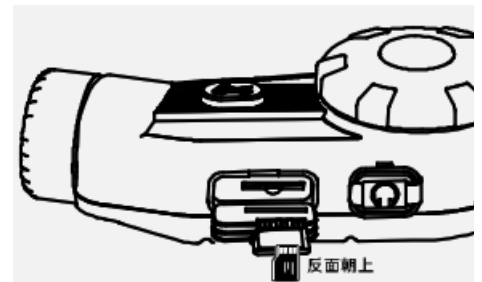

load the card into the slot shown memory card slot above
Capacity: Up to 512G

 Button description

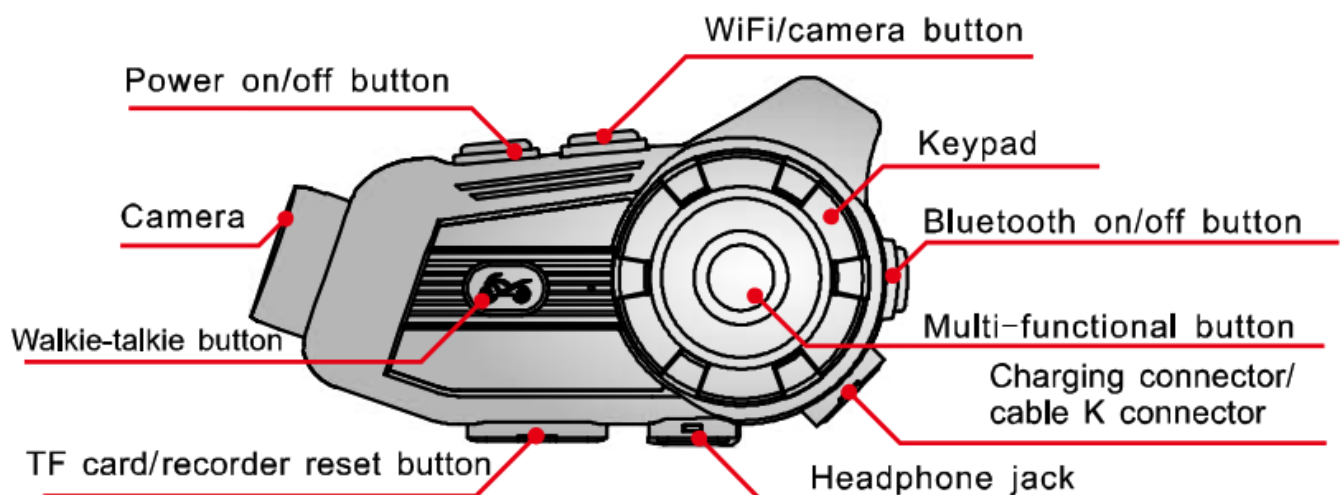

Operation instructions

5.1 Power on-and-off

1. Turn the recorder on: Click the Power on the button and hold it for 3 seconds till the reminder Welcome to Use S3 appears.
2. Turn the recorder off: Click the Power on button again and hold it for 3 seconds till the reminder Powering off

appears.

5.2 Video recording

1. Start to record: Once turned on, click the Power on the button to light up the green indicator, and the reminder The Recording Mode Has Been Activated appears
2. Stop recording: In the recording mode, click the Power on button one more time, and the reminder The Recording Mode Has Been Deactivated appears.
3. When detected no memory card, the recorder prompts the user to insert a memory card through the reminder Please Insert A Memory Card.

5.3 Photo and video lock

1. eke photos: In the Video mode, click the Camera button and a shutter sound should be heard right away.
2. Lock videos: In the Video mode, double-click the Camera button and tone sounds. To delete locked videos. users must operate through the computer instead of the application.

 
5.4 WIFI WiFi on and off

1. Tum WiFi on When the recorder is on, dick and hold the Camera button for 3 seconds to flash the green indicator, and the reminder Turning on WiFi appears.
2. Turn WiFi off: Once switched on, dick and hold the Camera button for 3 seconds to bring up the reminder to turn off WiFi.

5.5 Sound control operation


The following phrases can be used to activate sound control: Start to record sound, Stop recording sound, Switch on the hot spot mode, Switch off the hot spot mode. I want to take a photo. I want to take a video and Lock the video.

5.6 Smartphone APP connection

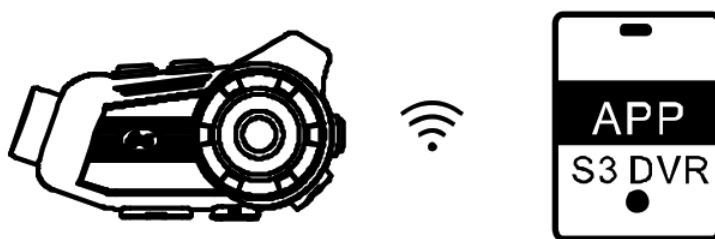

WiFi: S3 DVR WiFi password: 12345678

 5.7 Computer hook-up

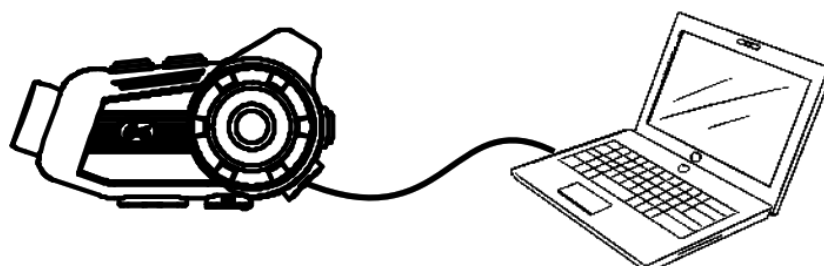

To view recorded videos and photos, use a Type C cable to connect the recorder and computer together.



<http://www.ligoor.com/app/roadcam/roadcam.html>

For iOS and Android smartphones, please scan the QR code to download.

Bluetooth power on-and-off

1. Turn on Bluetooth: When Bluetooth is off, click and hold the Bluetooth on the button for 3 seconds till the reminder Powering on appears.
2. Turn off Bluetooth: Once turned on, click and hold the Bluetooth on button again for 5 seconds till the reminder Powering off appears.

Connect to the smartphone



Pair with the smartphone via the following 3 approaches before ensuring it is only 1 meter away:

 
1. Click and hold the Power on the button for 5 seconds till the red and blue Indicators alternate and the reminder Pairing Mode is Initiating appears.
2. Disconnect S3 from the smartphone to alternate the red and blue indicators and bring up the reminder Pairing Mode is Initiating.
3. In the Power on mode, click and hold the Multifunctional button for 5 seconds till the red and blue indicators flash alternatively and the reminder Pairing Mode is Initiating appears.

Walkie-talkie pair-up

Step 1: Make sure both S3s are turned off and placed 1m apart.


Step 2: Click the Walkie-talkie button of either S3 and hold it for 3 seconds till the blue Indicator flashes and the reminder to enter the Walkie-talkie Pairing Mode appears.

Step 3: Click the Multifunctional button of the other S3 and hold it for 5 seconds till the red and blue indicators flash and the reminder to enter the Walkie-talkie Pairing Mode appears.

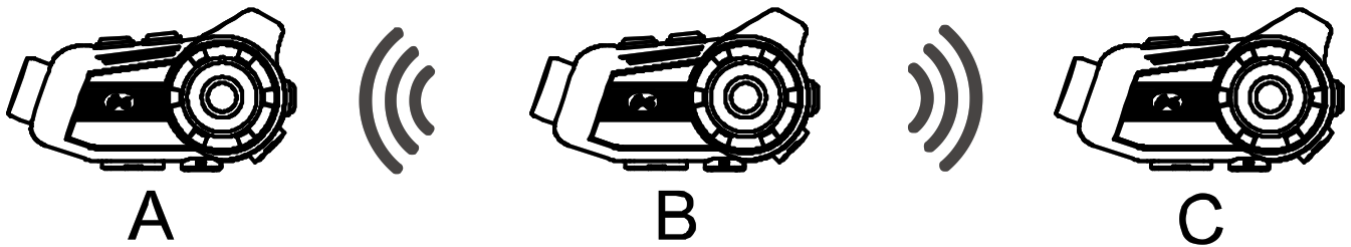

Bluetooth walkie-talkie

 1. Turn on/off the Bluetooth walkie-talkie mode: When the recorder is on, double-click the Walkie-talkie button (such mode will deactivate automatically if no connection is made within 3 minutes).
2. Walkie-talkie from B to A: Log into the Walkie-talkie mode, double-click the Multifunctional button of B to set off the reminder Initiating Walkie-talkie. When succeeded, another reminder Walkie-talkie is Ready will pop up.
3. Walkie-talkie from B to C: Log into the Walkie-talkie mode, double-click the Multifunctional button of B to set off the reminder Initiating Walkie-talkie. When succeeded, another reminder Walkie-talkie is Ready will pop up.
4. Walkie-talkie connection Timeout: While connecting for the walkie-talkie, the recorder beeps every 12 seconds, and again in 60 seconds to bring up the reminder Connection Timeout.
5. End intercommunication: After connecting for the walkie-talkie, click the Multifunctional button to bring up the reminder End Intercommunication.

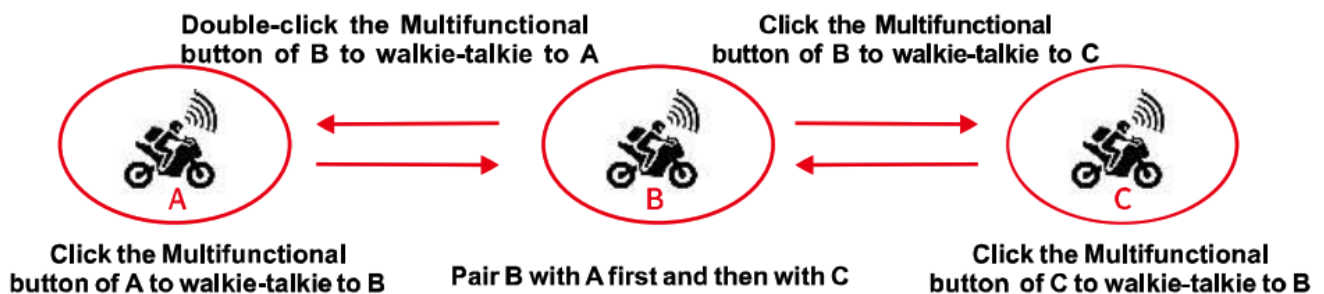

Phone calls

1. Answer the call: When there is an incoming call, click the Multifunctional button to answer it.
2. Answer the call automatically: An Incoming call is to be answered automatically if no operation is done within 10 seconds.
3. Reject the call: Click the Multifunctional button and hold it for 2 seconds to reject an incoming call.
4. Switch headphones to smartphone: To do so, click the Multifunctional button and hold it for 2 seconds while answering the call.
5. Hang up the phone: While answering the call, click the Multifunctional button to hang it up.
6. Voice assistant: Once connected, click the Multifunctional button and hold it for 2 seconds to bring up the reminder Voice Calling (to realize such a function, the smartphone must support the voice calling feature. For details, please refer to the user's manual).
7. The last number redialing: While connected, double-click the Multifunctional button to bring up the reminder Redial the Last Number.
8. Language Switch for Bluetooth: At pairing mode, double click the Intercom and Power On Button 2 times at the same time; When Power on Video function, Long Press Video and Will Button 3 seconds for Video Languages exchange.

FM radio

1. Turn on FM: In the Power on mode, double-click the Power on the button to log into the FM mode with a reminder.
2. Turn off FM: In the FM mode, double-click the Power on the button to log into the Bluetooth mode with a reminder.
3. Previous radio station: In the FM mode, turn the knob counterclockwise for 2 seconds.
4. Next radio station: In the FM mode, turn the knob clockwise for 2 seconds.

Stereo music

1. Play the music/pause: In the Music mode. click the Multifunctional button and again to pause.
2. Next track: In the Music mode, turn the knob clockwise for 2 seconds.
3. Previous track: In the Music mode, turn the knob counterclockwise for 2 seconds.

Volume control

1. Turn up the volume: In the Phone/Valkie-talkie/Music/FM mode, turn the knob clockwise (the recorder beeps when reaching the maximal volume).
2. Turn down the volume: In the FM/Music mode, turn the knob counterclockwise (the recorder beeps when reaching the minimal volume).

Audio output priority level

Level 1: Incoming calls and walkie-talkie signals from the adapter

Level 2: Incoming walkie-talkie signals from the control cable

Level 3: Bluetooth walkie-talkie

Level 4: FM & music

Indicator status and sound reminders

1. Turning on and off the recorder makes the green indicator lit for 3 seconds and in the standby mode, such indicator goes on and of every 10 seconds.
2. When the battery is low, the recorder prompts users to recharge every 120 seconds via the reminder The Battery is Low. Please Recharge!
3. The recorder reminds users of the current battery status according to the actual electricity level every time when turned on.
4. The green indicator remains lit while connecting to the computer and recording videos. and flashes once WiFi is on.
5. The blue indicator turns on for 2 seconds when switching on Bluetooth. The red indicator remains lit for 2 seconds when switching off Bluetooth. In the standby mode, the blue indicator flashes every 10 seconds.
6. In the Bluetooth mode, when the battery is low, the reminder The Battery is Low. Please Recharge! shows up every 120 seconds.
7. When turning on Bluetooth, the following reminders appear in accordance with different battery conditions: The Battery is 100% – 20%. and The Battery is Low. Please Recharge!

8. While charging, the red indicator lights up and when finished, the blue indicator remains on for 10 seconds.

Product specifications

Bluetooth version:5.1	Walkie-talkie range: 800'1.000m
Video resolution:21001os	Camera pace: 5M
Cal noise reducticrECVC8.0	Memory card: 5120 as maximum
Recorder's operation hours: 6	Recorder's standby hours: 16
Bluetooth unit's operation hours: 80	Bluetooth Munk's standby hours. more ban 1,000
Charging time: about 2 hours	Connector: Type C 3.0
Battery: rechargeable li-polymer battery	Power requirement: 5V=2A
Operation krnperatue: 14F'131F (-circus.c)	Storage temperature: 32F'104F (0°C40°C)

The operation hours of the recorder depend upon the type of the smart phone as well as its operation status. and may darer from one another. As for the operation distance. factors like environment and climate could cause differences from what is tabulated above.

Safety precautions

1. The recorder should be kept within the temperature range of 0°C-40.0 as too low or high a temperature is harmful to Its length of service.
2. Keep the recorder off flames to avoid explosion.
3. Store the recorder in a dry place if not intended to use for a long time and in that case, recharge it from time to time, usually once every three months, for the purpose of making sure it functions normally.

WARRANTY CARD

Customer_____

Telephone_____

Address of contact_____

Product model_____

Problem description_____

Warranty instructions:

Thanks for purchasing S3 and to ensure your lawful rights. please read the following with care: The warranty card is a necessity for repair service and must be provided to the company with the defective product if seeking such service. However. the warranty rules listed below apply

1. The product has been obtained properly from our authorized sales channel:
2. Any attempt to dismantle the product revokes the said warranty card.
3. Besides what's mentioned above. other conditions might also make the warranty service invalid. The company reserves the right to a final explanation.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a

residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by the manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
 2. this device must accept any interference received, including interference that may cause undesired operation.
- RF Exposure Information The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.



Documents / Resources

	Goldstar Electronics S3 Helmet Intercom Recorder Bluetooth Headset [pdf] User Manual S3, 2A68V-S3, 2A68VS3, Helmet Intercom Recorder Bluetooth Headset, S3 Helmet Intercom Recorder Bluetooth Headset
---	---