



Goldtouch KOV-GTM-FLEX Flex Wired Wireless USB Mouse User Guide

[Home](#) » [Goldtouch](#) » Goldtouch KOV-GTM-FLEX Flex Wired Wireless USB Mouse User Guide 

Goldtouch

KOV-GTM-FLEX GOLDTOUCH FLEXMOUSE WIRED (RIGHT-HANDED)

KOV-GTM-FLEX-BT GOLDTOUCH FLEXMOUSE BLUETOOTH
WIRELESS (RIGHT-HANDED)



User Guide



Contents


- 1 System Requirements
- 2 Important Bluetooth Installation Instructions
- 3 Specs & Details
- 4 The FlexMouse at a Glance
- 5 The Design
- 6 Goldtouch Bluetooth Mouse Install Guide
- 7 Windows 7
- 8 Windows 10
- 9 Mac OS X
- 10 Windows 8
- 11 Support
- 12 Warranty Information
- 13 FCC Declaration of Conformity
- 14 Canada, Industry Canada (IC) Notices
- 15 Documents / Resources
 - 15.1 References
- 16 Related Posts

System Requirements

- Windows XP
- Windows 7
- Windows 8
- Windows 10
- Macintosh OS X 10.4 or later
- Available USB port for integrated Bluetooth adapter

Important Bluetooth Installation Instructions

Much newer PCs, Mac's and laptops have a built-in Bluetooth adapter and do not require the use of a third-party Bluetooth adapter. If your computer has integrated Bluetooth and it is turned on— when you go to your Task Bar (or

System Preferences on a Mac) you should see the Bluetooth Device icon, which looks like this: . If you do not see this icon on the Task Bar or Bluetooth Devices in the Control Panel (or System Preferences), then your computer does not have a Bluetooth Receiver or it is turned off. Check manufacturer documentation for instructions to turn Wireless support Off/On. Many laptops have a slider switch for this purpose.

If you do not have an integrated Bluetooth adapter, you may purchase our optional Bluetooth dongle, available at <http://www.goldtouch.com>

Do not use our optional Bluetooth Dongle adapter if your computer or laptop already has a Bluetooth Receiver.

To determine if your computer has an embedded Bluetooth adapter, please refer to the manufacturer's documentation.

Specs & Details

Goldtouch designed this mouse with one thing in mind, putting better comfort, flexibility, and control at your fingertips.

Unlike mice and joysticks that require a completely vertical orientation of the hand, the Goldtouch FlexMouse positions the hand and wrist in a naturally sloping angle.


- The patented, sloping design elevates the thumb and declines at a 24-degree angle toward the little finger.
- Interface: USB or Bluetooth Wireless
- Buttons: 4
- Orientation: Right-Handed
- DPI Resolution: 800, 1000, 1600, 2000
- Sensor technology: Laser-grade optical tracking
- 4 Interchangeable Backs: S, M, L, XL
- Battery Type (Wireless Only): 1 AA battery
- Wired Version Cable Length: 4.9 feet
- Bluetooth Wireless Reach: 32.8 feet

The FlexMouse at a Glance

Top View — Attachment is shown to the right of the mouse.



Side View — All attachments are shown behind the mouse.

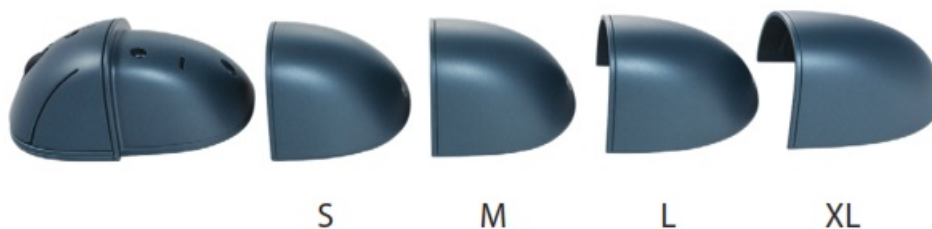

The Design

The FlexMouse takes the guesswork out of selecting the perfect mouse. Four interchangeable mousing backs, ranging from S to XL, will fit the smallest to the largest hands.

The additional attachments do not have to go unused. Smaller attachments can be used for tasks that require more precision, whereas larger attachments can be used for general use to maximize comfort.

Neutral hand posture, also known as the position of “repose” is the most relaxed and unstrained position for the hand. In this position, little muscle activity is present in the hand, wrist, or forearm. The position of repose for the hand is with fingers slightly cupped and splayed, with the thumb forming a “C” shape with the index finger. The amount of pronation varies within individuals but should be in the range of 10 to 45 degrees from the horizontal. This position is easily observed in a weightless environment, for example, while the hand is relaxed and suspended in a bath or swimming pool.

The design elements of the top of the mouse are tailored to support the hand, wrist, and forearm in a natural position, minimizing pronation and supporting the hand in a natural, at-rest position.

The design elements of the front of the mouse are tailored to support the natural curvature of the fingers in a

relaxed, non-flexed state.

Goldtouch Bluetooth Mouse Install Guide

The Goldtouch FlexMouse is designed to utilize Microsoft and Apple's built-in (native) driver support for input devices and is WHQL compliant. There are no third-party drivers required to use the Goldtouch FlexMouse. Instructions for various systems follow.

The Goldtouch FlexMouse is compatible with any embedded or third-party Bluetooth adapter. If your computer has a built-in Bluetooth adapter, the optional Goldtouch Bluetooth adapter is not required.

This Quick Install Guide will walk you through the steps required to pair your new Bluetooth mouse with your computer. Make sure if your system has an integrated Bluetooth Radio that you have the latest OEM drivers installed. These drivers are available on your computer manufacturer's site.

See our Support Page FAQs for more information on how to update your computer's Bluetooth Drivers or email support@goldtouch.com for further information.

Windows 7

Pairing the Goldtouch FlexMouse

Ensure the mouse is turned on and in pairing mode by pressing the recessed button on the bottom of the mouse.

1. Double click the Bluetooth icon on your Task Bar, OR, go to Bluetooth Devices in Control Panel.
2. Press the Pairing Button on the bottom of the Mouse for 2-3 seconds, until the Red Sensor light is blinking to indicate pairing mode. Note: You may or may not see a blinking sensor depending on your lighting conditions.
3. Click "Add a Device". From the "Add a Device" window, select the Goldtouch FlexMouse once it has been detected, then click "Next".
4. Wait until your computer tells you that it has successfully installed the driver before doing anything with your mouse. If you break the process before the device has been fully recognized and configured the installation will fail.
5. Upon successful completion, the screen will display "This device has been successfully added to this computer."
6. Click "Close".

Windows 10

Pairing the Goldtouch FlexMouse

Ensure the mouse is turned on and in pairing mode by pressing the recessed button on the bottom of the mouse.

1. From the taskbar, right-click the Bluetooth icon and click "Add a Bluetooth Device," or go to PC Settings \ Bluetooth and Other Devices.
2. Press the Pairing Button on the bottom of the Mouse for 2-3 seconds until the Red Sensor light is blinking to indicate pairing mode. Note: You may or may not see a blinking sensor depending on your lighting conditions.
3. From the "Bluetooth and Other Devices" screen, click "Add Bluetooth or Other Device." Select the Goldtouch FlexMouse once it has been detected, then click "Pair."
4. Wait until your computer tells you that it has successfully installed the driver before doing anything with your mouse. If you break the process before the device has been fully recognized and configured the installation will fail.
5. When the Goldtouch FlexMouse shows "Connected," exit the screen and begin using your mouse.

Mac OS X

Pairing the Goldtouch FlexMouse

Ensure the mouse is turned on and in pairing mode by pressing the recessed button on the bottom of the mouse.

1. Go to System Preferences.
2. Press the Pairing Button on the bottom of the Mouse for 2-3 seconds, until the Red Sensor light is blinking to indicate pairing mode. Note: You may or may not see a blinking sensor depending on your lighting conditions.
3. Click the Bluetooth or the Mouse icon. Make sure you already have the mouse in pairing mode prior to this step.
4. From the "Bluetooth Setup Assistant", select the Goldtouch FlexMouse once it has been detected, then click "Continue".
5. Upon successful completion, the screen will display "Congratulations, your computer is now set up to use your Bluetooth mouse".
6. Click "Quit".

Windows 8

Pairing the Goldtouch FlexMouse

Ensure the mouse is turned on and in pairing mode by pressing the recessed button on the bottom of the mouse.

1. From the Start screen, fetch the Charms bar, click the Settings icon, and click the Change PC Settings button.
You can summon the Charms bar's Settings pane in several ways: Mouse: Point the cursor at the screen's top- or bottom-right corner.
Keyboard: Press Windows+I and press Enter.
2. Press the Pairing Button on the bottom of the Mouse for 2-3 seconds, until the Red Sensor light it blinking to indicate pairing mode. Note: You may or may not see a blinking sensor depending on your lighting conditions.
3. From the Devices category, click the Add a Device icon.
4. Once the device is detected, select the Goldtouch FlexMouse and click "Pair".
5. When the Goldtouch FlexMouse shows "Connected," exit the screen and begin using your mouse.

Support

If you are experiencing technical difficulty or require assistance, please review our online faqs at www.goldtouch.com.

You may contact technical support online at www.goldtouch.com or by email at support@goldtouch.com.

Warranty Information

The Goldtouch FlexMouse is protected against defects by a one-year manufacturer warranty.

The Warranty is applicable to the original purchaser only and is non-transferrable. Goldtouch warrants that, at the time of purchase, the product will be in working order and will be free from defects in materials and workmanship. This Warranty does not apply to normal wear and tear, neglect, accidental damage, or modifications made by any unauthorized Goldtouch Service Representative. In the event that, during the one-year warranty period, the product is determined to be defective by an authorized Goldtouch Service Representative, the product should be returned for repair or replacement to the original place of purchase.

NOTE: For all operating systems, if a security policy requires you to enter a Passkey, enter "0000".

For additional information, please visit our website at: <https://www.goldtouch.com/btmouse-troubleshooting/>

Key Ovation, LLC
1320 Arrow Point Drive
Bldg 1, Suite 101
Cedar Park, TX 78613 USA
(512) 259-5688



FCC Declaration of Conformity

The Goldtouch FlexMouse has been tested to comply with the requirements for a Class B digital device, pursuant to part 15 of the FCC Regulations. These requirements are designed to provide reasonable protection from harmful interference in a residential or office installation. Modification or alteration to this device may void the user's authority to operate this equipment.

FCC ID: YVL-KOVGTMFLEXBT

Canada, Industry Canada (IC) Notices


This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. IC ID: 11402A-FLEXBT

European Union: 005626843-0001

China: ZL2018304950360

© 2019 Key Ovation, LLC. All rights reserved. Goldtouch, the Goldtouch logo, and Productivity through Prevention® have registered trademarks of Key Ovation, LLC

Documents / Resources

	Goldtouch KOV-GTM-FLEX Flex Wired Wireless USB Mouse [pdf] User Guide KOV-GTM-FLEX, KOV-GTM-FLEX-BT, Flex Wired Wireless USB Mouse
---	---

References

-  [Ergonomic Keyboards, Mice, Numeric Keypads And More | Goldtouch](#)