

GOOSH
15059 5FT Inflatable
Blow Up Snowman



GOOSH 15059 5FT Inflatable Blow Up Snowman User Guide

[Home](#) » [Support](#) » GOOSH 15059 5FT Inflatable Blow Up Snowman User Guide 

Contents

- [1 GOOSH 15059 5FT Inflatable Blow Up Snowman](#)
- [2 INTRODUCTION](#)
- [3 SPECIFICATIONS](#)
- [4 WHAT'S IN THE BOX](#)
- [5 FEATURES](#)
- [6 SETUP GUIDE](#)
- [7 CARE & MAINTENANCE](#)
- [8 TROUBLESHOOTING](#)
- [9 PROS & CONS](#)
- [10 WARRANTY](#)
- [11 FREQUENTLY ASKED QUESTIONS](#)
- [12 VIDEO – PRODUCT OVERVIEW](#)
- [13 References](#)

GOOSH

GOOSH 15059 5FT Inflatable Blow Up Snowman



INTRODUCTION

With its lovely and festive design, the GOOSH 15059 5FT Inflatable Blow Up Snowman is a great way to add holiday happiness to any indoor or outdoor location. With its five-foot height and integrated bright white LED lights, this weatherproof inflatable snowman is a gorgeous focal point for your Christmas décor. This inflatable is made by GOOSH, a reputable brand in seasonal décor, and it is made to be quickly and easily set up, fully inflating in a matter of minutes. Long-lasting use is guaranteed by the sturdy, high-polyester PVC material, and reliable inflation is provided by the strong integrated blower. This **\$32.99** inflatable has a 10-foot power cord, ground anchors, secured ropes, and integrated sandbags to keep it firmly in place. This UL-certified inflatable decoration has been available since September 2021 and is ideal for porches, front yards, Christmas gatherings, and more!

SPECIFICATIONS

Product Name	GOOSH 5 FT Christmas Snowman Inflatable Decoration
Price	\$32.99
Brand	GOOSH
Theme	Christmas
Cartoon Character	Snowman
Color	White
Material	High Polyester PVC (Waterproof)
Size	5 Feet Tall
Power Source	Plug-in (UL Certified Adapter, 12V)
Lighting Feature	Built-in Bright White LED Lights Enhances nighttime festive ambience
Setup Time	Inflates within minutes
Weather Resistance	Water-resistant material and strong anchors for wind resistance
Usage	Indoor & Outdoor Yard, Garden, Lawn, Christmas Parties, Holiday Events
Safety Features	Strong anchors secure it against the wind UL-certified for outdoor use
Special Features	Eye-catching LED lights Easy & quick setup Durable and weatherproof
Customer Support	24-hour after-sales service for issues or concerns

WHAT’S IN THE BOX

- 10FT extended cord
- Ground stakes
- Fastened ropes
- Built-in sandbags
- manual

FEATURES

- This 5-foot-tall inflatable snowman is ideal for both inside and outdoor holiday décor.
- Integrated White LED Lights That Are Bright Stunning midnight radiance thanks to its pure white LED lights.
- **Fast Inflation in One Minute:** Featuring a strong blower for a simple and quick setup.
- **Constructed from Waterproof Polyester PVC:** It is appropriate for outdoor use due to its superior waterproof fabric.



- **Robust Anchoring System:** Prevents overturning with integrated sandbags, ground pegs, and secured ropes.
- A UL-certified power adapter with a low 12-volt power consumption guarantees efficiency and safety.
- **Wind-Resistant Design:** The inflatable won't blow away thanks to the safe anchor system.
- The 10FT Extended Power Cord gives you the freedom to put the decoration anywhere you like.
- **Sturdy and Weather-Resistant Blower:** Made to endure outside conditions while maintaining the firmness of the inflatable.
- Eye-catching holiday décor that creates a festive atmosphere with a smiling snowman holding branches.
- **Compact for Easy Storage:** It folds up into a compact size for storage and deflates rapidly.
- Children's safety It is safe for children and dogs because of its low-voltage power and proven materials.
- Both inside and outdoor use are ideal, making it ideal for patios, gardens, yards, gatherings, and even indoor areas.
- Draws the Interest of Neighbors It's a fantastic Christmas display because of the brilliant lights and adorable snowman design.
- **Dependable After-Sales Support:** For any product-related issues, there is expert U.S. customer care available.

SETUP GUIDE

- Unpack the inflatable by taking out the blower, poles, ropes, snowman, and power adapter.

- **Pick a Setting Area:** Pick a level area free from electrical hazards, open fires, and sharp items.
- **Assure Power Access:** Use an extension cord that is suitable for outdoor use or place the snowman close to an electrical outlet.
- **Spread Out the Inflatable:** For smooth inflation, place the deflated snowman flat on the ground.
- Connect the UL-certified power adapter to a power source to secure it.
- **Turn on the Blower:** To begin the inflating process, turn on the air blower.
- **Await Complete Inflation:** The snowman takes around a minute to completely grow.
- If necessary, gently reposition the cloth to eliminate creases and guarantee even inflation.
- **Secure the Sandbags:** For stability, the integrated sandbags add extra weight.
- Use the ground stakes and ropes that come with the anchor to firmly secure it.
- **Tighten the Ropes Evenly:** To avoid tilting, make sure the ropes are balanced.
- **Verify LED Lighting:** Verify that the snowman's internal LED lights are operating as intended.
- **Properly Position the Decoration:** Take a step back and move the decoration to get the greatest view.
- Verify the snowman's final stability by making sure it is firmly attached and won't topple over.
- Have Fun with Your Holiday Display! You can now bring Christmas cheer with your GOOSH inflatable snowman!



CARE & MAINTENANCE

- **Turn Off When Not in Use:** To prolong the inflatable’s life and avoid overheating, unplug it.
- **Stay Away from Sharp Objects:** Keep it away from fences, tree branches, and sharp edges.
- Before storing, deflate by turning off the blower and letting the air gradually leave.
- **Store in a Cool, Dry Place:** To avoid material deterioration, keep it in a storage bag out of direct sunlight.
- Steer clear of over-inflation as this might weaken the seams and decrease their longevity.
- **Safe How to Handle Windy Conditions:** When there are high winds, use additional weights or stakes.
- **Clean Gently:** To remove dirt or stains, use a gentle cloth and a light soap.
- **Examine Before Use:** Prior to inflating, look for any tears, air leaks, or damaged wiring.
- **Keep Electrical Components Dry:** Make sure the blower, adapter, and power cord are kept out of the water.
- **Fix Minor Tears Right Away** For small repairs, use a patch kit or fabric repair glue.
- **Avoid Extended Rain or Snow Exposure:** Although the blower is water-resistant, it is not waterproof.
- **Avoid Placing Near Heat Sources or Fires** Avoid placing it near heaters, fireplaces, or open flames.
- Make sure the air intake from the blower is clear. In order to maintain vigorous inflation, avoid obstructing the blower’s air intake.
- **Avoid Dragging on Rough Surfaces:** To avoid damage, always raise the inflatable while relocating it.
- Have a great holiday season! Your GOOSH inflatable snowman will last for many years if you take good care of it!

TROUBLESHOOTING

Issue	Possible Cause	Solution
Inflatable won’t inflate	Power not connected	Ensure the plug is properly inserted into an outlet
Snowman deflates quickly	Air leakage or damage	Check for holes and patch them with the provided repair kit
LED lights not turning on	Loose connection or faulty LED	Check wiring and contact support if needed
Inflatable tilting or falling	Not properly secured	Use included ropes, stakes, and sandbags for stability
Blower not working	Motor failure	Restart the unit or contact the manufacturer
Inflatable doesn’t fully expand	Blocked air intake	Ensure the fan is free of debris
Moves in strong winds	Insufficient anchoring	Add extra weights or relocate to a sheltered spot
Takes long to inflate	Weak blower performance	Check for obstructions and ensure the blower is functioning
Snowman won’t deflate fully	Trapped air pockets	Open all air vents and fold properly
Adapter gets warm	Extended use	Unplug when not in use to prevent overheating

PROS & CONS

Pros:

- 5FT snowman with bright LED lights for a festive holiday display.
- Quick inflation within a minute for hassle-free setup.
- Waterproof and durable PVC construction for indoor/outdoor use.
- Includes ground stakes, sandbags, and ropes for stability.
- Certified UL outdoor adapter with 12V low voltage for safety.

Cons:

- Must remain plugged in to stay inflated.
- Not ideal for extreme weather conditions.
- LED lights are non-replaceable.
- Requires additional weight in strong winds.
- Folds take up storage space when deflated.

WARRANTY

GOOSH provides a satisfaction guarantee for the 15059 5FT Inflatable Blow Up Snowman. If you experience any defects, inflation issues, or missing parts, their customer support team will provide a replacement or refund within 24 hours of inquiry.

FREQUENTLY ASKED QUESTIONS

What is the GOOSH 15059 5FT Inflatable Blow Up Snowman?

The GOOSH 15059 Christmas Inflatable Snowman is a 5-foot tall, LED-lit, blow-up decoration designed for indoor and outdoor Christmas displays. It features a smiling snowman with branch hands and comes with ground stakes, fasten ropes, and sandbags for stability.

What type of lights are inside the GOOSH 15059 5FT Inflatable Blow Up Snowman?

The GOOSH 15059 inflatable comes with built-in bright white LED lights, making it highly visible at night.

How long does it take to inflate the GOOSH 15059 5FT Snowman?

This inflatable snowman fully inflates within a minute after plugging it in.

Why is my GOOSH 15059 5FT Inflatable Blow Up Snowman not inflating?

Ensure that the blower is plugged in properly and the power switch is on. Check if the air intake is blocked by leaves, dirt, or snow. Verify that the fasten ropes or stakes are not restricting inflation.

Why does my GOOSH 15059 5FT Inflatable Blow Up Snowman keep deflating?

Make sure the zipper is fully closed to avoid air leaks. Check for any holes or tears in the inflatable material. Ensure the blower is continuously running while in use.

Why are the LED lights inside my GOOSH 15059 5FT Inflatable Blow Up Snowman not working

Confirm that the power adapter is securely connected. If only some lights work, the wiring inside might be loose. Check for moisture exposure if used in heavy rain or snow.

Why is my GOOSH 15059 5FT Inflatable Blow Up Snowman leaning or falling over?

Ensure that the fasten ropes and ground stakes are properly secured. Make sure the built-in sandbags are positioned correctly for stability. Place the inflatable on a flat surface to prevent tipping.

VIDEO – PRODUCT OVERVIEW



<https://manuals.plus/wp-content/uploads/2025/03/GOOSH-15059-5FT-Inflatable-Blow-Up-Snowman-User-Guide-1.mp4>

- [User Manual](#)

[Manuals+](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.