

GOOSH
27151 5FT
Inflatables
Gingerbread Man



GOOSH 27151 5FT Inflatables Gingerbread Man User Guide

[Home](#) » [Support](#) » GOOSH 27151 5FT Inflatables Gingerbread Man User Guide 

Contents

- [1 GOOSH 27151 5FT Inflatables Gingerbread Man](#)
- [2 INTRODUCTION](#)
- [3 SPECIFICATIONS](#)
- [4 WHAT'S IN THE BOX](#)
- [5 FEATURES](#)
- [6 SETUP GUIDE](#)
- [7 CARE & MAINTENANCE](#)
- [8 TROUBLESHOOTING](#)
- [9 PROS & CONS](#)
- [10 WARRANTY](#)
- [11 FREQUENTLY ASKED QUESTIONS](#)
- [12 VIDEO – PRODUCT OVERVIEW](#)
- [13 References](#)

GOOSH

GOOSH 27151 5FT Inflatables Gingerbread Man



INTRODUCTION

The GOOSH 27151 5FT Inflatable Gingerbread Man will give your décor a touch of delicious festive charm. With its integrated LED lights, this cute Christmas inflatable is sure to draw attention and is a fun addition to any indoor or outdoor area. Because it is made of waterproof polyester with great strength, it is long-lasting, rip- and tear-resistant, and guarantees enduring holiday joy. Continuous airflow from the strong-duty blower ensures easy and rapid inflation in a matter of minutes. It is the ideal size for any holiday setting, standing five feet tall. Ropes, ground stakes, a blower, and a storage bag are all included in the box to ensure safe installation and simple storage at the end of the season. Since its debut in 2022, this festive inflatable from GOOSH, which retails for **\$49.99**, has been popular, bringing warmth and holiday cheer into every house!

SPECIFICATIONS

Product Name	GOOSH 5 FT Christmas Inflatables Gingerbread Man Outdoor Decoration
Price	\$49.99
Brand	GOOSH
Theme	Christmas
Cartoon Character	Gingerbread Man Cookie
Colour	Black, Red, White
Material	High-Strength Waterproof Polyester
Size	5 Feet Tall
Power Source	Plug-in (10FT power cord, CE & UL Certified Adapter)
Lighting Feature	Built-in Bright LED Lights Enhances nighttime holiday ambience
Setup Time	Inflates within minutes
Weather Resistance	Strong, waterproof, weather-resistant material
Usage	Indoor & Outdoor Yard, Garden, Lawn, Christmas Parties, Holiday Events
Safety Features	UL & CE-certified adapter Zipper closure to prevent air leakage
Special Features	Cute & festive Gingerbread Man design Quick inflation & easy storage

WHAT’S IN THE BOX

- powerful-duty blower for continuous airflow
- 10FT power cord
- Storage bag
- Ground stakes
- Securing ropes

FEATURES

- **Adorable Gingerbread Man Design:** This design adds a charming and joyous touch to your yard.
- **Integrated LED Lighting** At night, the inflatable is visible and striking thanks to pre-installed LED lights.
- **Durable Waterproof Polyester Material:** Constructed from weather-resistant, high-strength polyester, this material guards against rips, tears, and rain.



- **Strong Blower for Continuous Inflation:** It comes with a powerful blower that maintains its inflation continuously.
- **Fast Inflation & Deflation:** Featuring a bottom zipper for effortless deflation and speedy setup.
- **Wind-Resistant Stability:** To stop movement in windy circumstances, ground pegs and anchoring ropes are used.
- **Ideal for Both Indoor and Outdoor Use :** It can be set up in patios, lawns, gardens, or indoor Christmas gatherings.
- **10FT Power Cord for Adaptable Positioning:** This long power line eliminates the need for an extension cord and enables flexible positioning.
- **Convenient Storage Bag Included:** For reuse, simply fold and store in the included storage bag after deflation.
- To stop air leaks, use a secure zipper closure. Full inflation is ensured by zipping up, while rapid deflation is made possible by unzipping.
- **Safe & Family-Friendly Design:** It is safe for children and pets thanks to its low voltage adaptor and flame-resistant fabric.
- **Highly Visible Festive Decoration:** Ideal for Christmas displays, vibrant hues and lights add to the festive ambience.
- **Multipurpose for Different Holidays:** Although it was made for Christmas, it may also be utilized for themed events or winter parties.

- Sturdy yet lightweight construction makes it simple to carry and install, and once fastened, it remains securely in place.
- **Dependable After-Sales Support:** GOOSH offers customer service for warranty claims, replacements, and troubleshooting.



SETUP GUIDE

- Unpack the inflatable by taking out the stakes, ropes, power adapter, blower, storage bag, and gingerbread man.
- **Pick a Good Site:** Pick a level, open area that isn't obstructed by sharp items, heat sources, or impediments.
- **Ascertain Power Access:** Position the inflatable near an electrical outlet (if required, use an outdoor extension cord).
- **Spread the Inflatable Flat:** Make sure the zipper is closed to stop air leaks and spread the deflated gingerbread man on the ground.
- **Connect the Power Adapter:** Connect the blower and a power supply to the UL-certified adapter.
- **Turn on the Blower:** The gingerbread man will begin to inflate on its own when you turn on the blower.
- Keep an eye on the inflation process by letting it fill up completely and looking for any creases or misalignments.
- Use sandbags to secure the base; make sure the integrated sandbags offer additional stability.

- Use the ground stakes and securing ropes that come with the anchor to hold it securely in place.
- Verify that the bottom zipper is completely closed for optimal air retention.
- **Modify Position & Shape:** To get the finest display appearance, gently modify the inflatable.
- **Test the LED Lights:** Make sure the integrated lights are working correctly for a dazzling and joyous display.
- **Check for Wind Resistance:** If necessary, add more weights or tighten the ropes in windy conditions.
- **Keep the Blower Intake Unblocked:** To ensure smooth functioning, make sure nothing is blocking the blower's airflow.
- Have Fun with Your Holiday Display! You can now entertain your neighbors and guests with your GOOSH Gingerbread Man inflatable!

CARE & MAINTENANCE

- **Unplug When Not in Use:** To prevent overheating or needless wear, always turn off the power.
- **Avoid Rough Surfaces & Sharp Objects:** To avoid tearing, keep it away from fences, sharp objects, and rough surfaces.
- Before storing, make sure the inflatable is completely deflated and folded neatly.
- **Store in a Dry Place:** Keep it in a cool, dry place using the included storage bag.
- Avoid overinflating as this might cause air leaks and strain the seams.
- Regularly check the anchoring to make sure the ropes and stakes are still tight and won't topple over.
- **Clean with a Damp Cloth:** Use a soft cloth and a mild detergent to gently remove dirt and stains.
- **Check for Damage Before Use:** Use fabric glue to quickly fix any minor rips or wear in the cloth.
- **Keep Electrical Components Dry:** In damp weather, make sure the power adapter and blower remain dry.
- **Avoid Extended Exposure to Extreme Weather:** Although weather-resistant, durability may be impacted by severe storms or snow.
- **Avoid Placing Near Heat Sources:** Steer clear of open fires, fireplaces, and heaters.
- To guarantee adequate airflow to the blower, remove any debris, snow, or leaves obstructing the fan intake.
- When moving, lift rather than drag because doing so can harm the inflatable's material.
- **Let it Dry entirely Before Storing:** To avoid mold growth, let the inflatable dry entirely before storing if it is damp.
- Reuse for Upcoming Holidays! Your gingerbread guy inflatable can survive for many holiday seasons if you take good care of it!

TROUBLESHOOTING

Issue	Possible Cause	Solution
Inflatable won't inflate	Power not connected	Ensure the plug is securely inserted into an outlet
Deflates quickly	Air leakage or unzipped bottom	Check for tears and ensure the bottom zipper is fully closed
LED lights not working	Loose wiring or faulty LED	Inspect wiring and contact support for assistance
Inflatable keeps falling over	Not properly anchored	Use ground stakes, ropes, and sandbags for extra stability
Blower not working	Motor failure or blockage	Check for obstructions in the blower and restart
Gingerbread Man doesn't fully expand	Blocked air intake	Ensure the blower is free of debris
Moves in strong winds	Insufficient anchoring	Use additional weights or relocate to a less windy area
Takes too long to inflate	Weak blower performance	Verify power source and check the blower for debris
Won't deflate properly	Trapped air inside	Open all air vents and fold systematically
Power cord is too short	Placement issue	Use an outdoor extension cord for flexible placement

PROS & CONS

Pros:

- Eye-catching 5FT Gingerbread Man with LED lights for a festive glow.
- Weather-resistant, high-quality polyester fabric ensures durability.
- Quick inflation with a powerful blower for hassle-free setup.
- Comes with ground stakes, ropes, and a storage bag for stability and convenience.
- Zipper closure design allows fast deflation and easy storage.

Cons:

- Needs to remain plugged in to stay inflated.
- May require extra anchoring in windy conditions.
- LED lights are non-replaceable.
- Not ideal for extremely cold or wet environments.
- Slightly higher price compared to similar inflatables.

WARRANTY

GOOSH provides a quality guarantee for the **5FT Inflatables Gingerbread Man**. If you encounter defects, missing parts, or inflation issues, their customer support team offers replacements or refunds within 24 hours of inquiry.

FREQUENTLY ASKED QUESTIONS

What is the GOOSH 27151 5FT Inflatables Gingerbread Man?

The GOOSH 27151 5FT Inflatables Gingerbread Man is a Christmas-themed blow-up decoration designed for indoor and outdoor use, featuring built-in LED lights and a festive gingerbread design to create a joyful holiday atmosphere.

What type of lighting is inside the GOOSH 27151 5FT Inflatables Gingerbread Man?

It features built-in bright LED lights that enhance the decoration's visibility and holiday spirit during nighttime.

Is the GOOSH 27151 5FT Inflatables Gingerbread Man waterproof?

It is made from high-strength waterproof polyester, making it resistant to rain and snow for outdoor durability.

How long does it take to fully inflate the GOOSH 27151 5FT Inflatables Gingerbread Man?

The inflation process takes approximately 1 minute with the included powerful-duty blower.

Why is my GOOSH 27151 5FT Inflatables Gingerbread Man not inflating properly?

Ensure that the blower is plugged in correctly and switched on. Check for air leaks by making sure the bottom zipper is completely closed. Remove any objects blocking the air intake of the blower.

Why does my GOOSH 27151 5FT Inflatables Gingerbread Man keep deflating?

Ensure the bottom zipper is fully zipped to prevent air leakage. The blower must remain on continuously to keep it inflated. Check for any rips or punctures in the fabric.

Why are the LED lights inside my GOOSH 27151 5FT Inflatables Gingerbread Man not turning on?

Make sure the power adapter is properly connected. If the LEDs are flickering or dim, check if the internal wiring is secure. If exposed to moisture, allow the decoration to dry before use.

VIDEO – PRODUCT OVERVIEW



<https://manuals.plus/wp-content/uploads/2025/03/GOOSH-27151-5FT-Inflatables-Gingerbread-Man-User-Guide-1.mp4>

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.