

**GOOSH**  
27154 Inflatables  
Snowman with  
Box



## GOOSH 27154 Inflatables Snowman with Box User Guide

[Home](#) » [GOOSH](#) » GOOSH 27154 Inflatables Snowman with Box User Guide 

### Contents

- [1 GOOSH 27154 Inflatables Snowman with Box](#)
- [2 INTRODUCTION](#)
- [3 SPECIFICATIONS](#)
- [4 WHAT'S IN THE BOX](#)
- [5 FEATURES](#)
- [6 SETUP GUIDE](#)
- [7 CARE & MAINTENANCE](#)
- [8 TROUBLESHOOTING](#)
- [9 PROS & CONS](#)
- [10 WARRANTY](#)
- [11 FREQUENTLY ASKED QUESTIONS](#)
- [12 VIDEO – PRODUCT OVERVIEW](#)
- [13 References](#)

# GOOSH

**GOOSH 27154 Inflatables Snowman with Box**



## INTRODUCTION

The GOOSH 27154 Inflatables Snowman with Box is a wonderful, multicoloured decoration that can be used both indoors and outdoors to add some color to your holiday season. This adorable inflatable snowman, which costs \$34.98, brightens any Christmas display with its festive scarf and present box. With its integrated revolving multicoloured LED lights, it adds a mystical glow to any lawn, yard, or party area. The inflatable's 10-foot power cord and high-performance waterproof fan assure rapid and effective inflation. This model, which is made by GOOSH, is robust in a variety of environments because it is made of sturdy, weather-resistant polyester. This snowman is made to last through the Christmas season, rain or shine, giving your family and guests a pleasant holiday atmosphere.

## SPECIFICATIONS

Brand	GOOSH
Model Number	27154
Theme	Christmas
Cartoon Character	Snowman
Color	Colorful
Occasion	Christmas, Holiday Decoration
Material	Waterproof Polyester
Height	6 feet
Design	Snowman holding a box with a scarf
Lighting	Built-in rotating colorful LED lights
Inflation System	High-performance waterproof fan
Power Source	CE and UL-certified adapter
Power Cord Length	10 feet
Weather Resistance	Strong and durable, suitable for outdoor use in various weather conditions
Stability Accessories	Sandbag, ground stakes, securing ropes
Storage Features	Includes a storage bag, easy to deflate, fold, and store
Usage	Outdoor Christmas Yard, Garden, Lawn, Indoor Party Decor
Item Weight	3.52 pounds
Price	\$34.98

### WHAT’S IN THE BOX

- Inflatables Snowman with Box
- User Guide

### FEATURES

- Six feet tall is the ideal height to create a warm and inviting Christmas display.
- **Adorable Snowman Design:** This design adds a happy festive vibe with a happy snowman clutching a gift box.
- **Integrated Rotating LED Lighting** The inflatable’s internal LED lights are colorful and bright, improving visibility at night.
- **Fast Inflation:** Featuring a powerful waterproof fan, this device inflates quickly and easily.
- A CE and UL-certified adapter guarantees steady power performance and electrical safety.
- A 10-foot power cord gives you the freedom to arrange it in various spots around your house or yard.
- **Weather-Resistant Polyester:** Designed for outdoor use, this fabric is made of premium, long-lasting, waterproof polyester.



- Secure and steady includes a sandbag, securing ropes, and pegs to keep it securely fastened.
- **Simple to Store:** It folds up small and deflates rapidly, making it easy to keep in the storage bag that comes with it.
- When fully inflated, a zippered air valve stops air leaks and permits controlled deflation.
- **Ideal for a Variety of Occasions:** Mostly for Christmas, but also suitable for gatherings and events with a winter theme.
- Both indoor and outdoor use are possible with this product.
- **Energy-Efficient LED Lights:** These lights provide brilliant illumination with less power consumption.
- Portable and lightweight It is easy to move and reposition because it weighs only 3.52 pounds.
- **Kid-Friendly & Eye-Catching:** Designed to offer Christmas cheer to both adults and children.





## SETUP GUIDE

- **Select a Site:** For setup, pick a spotless, level area that is clear of obstacles and sharp items.
- The inflatable should be unpacked by taking it out of the storage bag and placing it flat on the ground.
- **Verify Power Source:** Make sure the 10-foot power wire is connected to the proper outside electrical socket.
- **Close the Zipper:** To avoid air leaks, make sure the bottom zipper is completely closed before inflating.
- **Plug into an Outlet:** Attach a power supply to the UL-certified adaptor.
- **Turn on the Blower:** The snowman will immediately start to inflate thanks to the built-in fan.
- Keep an eye on inflation to make sure the inflatable takes on its correct shape in a matter of minutes.
- **Secure with Sandbag:** To provide stability, place the internal sandbag inside.
- **Place Stakes in the Ground:** Use the designated loops to drive the provided stakes into the ground.
- **Attach Securing Ropes:** For additional stability, fasten the supplied ropes to the ground stakes or adjacent structures.
- Verify that the revolving LED lights are in good working order and are oriented for the best visibility.
- **Adjust for Stability:** Verify that the snowman is not sagging and is standing straight.
- **Maintain Unhindered Airflow:** Keep snow, leaves, and cloth away from the blower's air entrance.

- **Final Inspection:** Verify that all stakes, ropes, and attachments are secure by checking them twice.
- Now that your inflatable snowman is ready to spread Christmas cheer, enjoy the festive display!

CARE & MAINTENANCE

- **Keep It Clean:** After using it, wipe it off with a moist cloth to get rid of any dust, debris, or grime.
- **Avoid Sharp Objects:** Steer clear of anything sharp that might pierce the fabric.
- Keep an eye out for air leaks by routinely checking cloth and seams for wear or tiny holes.
- Prior to folding and storing, always make sure that the product is fully deflated.
- **Store in a Dry Place:** To avoid mould and mildew, keep the inflatable in a cool, dry place.
- **Protect against Severe Weather:** To avoid damage, take down during periods of intense rain, snowfall, or high winds.
- Keep the electrical connections dry and out of the water with a secure power cord.
- **Use a Ground Cover if Necessary:** Lay a tarp below if you’re putting up on uneven ground.
- **Verify Blower Function:** Make sure the fan runs smoothly and is dust-free.
- **Strengthen Stability:** To keep the snowman standing, check the ropes and pegs regularly.
- **Prevent Overinflation:** After the inflatable is fully inflated, make sure the blower is not operating for an extended period.
- **Avoid Putting It Near Open Flames:** Stay away from heaters, candles, and fire pits.
- **Allow It to Dry Before Storing:** Allow the inflatable to fully dry after using it outdoors before storing it.
- **Check Zipper Frequently:** Verify that the air valve zipper is in good working order and is not broken.
- **Examine Before Next Use:** Look for any damage or missing parts before reassembling.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Inflatable not inflating	Blower not plugged in properly	Ensure the plug is fully inserted into the outlet
Weak inflation	Air leakage or partially open zipper	Check and close all zippers completely
LED lights not working	Loose or disconnected wires	Inspect connections and securely reattach
Inflatable toppling over	Insufficient anchoring	Use included stakes and ropes for stability
Blower making loud noise	Debris stuck in the fan	Clear any obstructions from the blower
Deflates too quickly	Small punctures or leaks	Patch holes with repair kit provided
Power failure during operation	Faulty power source or blown fuse	Test another outlet or replace fuse if needed
Zipper won't close	Fabric caught in zipper track	Gently free fabric and zip carefully
Inflation takes too long	Weak blower performance	Ensure the blower is not obstructed
Storage bag missing	Packaging incomplete	Contact customer support for replacement

PROS & CONS

## Pros:

1. **Eye-catching LED Lights** – Built-in rotating colorful LEDs enhance nighttime visibility.
2. **Quick Inflation** – Equipped with a high-performance waterproof fan for easy setup.
3. **Weather-Resistant** – Made of durable polyester for long-lasting outdoor use.
4. **Complete Accessories** – Comes with sandbags, stakes, securing ropes, and a storage bag.
5. **Certified Safe** – Features a CE and UL-certified adapter for secure operation.

## Cons:

1. **Limited Height** – At 6 feet, it may not be as grand as larger inflatables.
2. **Needs Continuous Power** – Must remain plugged in to stay inflated.
3. **Can Be Affected by Strong Winds** – Additional securing may be needed in extreme weather.
4. **Not Battery-Powered** – Requires a power outlet for operation.
5. **Storage Space Required** – Needs careful folding and storage to maintain shape for future use.

## WARRANTY

The GOOSH 27154 Inflatables Snowman with Box comes with a **one-year** manufacturer's warranty, covering defects in materials and workmanship. Customers can contact GOOSH's support team for replacements or repairs in case of any product malfunction within the warranty period. Warranty coverage does not extend to damages caused by improper use, extreme weather conditions, or modifications.

## FREQUENTLY ASKED QUESTIONS

What are the key features of the GOOSH 27154 Inflatables Snowman with Box?

The GOOSH 27154 Christmas Inflatable Snowman is a 6-foot tall decoration with a cute design featuring a snowman holding a box. It has built-in rotating colorful LED lights, a high-performance fan for fast inflation, and comes with stakes, ropes, and a storage bag.

How tall is the GOOSH 27154 inflatable snowman?

The GOOSH 27154 inflatable snowman stands 6 feet tall, making it a great centerpiece for holiday decorations.

What accessories are included with the GOOSH 27154 inflatable snowman?

The package includes a sandbag, ground stakes, securing ropes, and a storage bag for easy setup and storage.

How do I set up the GOOSH 27154 Christmas inflatable snowman?

Place the inflatable on a flat, open space. Plug the UL-certified adapter into a power outlet. Ensure the bottom zipper is fully closed before inflation. Secure the inflatable using stakes and ropes to keep it stable.

How long does it take for the GOOSH 27154 inflatable snowman to fully inflate?

With its high-performance fan, it inflates in approximately 1-2 minutes.

How do I store the GOOSH 27154 inflatable snowman after use?

Deflate it by opening the bottom zipper. Fold it neatly and place it in the included storage bag. Store it in a cool, dry place to prevent damage.

Why is my GOOSH 27154 inflatable snowman not inflating?

Make sure the zipper is fully closed to prevent air leakage. Ensure the blower fan is not blocked by debris. Check if the power adapter is properly plugged in and functional.

## VIDEO – PRODUCT OVERVIEW



[References.plus/wp-content/uploads/2025/03/GOOSH-27154-Inflatables-Snowman-with-Box-User-Guide.mp4](https://www.references.plus/wp-content/uploads/2025/03/GOOSH-27154-Inflatables-Snowman-with-Box-User-Guide.mp4)

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.