

GOOSH 27183 Blow Up Inflatables Dog User Guide

Home » Support » GOOSH 27183 Blow Up Inflatables Dog User Guide 🖺

Contents

- 1 GOOSH 27183 Blow Up Inflatables
- Doc
- **2 INTRODUCTION**
- **3 SPECIFICATIONS**
- **4 FEATURES**
- **5 SETUP GUIDE**
- **6 CARE & MAINTENANCE**
- **7 TROUBLESHOOTING**
- 8 PROS & CONS
- 9 FREQUENTLY ASKED QUESTIONS
- 10 VIDEO PRODUCT OVERVIEW
- 11 References

GOOSH

GOOSH 27183 Blow Up Inflatables Dog



INTRODUCTION

Bring the GOOSH 27183 Blow Up Inflatable Dog into your yard to celebrate the holidays! This charming 5 FT Christmas Dachshund Dog's unique design and integrated LED lights are sure to bring holiday cheer. This inflatable is made of premium waterproof polyester and is weather-resistant and long-lasting, so it will last over the holidays. Its strong waterproof fan allows it to self-inflate in a matter of seconds, simplifying setup. This blow-up Christmas dog will bring charm to your holiday décor whether it is positioned indoors or outdoors. This inflatable, which retails for \$20.79, is made by GOOSH, a reputable company that produces high-quality seasonal decorations. Prepare to wow your guests and neighbours with this lively dachshund!

SPECIFICATIONS

Brand	GOOSH	
Product Type	Inflatable Christmas Decoration	
Model	27183	
Theme	Christmas	
Cartoon Character	Dachshund Dog	
Color	White	
Occasion	Christmas, Holiday Decoration	
Height	5 FT	
Lighting	Built-in bright LED lights	
Design	Christmas-themed dachshund dog	
Inflation System	High-performance waterproof fan for quick inflation	
Power Cord Length	10 FT	
Safety Certification	CE and UL-certified adapter	
Material	High-quality waterproof polyester	
Durability	Weather-resistant, strong for outdoor use	
Stability Features	Includes sandbag, ground stakes, and securing ropes	
Storage	Comes with a storage bag for easy folding and reuse	
Installation	Inflate fully, secure with stakes and ropes	
Deflation	Easy deflate, fold, and store	
Price	\$20.79	

FEATURES

- Festive Christmas Design: Your holiday decorations will be enhanced by this adorable dachshund dog inflatable with a Christmas theme.
- The dog's body is illuminated by built-in LED lights, creating a brilliant spectacle at night.
- Large Size: At five feet, it stands out as a focal point in any yard.
- **Self-Inflating**: A powerful waterproof fan is included for rapid inflation.
- Weather-Resistant Material: Made of sturdy, outdoor-use polyester that is waterproof.
- Certified Safety: For safe operation, a CE and UL-certified adapter is included.
- A 10-foot power cord allows for versatility in both positioning and power source connection.
- Contains Safe Anchors including ground anchors, fastening ropes for stability, and sandbags.
- Simple Setup: With little effort, it inflates in a matter of minutes.
- Both inside and Outdoor Use: It may be used for inside Christmas sets as well as lawns, gardens, and porches.
- Small and light: It just weighs a few pounds, making it manageable.
- A storage bag is included for convenient post-use organization.
- Kid-Friendly Design: entertaining and captivating for kids and families alike.

- Low Noise Operation: To avoid disruptions, the fan runs silently.
- Dependable Customer Support: Supported by the committed customer support team of GOOSH.

SETUP GUIDE

- Unpack the inflatable by taking everything out of the box.
- Pick a Site: For setup, pick a level, or open area.
- To guarantee power access, place the inflatable ten feet away from a power outlet.
- Before inflating, spread the inflatable by placing it flat on the ground.
- Attach the Power Cord: Attach the adapter to the fan on the inflatable.
- Make sure the electrical connection is secure before plugging in.
- Start Inflation: To initiate automatic inflation, turn on the fan.
- Keep an eye on the dachshund's inflation to make sure it's correct.
- Sandbag Anchor: For stability, place the sandbag inside.
- Secure with Ropes & Stakes: To avoid tipping, use the ropes and stakes that are supplied.
- Position Adjustment: Make last-minute changes for the best possible display.
- · Verify that the built-in LED lights are functioning correctly.
- · Verify stability by making sure it stays secure and upright.
- Unplug it while not in use and turn it off as necessary.
- Reinflate as Needed: If weather-related deflation occurs, repeat steps 5 through 9.



CARE & MAINTENANCE

- Keep Dry: Steer clear of letting the inflatable get wet for too long.
- Store Properly: After the holiday, keep it securely by using the included storage bag.
- Prevent beyond-Inflation: Don't go beyond the suggested inflation rate.
- Secure in Windy Conditions: To avoid tipping, always use ropes and stakes.
- Clean with a Damp Cloth: Use water and mild soap to remove any dirt or debris.
- Check for Damage: Before using, look for any tears or holes.
- Avoid Sharp Objects: Steer clear of jagged edges and surfaces.
- When not in use, unplug the motor to avoid needless wear.
- Protect from Extreme Cold: If the temperature falls too low, store indoors.
- Before storing, let it fully deflate to ensure correct folding and durability.
- Avoid Fire Hazards: Polyester is combustible, therefore stay away from open flames.
- Avoid Submersion in Water: Prevent water damage to the motor and lighting.
- Maintain Proper Airflow: To ensure effective inflation, keep the fan intake area free.
- Steer clear of excessive sun exposure because it can cause color fading over time.
- Test Before Every Season: Before setting up for the holidays, inflate to make sure there are no problems.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Inflatable won't stay upright	Insufficient air pressure or wind i nterference	Ensure the zipper is closed and add additional securin g stakes.
Not inflating properly	Blower malfunction or blockage	Check for obstructions in the blower and confirm it is p lugged in properly.
Lights not working	Loose wiring or defective LEDs	Inspect connections and contact customer support if the issue persists.
Deflates quickly	Air leakage or open zipper	Ensure the zipper is fully closed and check for punctur es.
Blower makes loud noise	Debris inside the blower	Turn off and remove any obstructions from the fan.
Won't inflate at all	Power issue	Check if the power outlet is functional and inspect the adapter.
Unstable in windy conditions	Not properly secured	Use extra stakes or sandbags to keep it stable.
Fabric discoloration	Exposure to harsh weather	Store indoors when not in use to prevent fading.
Slow inflation	Weak blower output	Allow the fan to run continuously for a few minutes bef ore adjusting.
Difficult to deflate	Air trapped inside	Open the zipper completely and gently press to releas e air.

PROS & CONS

Pros:

- 1. Adorable Design Features a charming dachshund with festive detailing.
- 2. Bright LED Lights Illuminates the decoration for enhanced nighttime visibility.
- 3. **Quick Inflation** Equipped with a high-performance fan for fast setup.
- 4. Weather-Resistant Material Made of durable, waterproof polyester.
- 5. **Easy Storage** Deflates quickly and comes with a storage bag.

Cons:

- 1. **Limited Height** At 5 FT, it may not be as prominent in larger yards.
- 2. **Needs a Power Source** Requires a nearby outlet for continuous inflation.
- 3. May Require Extra Securing Strong winds may necessitate additional weights.
- 4. LED Brightness May Vary Some users may find the lights less vibrant than expected.
- 5. Single Holiday Use Primarily designed for Christmas, limiting its versatility.

FREQUENTLY ASKED QUESTIONS

What are the key features of the GOOSH 27183 Blow Up Inflatables Dog?

The GOOSH 27183 is a 5-ft tall Christmas inflatable dachshund dog that features built-in bright LED lights, a high-performance waterproof fan for fast inflation, and a durable design to create a festive holiday atmosphere.

How do the built-in LED lights enhance the GOOSH 27183 Blow Up Inflatables Dog?

The integrated LED lights provide a warm, bright glow that attracts attention and creates a joyful, festive spirit in your yard or garden.

What accessories are included with the GOOSH 27183 Blow Up Inflatables Dog?

The package comes with a sandbag, ground stakes, securing ropes, and a storage bag to simplify both installation and storage after the holiday season.

How do I properly set up the GOOSH 27183 Blow Up Inflatables Dog?

Place the inflatable on a flat, stable surface, plug in the fan using the 10-ft power cord, inflate the decoration fully, and then secure it with the provided stakes and ropes.

How quickly does the GOOSH 27183 Blow Up Inflatables Dog inflate?

Thanks to its high-performance waterproof fan, the costume inflates rapidly typically within a few minutes—so you can set it up quickly for your holiday event.

 
What should I do if the GOOSH 27183 Blow Up Inflatables Dog does not inflate properly?

First, verify that the waterproof fan is properly connected via the 10-ft power cord and that the CE and UL-certified adapter is working. Ensure no obstructions are blocking the fan and that the inflatable is positioned on a flat surface.

How can I troubleshoot if the built-in LED lights on the GOOSH 27183 are not functioning?

Check that the decoration is receiving power and inspect the LED wiring for any loose connections or damage. If the lights still do not work, contact GOOSH customer support for assistance.

<u>VIDEO – PRODUCT OVERVIEW</u>



Referencesals.plus/wp-content/uploads/2025/03/GOOSH-27183-Blow-Up-Inflatables-Dog-User-Guide.mp4

User Manual

e77cde1a6ddba353152d58844f9cf" data-index="3" style="float: none; margin:10px 0 10px 0; text-align:center;">

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.