

**GOOSH**

69101 6FT  
Halloween  
Inflatables Ghost



# GOOSH 69101 6FT Halloween Inflatables Ghost User Manual

[Home](#) » [Support](#) » GOOSH 69101 6FT Halloween Inflatables Ghost User Manual 

## Contents

- [1 GOOSH 69101 6FT Halloween Inflatables Ghost](#)
- [2 INTRODUCTION](#)
- [3 SPECIFICATIONS](#)
- [4 FEATURES](#)
- [5 SETUP GUIDE](#)
- [6 CARE & MAINTENANCE](#)
- [7 TROUBLESHOOTING](#)
- [8 PROS & CONS](#)
- [9 FREQUENTLY ASKED QUESTIONS](#)
- [10 VIDEO – PRODUCT OVERVIEW](#)
- [11 References](#)

**GOOSH**

**GOOSH 69101 6FT Halloween Inflatables Ghost**



## INTRODUCTION

The ideal decoration to create a frightful mood in your garden, yard, or home is the GOOSH 69101 6FT Halloween Inflatables Ghost. This multicoloured inflatable ghost, which costs **\$29.99**, is meant to enthrall and excite with its integrated LED lights and creepy face. This inflatable ghost is manufactured by GOOSH, a reputable brand in holiday decorations, and is composed of premium polyester for longevity and weather resistance. Because of its hanging style, it adds a distinctive touch to Halloween displays and looks great on patios, windows, or trees. Quick inflation is guaranteed by the strong blower, and setup and storage are made simple with the accompanying suckers, tying ropes, and storage bag. This GOOSH inflatable ghost is a striking, energy-efficient, and weather-resistant decoration that will add to the eerie atmosphere of your celebrations, whether you're decorating for a Halloween party or just want to wow the neighbours.

## SPECIFICATIONS

<b>Brand</b>	GOOSH
<b>Product Type</b>	Inflatable Halloween Decoration
<b>Model</b>	69101
<b>Theme</b>	Halloween
<b>Color</b>	Multicolor
<b>Occasion</b>	Halloween, Holiday Decoration
<b>Height</b>	6 FT
<b>Lighting</b>	Built-in bright LED lights
<b>Design</b>	Hanging ghost with an open mouth for a scary effect
<b>Inflation System</b>	High-performance waterproof fan for quick inflation
<b>Power Cord Length</b>	10 FT
<b>Safety Certification</b>	CE and UL-certified adapter
<b>Material</b>	High-quality waterproof polyester
<b>Durability</b>	Weather-resistant, sturdy construction for long-lasting use
<b>WHAT'S IN THE BOX</b>	Includes suckers and securing ropes and manual
<b>Storage</b>	Comes with a storage bag for easy folding and reuse
<b>Installation</b>	Inflate fully, secure with stakes and ropes
<b>Deflation</b>	Easy deflate, fold, and store
<b>Product Dimensions</b>	27 x 73 x 40 inches
<b>Item Weight</b>	1.26 lbs
<b>Customer Support</b>	Professional U.S. seller, support available
<b>Price</b>	\$29.99

## FEATURES

- Halloween is made more eerie by the spooky hanging ghost design, which features a wide-mouthed ghost with frightening eyes.
- **Integrated Multicolored LED Lighting** It is ideal for trick-or-treaters and Halloween celebrations because of its internal brilliant LEDs, which improve visibility at night.
- **Large 6FT Size:** Measuring 6 feet in height, this yard decoration is quite noticeable and striking.
- **Fast Inflation:** It has a powerful waterproof blower that enables it to inflate completely in a matter of seconds.
- **Sturdy and Weather-Resistant:** Constructed from premium waterproof polyester, this item is resistant to wind, rain, and sunlight.
- Both indoor and outdoor use are ideal, making it ideal for indoor Halloween celebrations as well as windows, porches, gardens, and yards.
- Stakes, securing ropes, and suckers are included in the secure attachment system to keep it securely in place.
- A certified power adapter for safe and effective operation is included with the UL and CE-approved adapter.

- Positioning the 10-foot power cord in the yard or next to windows is made simple and flexible.
- **Lightweight & Portable:** It is easy to transport and store due to its light weight of 1.26 pounds.
- Low-power LEDs that last a long time while using little electricity are used in energy-efficient LED bulbs.



- Colours that are vibrant and resistant to fading Throughout the season, the vibrant ghost design stays eerie and vibrant.
- **Safe for Children and Pets:** Children and pets are protected by the soft inflatable material.
- **Easy Storage:** A storage bag is included, which makes packing and reusing for upcoming Halloweens a breeze.
- **Great client Service:** GOOSH offers dependable assistance for any problems and round-the-clock client service.





## SETUP GUIDE

- Open the package and remove the blower, power adapter, suckers, stakes, tying ropes, storage bag, and inflatable ghost.
- **Pick an Appropriate Site:** Pick a window or level area that has adequate room for inflation.
- Verify the power supply by using an extension cord that is rated for outside usage or by making sure there is a power outlet close by.
- **Attach the Blower:** Fasten the blower firmly to the inflatable's air inlet.
- **Make Sure the Zipper Is Closed:** Prior to inflating, confirm that the bottom zipper is fully closed.
- **Plug into Power:** Attach a power source to the UL-certified adaptor.
- **Turn on the Blower:** To start inflation, turn on the powerful blower.
- **Wait for Full Inflation:** Give the ghost a few seconds to fully grow.
- **Place the Ghost Correctly:** Make sure the hanging ghost appears erect and eerie.
- **Secure with Stakes & Ropes:** To keep the inflatable stable in windy situations, use the stakes and ropes that come with it.
- **Attach to Windows or Walls:** Secure it with the included suckers if you're using it indoors or on a window.
- **Verify LED Lights Operate:** Verify that the integrated LED lights are shining correctly.
- **Check for Air Leaks:** Look for any minor air leaks at the seams and make any necessary adjustments.

- **Keep Air Intake Clear:** Verify that no leaves, decorations, or other things are obstructing the blower's air intake.
- Savour the eerie atmosphere! You can now frighten and amuse trick-or-treaters with your spooky ghost inflatable!



## CARE & MAINTENANCE

- **Stay Away from Sharp Objects:** To avoid punctures, keep away from branches, fences, and other sharp objects.
- **Store in a Dry Location:** To avoid mold or mildew, store in a dry location after the season.
- **Clean with a Damp Cloth:** Use a soft cloth and mild soap to gently clean the surface if it is soiled.
- **Avoid Machine Washing** Electrical components may be damaged if they are machine-washed or submerged in water.
- **Keep the Power cable Dry:** To avoid electrical risks, make sure the power cable and adapter are dry.
- **Avoid Too Much Sunlight:** Prolonged exposure to direct sunlight can weaken and fade fabrics.



- Use additional pegs or sandbags to reinforce in windy conditions if you're placing outside.
- **Check the Zipper Often:** For correct inflation, ensure sure the zipper is well shut before each usage.
- Keep an eye on the weather outside and steer clear of use in severe conditions (heavy rain, snowstorms, or strong winds).
- **Maintain a Clear Blower Intake:** Make sure the blower isn't obstructed by leaves, dirt, or other material by checking frequently.
- **Turn Off When Not in Use:** To prolong the inflatable's life, unplug it when not in use.
- **Fix Small Holes Right Away** To fix tiny holes or air leaks, use transparent tape or fabric glue.
- **Avoid Open Flames:** Keep away from fire pits, candles, and other heat sources.
- **unplug the Blower Before Storing:** Before folding and storing, always unplug the blower and adapter.
- **Fold Neatly for Storage:** To avoid damage, fold it gently and put it inside the storage bag that comes with it.



## TROUBLESHOOTING

Issue	Possible Cause	Solution
Inflatable not standing upright	Improper securing	Use additional ropes or stakes
Blower not working	Power not connected	Check the plug and power source
LED lights not turning on	Loose wiring	Ensure all connections are secure
Slow inflation	Blocked blower	Check for obstructions in the blower
Deflation during use	Air leakage	Ensure the zipper is fully closed
Inflatable moving in the wind	Not secured properly	Adjust the position and add weights
Fabric tearing	Sharp objects nearby	Move away from sharp edges
Noise from blower	Debris inside	Clean the blower to remove debris
Blower overheating	Extended use	Allow the blower to cool before reuse
Difficult deflation	Air trapped inside	Open the zipper completely to release air

### PROS & CONS

**Pros:**

- 1. **Eye-Catching Design** – Bright LED lights create a haunting effect.
- 2. **Quick Inflation** – A powerful blower ensures fast setup.
- 3. **Durable & Weather-Resistant** – Made of high-quality polyester.
- 4. **Easy to Store** – Includes a storage bag for post-holiday use.
- 5. **Certified Safe** – Comes with a CE and UL-certified adapter.

**Cons:**

- 1. **Limited to Hanging Placement** – Requires a secure spot for installation.
- 2. **Power Cord Length** – The 10-foot cord may need an extension.
- 3. **Not Suitable for Extreme Weather** – Strong winds may affect stability.
- 4. **Single Theme Use** – Primarily for Halloween, limiting seasonal use.
- 5. **May Require Additional Fasteners** – For extra stability in windy conditions.

### FREQUENTLY ASKED QUESTIONS

What are the key features of the GOOSH 69101 6FT Halloween Inflatables Ghost?

The GOOSH 69101 is a 6-ft tall, multicolor, hanging ghost inflatable with built-in LED lights. It’s designed to create a spooky, attractive Halloween atmosphere for both indoor window displays and outdoor yard decorations.



How do the built-in LED lights enhance the GOOSH 69101 6FT Halloween Inflatables Ghost?

The LED lights, built inside the ghost, provide a dynamic multicolor glow that heightens the spooky vibe and makes your decoration visible and attractive at night.

What power components are involved with the GOOSH 69101 6FT Halloween Inflatables Ghost?

It is equipped with a high-performance waterproof fan powered via a CE and UL-certified adapter and a 10-ft power cord, ensuring fast inflation and continuous airflow.

How do I properly install the GOOSH 69101 6FT Halloween Inflatables Ghost?

Place the ghost where it can hang securely or be anchored, plug in the blower using the 10-ft power cord, and inflate until full. Then, use the provided suckers and securing ropes (or stakes) to fix the inflatable in place. Always follow the manufacturer's instructions and avoid inserting any objects into the blower.

How do I secure the GOOSH 69101 6FT Halloween Inflatables Ghost from shifting or blowing away?

Use the included securing ropes and suckers (or stakes) to firmly attach the inflatable to a window or the ground, ensuring it remains stable even in windy conditions.

What might cause the GOOSH 69101 6FT Halloween Inflatables Ghost to deflate unexpectedly?

Unintended deflation can occur if the bottom zipper or vents are left open or if there are minor punctures in the waterproof polyester. Inspect the inflatable for any damage and secure all closures to maintain full inflation.

How do I ensure the blower on the GOOSH 69101 6FT Halloween Inflatables Ghost operates safely?

Always plug the blower into a properly grounded outlet using the provided 10-ft cord. Never insert any objects into the blower, and regularly check that no debris is blocking the air intake.

References  
<https://manuals.plus/wp-content/uploads/2025/03/GOOSH-69101-6FT-Halloween-Inflatables-Ghost-User-Manual.mp4>

- [User Manual](#)

e77cde1a6ddba353152d58844f9cf" data-index="3" style="float: none; margin:10px 0 10px 0; text-align:center;">

[Manuals+](#). [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.