

GOOSH
DJ-WS-69073
Inflatables Cute
Wizard Ghost



GOOSH DJ-WS-69073 Inflatables Cute Wizard Ghost User Manual

[Home](#) » [Support](#) » GOOSH DJ-WS-69073 Inflatables Cute Wizard Ghost User Manual 

Contents

- [1 GOOSH DJ-WS-69073 Inflatables Cute Wizard Ghost](#)
- [2 INTRODUCTION](#)
- [3 SPECIFICATIONS](#)
- [4 FEATURES](#)
- [5 SETUP GUIDE](#)
- [6 CARE & MAINTENANCE](#)
- [7 TROUBLESHOOTING](#)
- [8 PROS & CONS](#)
- [9 WARRANTY](#)
- [10 FREQUENTLY ASKED QUESTIONS](#)
- [11 VIDEO – PRODUCT OVERVIEW](#)
- [12 References](#)

GOOSH

GOOSH DJ-WS-69073 Inflatables Cute Wizard Ghost



INTRODUCTION

Prepare to enhance your Halloween décor with the GOOSH DJ-WS-69073 Cute Wizard Ghost Inflatable. This 5-foot inflatable ghost is made to add a fun and eerie touch to your lawn, garden, or indoor gathering space. This fun Halloween décor item, which costs **\$34.99**, is made by GOOSH, a reputable company that produces excellent holiday inflatables. At night, this spectral figure's integrated LED illumination and handheld light create a captivating atmosphere. A high-performance waterproof fan powers the fast-inflating design, which guarantees a hassle-free setup in a matter of seconds. This inflatable is designed to endure the weather and last all season long because it is made of sturdy, weather-resistant polyester. This inflatable decoration comes with ground pegs, tying ropes, and a storage bag, making it simple to set up, deflate, and store for use at other events.

SPECIFICATIONS

Brand	GOOSH
Theme	Halloween
Cartoon Character	Wizard Ghost
Color	White
Occasion	Halloween, Holiday Decoration
Material	Waterproof Polyester
Height	5 feet
Design	Wizard Ghost holding a hand-held light
Lighting	Built-in bright LED lights
Inflation System	High-performance waterproof fan
Power Source	CE and UL-certified adapter
Power Cord Length	10 feet
Weather Resistance	Sturdy and weather-resistant, suitable for outdoor use
Stability Accessories	Sandbag, ground stakes, securing ropes
Storage Features	Easy to deflate, fold, and store after use with included storage bag
Usage	Indoor and outdoor Halloween decorations—Yard, Lawn, Garden, Party
Ease of Setup	Inflates quickly for hassle-free decoration
Item Weight	2.29 pounds
Price	\$34.99

FEATURES

- Standing five feet tall, this Halloween decoration is a striking addition to any indoor or outdoor area.



- **Adorable Wizard Ghost Design:** This design creates a joyful and eerie atmosphere with a friendly ghost wearing a wizard hat.
- Integrated Vibrant LED Lighting makes the ghost extremely visible at night by illuminating it from within.
- A hand-held light prop adds to the ghost's adorable and joyous aspect, giving it a visually striking exhibition.
- A high-performance waterproof fan maintains the ghost upright and guarantees quick inflation.



- For peace of mind, this CE and UL-certified adapter offers dependable and safe power operation.
- A 10-foot power cord enables flexible positioning both indoors and outdoors.
- Sturdy waterproof polyester fabric that is resilient to weather and robust enough to endure outdoor situations.
- Design Lightweight It is easy to handle, transfer, and store because it only weighs 2.29 pounds.
- When plugged in, the self-inflating mechanism fully expands in a matter of seconds.
- Ground pegs, fastening ropes, and a sandbag are all part of the Secure Stability System.



- **Perfect in a Variety of Settings:** Perfect for parties, porches, lawns, gardens, and haunted home setups.
- **Quick Deflation:** After Halloween, it deflates quickly for easy storage.
- **LEDs that use less electricity and produce strong illumination** are known as energy-efficient LEDs.
- **Included Storage Bag:** For convenient and secure packaging, a special storage bag is included.

SETUP GUIDE

- **Choose a Setup Location:** Keep the inflatable away from barriers and sharp items by choosing a level, unobstructed location.
- The inflatable should be unpacked by taking it out of the storage bag and laying it flat on the ground.
- **Verify the Power Source:** Make that the 10-foot power wire can be plugged into an electrical outlet.
- **Close the Air Valve Zipper:** To stop air leaks, make sure the base zipper is completely closed.
- **Plug into an Outlet:** If required, attach the power adapter to an extension cord that is rated for outdoor use.
- **Activate the Fan:** For quick inflation, turn on the waterproof blower.
- Keep an eye on inflation; the ghost should stand up straight and fully inflate in a matter of seconds.
- **Secure with Ground Stakes:** Push the included stakes into the ground after inserting them into the base loops.

- **Attach the Ropes for Support:** For further stability, fasten the securing ropes to adjacent stakes or structures.
- Verify the ghost's proper inflation by making sure it is fully extended and free of drooping or creases.
- **Modify Positioning:** For optimal visibility, rotate or reposition the inflatable.
- **Check LED Lighting:** Make sure the integrated LED lights are operating as intended.
- **Keep the Airflow Unblocked:** Make sure there are no leaves or other debris blocking the blower's air intake.
- **Final Stability Check:** Verify again that the ropes and stakes are fastened firmly.
- Take pleasure in your eerie décor! Admire your lighting of Halloween ghost decorations from a distance.

CARE & MAINTENANCE

- **Keep It Clean:** To get rid of dust or debris, wipe the inflatable down with a gentle, moist cloth.
- **Avoid Sharp things:** Make sure there are no sharp things nearby that could pierce the material at the setup position.
- **Check for Air Leaks:** Check fabric and seams for weak areas or tiny holes on a regular basis.
- Always deflate the inflatable completely before putting it away for storage.
- **Store in a Dry Place:** To avoid mold or mildew, keep the inflatable in a cool, dry place.
- **Prevent Severe Weather:** Remove the decoration in the event of severe winds, rain, or storms.
- Keep the power cord, fan, and adapter away from standing water to protect electrical components.
- **Secure the Ropes and Stakes:** Make sure the ropes and stakes are sturdy and tight on a regular basis.
- Keep an eye on the blower to make sure there are no obstructions and it is running properly.
- **Avoid Overinflating:** After the inflatable has fully expanded, turn off the blower.
- **Stay Away from Open Flames:** Keep the inflatable away from heaters, candles, and fires.
- **Allow to Dry Before Packing:** Before storing an inflatable that has become wet, let it air dry fully.
- **Check LED Lights:** Before storing, make sure the LED lights are in good operating order for the following use.
- **Handle Carefully:** To prevent internal components from being harmed, fold and transport the inflatable gently.
- **Examine Before Reusing:** Look for any damage or missing components before putting it up for Halloween next year.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Inflatable won't inflate	Zipper is open	Ensure the bottom zipper is fully closed.
Weak inflation	Air inlet is blocked	Remove any obstructions from the fan area.
Lights not working	Loose wire connection	Check and secure the LED connections.
Keeps tipping over	Not secured properly	Use additional stakes or place on a flat surface.
Fan not working	Power cord unplugged	Ensure the adapter is connected to a working outlet.
Air leakage	Small tear in fabric	Patch with a repair kit or tape.
Slow inflation	Low power supply	Use a different power outlet.
Blower is noisy	Debris inside fan	Clean out any debris near the fan.
Deflates quickly	Zipper or fabric tear	Check for open zippers or leaks and repair if needed.
LED lights flickering	Electrical issue	Contact GOOSH for a replacement.

PROS & CONS

Pros:-

- 1. **Eye-catching Design** – Features a cute wizard ghost with a hand-held light, perfect for Halloween.
- 2. **Quick Inflation** – Equipped with a high-performance waterproof fan for fast setup.
- 3. **Built-in LED Lights** – Bright illumination enhances nighttime visibility and adds to the spooky atmosphere.
- 4. **Weather-Resistant** – Made from high-quality polyester, suitable for outdoor use.
- 5. **Complete Setup Kit** – Includes stakes, ropes, and a storage bag for stability and easy storage.

Cons:

- 1. **Limited Size** – At 5 feet, it may not be as large as other inflatables for bigger displays.
- 2. **Needs Continuous Power** – Requires an outlet connection for operation.
- 3. **Might Be Affected by Strong Winds** – Needs proper anchoring to prevent tipping over.
- 4. **LED Brightness May Vary** – Lights may not be as strong in extremely well-lit areas.
- 5. **Zipper Closure Needs Attention** – Ensure the zipper is fully closed for optimal inflation.

WARRANTY

GOOSH offers a **30-day limited warranty** on this inflatable decoration. The warranty covers manufacturing defects, faulty fans, or LED malfunctions. However, it does not cover damages caused by misuse, weather conditions, or improper storage. Customers can contact GOOSH's customer service for replacement parts or product assistance.

FREQUENTLY ASKED QUESTIONS

What are the key features of the GOOSH DJ-WS-69073 Inflatable Cute Wizard Ghost?

The GOOSH 5 FT Halloween Inflatable Cute Wizard Ghost features a hand-held light, built-in LED lights, a high-performance waterproof fan, and durable polyester fabric for long-lasting use in both indoor and outdoor settings.

How tall is the GOOSH DJ-WS-69073 Inflatable Cute Wizard Ghost?

This Halloween inflatable stands 5 feet tall, making it a noticeable yet compact decoration.

Does the GOOSH DJ-WS-69073 Inflatable Cute Wizard Ghost come with everything needed for installation?

It includes ground stakes, securing ropes, a sandbag, and a 10FT power cord for easy setup and stability.

How do I set up the GOOSH DJ-WS-69073 Inflatable Cute Wizard Ghost?

Place the inflatable on a flat surface. Connect the UL-certified adapter to a power outlet. Ensure the zipper is completely closed before turning it on. Secure it using ground stakes and ropes to prevent it from tipping over.

How long does it take for the GOOSH DJ-WS-69073 Inflatable Cute Wizard Ghost to fully inflate?

The built-in high-performance fan inflates the ghost in approximately 1-2 minutes.

How do I store the GOOSH DJ-WS-69073 Inflatable Cute Wizard Ghost after Halloween?

Open the bottom zipper to deflate it completely. Fold it neatly and store it in the included storage bag. Keep it in a cool, dry place to prevent damage for next season.

Why is my GOOSH DJ-WS-69073 Inflatable Cute Wizard Ghost not inflating properly?

Make sure the zipper is completely closed before inflating. Check if the blower fan is working and not obstructed by debris. Ensure the power cord is securely plugged in.

VIDEO – PRODUCT OVERVIEW



[References.plus/wp-content/uploads/2025/03/GOOSH-DJ-WS-69073-Inflatables-Cute-Wizard-Ghost-User-Manual.mp4](#)

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.