

GOOSH

DJ-WS-69100 Blow
Up Inflatables
Unicorn



GOOSH DJ-WS-69100 Blow Up Inflatables Unicorn User Guide

[Home](#) » [GOOSH](#) » GOOSH DJ-WS-69100 Blow Up Inflatables Unicorn User Guide 

Contents

- [1 GOOSH DJ-WS-69100 Blow Up Inflatables Unicorn](#)
- [2 INTRODUCTION](#)
- [3 SPECIFICATIONS](#)
- [4 FEATURES](#)
- [5 SETUP GUIDE](#)
- [6 CARE & MAINTENANCE](#)
- [7 TROUBLESHOOTING](#)
- [8 PROS & CONS](#)
- [9 WARRANTY](#)
- [10 FREQUENTLY ASKED QUESTIONS](#)
- [11 VIDEO – PRODUCT OVERVIEW](#)
- [12 References](#)

GOOSH

GOOSH DJ-WS-69100 Blow Up Inflatables Unicorn



INTRODUCTION

The GOOSH DJ-WS-69100 Blow Up Inflatables Unicorn is the ideal addition to any Halloween décor, giving your indoor or outdoor area a mystical yet eerie feel. This inflatable's adorable pink-haired skeleton unicorn design draws attention right away and fosters a lively, celebratory environment. Its integrated LED lights improve its visibility at night, making it a thrilling surprise for trick-or-treaters and attendees at Halloween parties. This inflatable, which costs **\$59.99**, is made of premium, waterproof polyester, guaranteeing its durability all season long. A CE and UL-certified connector is included for safety, and it swiftly inflates with a high-performance fan. This inflatable is simple to set up and stow, whether you're using it indoors or outside. This unicorn-themed decoration, which is made by the respected inflatable decoration firm GOOSH, guarantees both quality and client happiness.

SPECIFICATIONS

Brand	GOOSH
Product Type	Inflatable Halloween Decoration
Model	DJ-WS-69100
Theme	Halloween
Cartoon Character	Skeleton Unicorn
Color	Pink
Occasion	Halloween, Party Decor
Height	5.2 FT
Lighting	Built-in bright LED lights
Design	Cute skeleton unicorn with pink hair
Inflation System	High-performance waterproof fan for quick inflation
Power Cord Length	10 FT
Safety Certification	CE and UL-certified adapter
Material	High-quality waterproof polyester
Durability	Weather-resistant, strong for outdoor use
WHAT'S IN THE BOX	Includes sandbag, ground stakes, and securing ropes
Storage	Comes with a storage bag for easy folding and reuse
Installation	Inflate fully, secure with stakes and ropes
Deflation	Easy deflate, fold, and store
Customer Service	GOOSH offers support for inquiries
Price	\$59.99

FEATURES

- **Skeleton Unicorn Design:** An adorable, eerie, pink-haired unicorn that’s ideal for Halloween.
- **Built-in LED lights:** At night, the glowing appearance improves visibility and attraction.
- **Large Size:** Measuring 5.2 feet in height, this yard ornament is striking.



- **Self-Inflating Mechanism:** This mechanism has a powerful waterproof fan that ensures rapid inflation.
- **Sturdy Polyester Material:** crafted from premium waterproof polyester for enduring wear.
- **Weather-Resistant:** Capable of withstanding wind, rain, and other seasonal conditions.
- CE and UL-certified safe adaptor required for safe functioning is included.
- A 10-foot power cord enables versatile positioning in gardens, yards, or indoor spaces.
- **Both inside and Outdoor Use:** Perfect for inside setups, gatherings, and Halloween lawn decorations.
- The element of surprise for pranksters Kids adore designs that are lively and entertaining.
- **Lightweight & Portable:** It is easy to move and store because it only weighs a few pounds.
- **Stable Base with Sandbag:** For extra stability, this base has an integrated sandbag.
- A storage bag, securing ropes, and pegs are included in the complete setup kit.
- **Quiet Operation:** The fan makes very little noise while operating effectively.
- **Dependable Customer assistance:** Supported by GOOSH's prompt customer assistance.

SETUP GUIDE

- **Unpack the Inflatable:** Take the unicorn and its accoutrements out of the box.

- **Select a Setup Location:** Look for a level, open space to set up.
- Make sure it has power access by placing it close to a power outlet (10-foot cord included).
- Before inflating, spread the inflatable out by placing it flat on the ground.
- **Connect the Adapter:** Fasten the fan unit to the power cord.
- Make sure the electrical connection is steady before plugging into an outlet.
- **Start Inflation:** To initiate automatic inflation, turn on the fan.
- Keep an eye on the inflation process to ensure the unicorn assumes its correct shape.
- **Secure with Sandbag:** To weigh it down, properly position the included sandbag.
- **Stake it to the Ground:** To stop it from moving, use the stakes that are given.
- **Use Ropes for Additional Stability:** To keep yourself upright, tie fastening ropes.
- **Adjust Positioning:** To get the ideal display angle, adjust the location.
- **Examine LED Lights:** Verify that the integrated lights are operating as intended.
- **Check for Stability:** Verify that the unicorn is not swaying and is securely positioned.
- Turn off the decoration when not in use and unplug it during inclement weather or storage.



CARE & MAINTENANCE

- **Keep Dry:** Steer clear of moist situations for extended periods of time.
- **Store in the Provided Bag:** When not in use, keep it safe by using the storage bag.
- Deflate completely before storing to avoid damage and wrinkles.
- **Prevent Over-Inflation:** Don't go over the suggested air pressure.
- **Secure in Windy Conditions:** For extra stability, always use ropes and posts.
- **Clean Gently:** To get rid of filth and debris, use a moist cloth and mild soap.
- **Examine for Damage:** Before putting up each season, look for any tears or holes.
- **Avoid Sharp Objects:** Steer clear of branches, nails, and uneven surfaces.
- When not in use, unplug to prolong the life of the LEDs and fan.



- Store indoors during severe weather to protect against severe storms and freezing temperatures.
- **Permit Appropriate Airflow:** Make sure the fan intake is not blocked.
- Polyester is flammable, therefore stay away from open flames.
- **Reduce Sun Exposure:** Over time, prolonged exposure to sunlight may cause color fading.
- **Be Careful Around Pets:** Keep pets from destroying the inflatable by nibbling on it.

- **Test Before Every Use:** Make sure everything works correctly by inflating before Halloween.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Not Inflating	Blower not plugged in	Ensure power source is connected properly
Weak Inflation	Air leaks or unsecured zippers	Check for holes and close zippers completely
Lights Not Working	Loose connection or defective LED	Inspect wiring and contact support if needed
Deflating Too Quickly	Puncture or tear in fabric	Patch small holes with the provided repair kit
Blower Making Noise	Foreign object inside	Turn off, inspect, and remove any debris
Blower Not Working	Faulty motor	Contact manufacturer for replacement
Inflatable Tilting	Unstable ground or weak securing	Adjust stakes and ropes for better stability
Won't Stay Lit	Power fluctuations	Use a surge protector and check the connections
Fabric Discoloration	Exposure to extreme sunlight	Store properly after use to prevent fading
Storage Issues	Improper folding	Fold neatly and store in the provided bag

PROS & CONS

Pros:

1. **Eye-Catching Design** – Features a unique skeleton unicorn with pink hair.
2. **Bright LED Lights** – Enhances visibility and adds to the Halloween ambience.
3. **Fast Inflation** – Equipped with a high-performance waterproof fan.
4. **Weather-Resistant** – Made of durable, waterproof polyester.
5. **Easy Setup & Storage** – Includes all necessary accessories like stakes, ropes, and a storage bag.

Cons:

1. **Limited Color Options** – Only available in pink.
2. **Requires Power Source** – Needs continuous power for inflation.
3. **May Struggle in Extreme Weather** – High winds may require additional securing.
4. **Storage Space Needed** – Though compact when deflated, still requires proper storage.
5. **Short Power Cord** – The 10-foot cord may limit placement options without an extension.

WARRANTY

The GOOSH DJ-WS-69100 Blow Up Inflatables Unicorn comes with a **one-year manufacturer warranty**. This covers defects in materials and workmanship, ensuring customer satisfaction. If you experience any issues, you can contact the manufacturer through the “Contact Seller” option on your purchase platform.

FREQUENTLY ASKED QUESTIONS

What are the key features of the GOOSH DJ-WS-69100 Blow Up Inflatables Unicorn?

The GOOSH DJ-WS-69100 is a 5.2-ft tall Halloween inflatable featuring a cute skeleton unicorn with pink hair and built-in bright LED lights. It's designed to create a fun and spooky atmosphere for your yard, garden, or indoor party.

How tall is the GOOSH DJ-WS-69100 Blow Up Inflatables Unicorn?

The decoration measures 5.2 feet in height, making it an ideal size for both outdoor and indoor Halloween displays.

What inflation mechanism does the GOOSH DJ-WS-69100 use?

It is equipped with a high-performance waterproof fan powered by a CE and UL-certified adapter and a 10-ft power cord, ensuring fast and continuous inflation for a reliable display.

How do you properly install the GOOSH DJ-WS-69100?

Place the inflatable in your desired location, plug in the waterproof fan using the 10-ft power cord, and inflate it fully. Then secure it with the provided ground stakes and ropes, ensuring it is stable and safe.

What should I do if the GOOSH DJ-WS-69100 does not inflate properly?

Check that the waterproof fan is securely connected via the 10-ft power cord, and ensure the CE and UL-certified adapter is functioning correctly. Also, confirm that there are no obstructions preventing proper airflow.

 
Why might the GOOSH DJ-WS-69100 deflate unexpectedly?

Unintended deflation may occur if there is an open seam, a puncture in the waterproof polyester, or an issue with the continuous airflow from the fan. Check all seams and connections to ensure proper sealing and operation.

How should I deflate and store the GOOSH DJ-WS-69100 after the holiday season?

Turn off the power to the blower, then open the designated vent or zipper to let the air escape. Carefully fold the inflatable and store it in the provided storage bag in a cool, dry place until its next use.

VIDEO – PRODUCT OVERVIEW



<https://www.references.plus/wp-content/uploads/2025/03/GOOSH-DJ-WS-69100-Blow-Up-Inflatable-Unicorn-User-Guide-1.mp4>

- [User Manual](#)

7be77cde1a6ddba353152d58844f9cf" data-index="3" style="float: none; margin:10px 0 10px 0; text-align:center;">

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.