

**GOOSH**  
Yard skiing Snow  
Man



## GOOSH Yard skiing Snow Man User Guide

[Home](#) » [Support](#) » GOOSH Yard skiing Snow Man User Guide 

### Contents

- [1 GOOSH Yard skiing Snow Man](#)
- [2 INTRODUCTION](#)
- [3 SPECIFICATIONS](#)
- [4 FEATURES](#)
- [5 SETUP GUIDE](#)
- [6 CARE & MAINTENANCE](#)
- [7 TROUBLESHOOTING](#)
- [8 PROS & CONS](#)
- [9 WARRANTY](#)
- [10 FREQUENTLY ASKED QUESTIONS](#)
- [11 References](#)

**GOOSH**

**GOOSH Yard skiing Snow Man**



## INTRODUCTION

A charming addition to your holiday décor, the GOOSH 6 FT Christmas Inflatables Snowman adds charm and a sense of celebration to any indoor or outdoor area. This cheery inflatable snowman, which costs **\$26.99**, has a bright red scarf, red hands, and a black hat. Its integrated LED lights provide your lawn, garden, or yard a cozy and welcoming atmosphere. This inflatable is made of premium waterproof polyester, which ensures endurance against cold weather. It is manufactured by GOOSH, a reputable brand in holiday decorations. This décor comes with a 10-foot power cord and a waterproof fan that quickly inflates, making it simple to set up and enjoy. The GOOSH Snowman Inflatable is an essential item for spreading Christmas cheer, whether you're throwing a party or just adding to your seasonal décor!

## SPECIFICATIONS

Brand	GOOSH
Product Type	Inflatable Christmas Decoration
Theme	Christmas
Cartoon Character	Snowman
Color	White
Occasion	Christmas, Holiday Decoration
Height	6 FT
Lighting	Built-in LED lights
Design	Round belly, black hat, red hands, colorful red scarf, skiing posture
Inflation System	High-performance waterproof fan for quick inflation
Power Cord Length	10 FT
Safety Certification	CE and UL-certified adapter
Material	High-quality waterproof polyester
Durability	Weather-resistant, sturdy construction for long-lasting use
Included in box	ground stakes and securing ropes, manual
Storage	Comes with a storage bag for easy folding and reuse
Installation	Inflate fully, secure with stakes and ropes
Deflation	Easy deflate, fold, and store
Customer Support	24-hour service, one-year warranty
Price	\$26.99

FEATURES

- **Adorable Skiing Snowman Design:** This design creates a happy winter décor with a round-bellied snowman wearing a black hat, red hands, and a bright scarf.
- **Integrated LED Lighting** The brilliant LED lights inside improve visibility at night and give your yard a cozy, joyous glow.
- **6 Feet Tall:** With its height of 6 feet, this centerpiece is ideal for both indoor and outdoor Christmas décor.



- **Fast Inflation:** The decoration may be fully inflated in a matter of seconds thanks to its high-performance blower.
- **Weather-Resistant Polyester:** Made from sturdy, water-resistant polyester, this fabric is resistant to wind, rain, and snow.





- **Sturdy Construction:** Long-lasting use is ensured by the sturdy fabric and tightly sealed seams, which stop air leaks.
- **UL & CE-approved Adapter:** This approved power adapter guarantees safe operation and is dependable for prolonged use.
- **10FT Power Cord:** This cord allows you to set it up in different spots in your yard or indoors.
- **Contains Ground Stakes & Ropes:** To keep the inflatable firmly in place, this set includes strong stakes and ropes.
- **Compact & Portable Storage:** It folds up easily, deflates, and fits into the storage bag that comes with it for usage the following season.
- **Low-power LEDs** are used in energy-efficient LED bulbs, which use less energy to produce bright, long-lasting illumination.
- **Safe for Kids & Pets:** Both kids and pets can safely play with the soft inflatable material.
- **Ideal for Both Indoor and Outdoor Use :** It may be used indoors as well as outside in porches, gardens, and yards.
- **Vibrant and Non-Fading Colors :** Throughout the season, the red, white, and black color combination stays vibrant and new.
- A one-year warranty and round-the-clock customer service includes expert customer support for any problems.

## SETUP GUIDE

- Open the package and take out the blower, pegs, ropes, storage bag, power adapter, and inflatable snowman.
- **Select a Setup Area:** Look for a level, stable spot in your garden, yard, or indoors.
- **Verify the Power Supply:** usage an extension cord that is rated for outside usage or make sure there is a power outlet close by.
- **Attach the Blower:** Attach the inflatable's built-in blower to the air intake.
- **Verify the Zipper:** Prior to inflation, make sure the bottom zipper is fully closed.
- Connect the 10FT power cord to a regular electrical socket to plug it in.
- **Turn on the Blower:** To begin the inflation process, turn on the UL-certified blower.
- **Wait for Full Inflation:** Give the inflatable a few seconds to expand completely.
- Make sure the snowman is balanced and standing erect by adjusting its position.
- **Secure with Stakes & Ropes:** To ensure that the inflatable stays securely in position, use the stakes and ropes that come with it.
- Verify that the LED lights are operational. Verify that the integrated LED lights are shining correctly.
- **Check for Air Leaks:** Look for any potential leaks or weak areas in the fabric and seams.
- **Keep Air Intake Clear:** Make sure that no decorations, snow, or leaves are obstructing the blower's air intake.
- To test stability, give the inflatable a little push to see if it holds securely.
- Have Fun Decorating for Christmas! You may now spread holiday cheer with your skiing snowman.

## CARE & MAINTENANCE

- **Stay Away from Sharp Objects:** To avoid punctures, keep away from fences, branches, and other sharp objects.
- **Store in a Dry Location:** To avoid mold and mildew, store in a dry location after the season.
- **Clean with a Damp Cloth:** Use a gentle cloth and mild soap to clean any filthy surfaces.
- **Avoid Machine Washing:** The fabric and electrical components may be harmed by machine washing or soaking in water.
- Make sure the power cord is dry. To avoid electrical dangers, keep the power plug and adapter dry.
- **Avoid Extended Sun Exposure:** Fabric fading and wear can result from prolonged exposure to direct sunlight.
- In windy conditions, reinforce by using more pegs or sandbags to provide additional stability.
- **Regularly Check the Zipper:** To avoid air leaks, make sure the zipper is completely closed before inflating.
- Keep an eye on the weather outside and stay indoors during periods of severe cold, snowfall, or rain.
- **Keep the Blower Intake Clear:** Make sure there are no snow accumulations, leaves, or other debris in the blower.
- **Turn Off When Not in Use:** Unplug and turn off the blower when not in use to prolong its life.
- **Periodically Check for Air Leaks:** If the snowman deflates too quickly, check for leaks and fix them using tape or fabric glue.
- **Avoid Placing Near Open Flames:** Steer clear of heat sources, candles, and fire pits.
- **Remove the Blower Before Storing:** Before folding and storing, always unplug the blower and power cable.
- Store in the designated storage bag after folding gently to prevent sharp creases.

## TROUBLESHOOTING

Issue	Possible Cause	Solution
Snowman not inflating	Blower not connected properly	Check and secure the blower connection
LED lights not working	Loose or damaged wiring	Inspect connections and replace if necessary
Snowman inflates slowly	Blocked air intake	Ensure no obstructions in the blower area
Inflatable keeps falling over	Stakes not secured	Use provided stakes and ropes to secure it
Air leakage noticed	Open zipper or fabric tear	Close the zipper and patch any small holes
Blower making loud noise	Debris stuck inside	Remove debris and clean the blower
Inflatable deflates quickly	Unzipped bottom or weak blower	Zip up fully and check blower functionality
Power cord too short	Limited outdoor outlet access	Use an outdoor-rated extension cord
Snowman tilting to one side	Uneven ground placement	Place on a flat, stable surface
Blower not turning on	Power issue or faulty adapter	Check outlet, replace adapter if needed

## PROS & CONS

### Pros:

- **Eye-catching** design with bright LED lights
- Quick inflation with a high-performance fan
- Weather-resistant and durable waterproof polyester
- Easy setup & storage with included accessories
- Reliable customer support from a professional U.S. seller

### Cons:

- Needs continuous power to stay inflated
- Stakes required to prevent movement in strong winds
- May require extra lighting for visibility in large yards
- Limited to Christmas decor use only
- Blower noise can be noticeable in quiet settings

## WARRANTY

GOOSH provides a **one-year** warranty for this inflatable snowman, ensuring customer satisfaction. The warranty covers manufacturer defects, faulty electrical components like LED lights or the blower, and damage upon arrival such as rips or stitching issues. If any issues arise, customers can reach out to GOOSH via the “Contact Sellers” option on their purchase platform. The brand also offers 24-hour customer service to address concerns quickly.

## FREQUENTLY ASKED QUESTIONS

What are the key features of the GOOSH Yard Skiing Snow Man?

The GOOSH Yard Skiing Snow Man is a festive inflatable featuring a round-bellied snowman with a black hat, red hands, and a colorful red scarf. It's depicted skiing and comes with built-in bright LED lights to add a warm, cheerful spirit to your yard or garden.

How tall is the GOOSH Yard Skiing Snow Man?

This inflatable stands at 6 feet tall, making it an ideal centerpiece for outdoor or indoor Christmas displays.

What material is used in the construction of the GOOSH Yard Skiing Snow Man?

It is made from high-quality waterproof polyester, which is designed to resist rips, tears, and harsh weather conditions, ensuring durability throughout the holiday season.

How do the built-in LED lights enhance the GOOSH Yard Skiing Snow Man?

The integrated LED lights create a bright, festive glow that enhances the decoration's appeal at night, bringing a magical and inviting atmosphere to your holiday celebrations.

How does the GOOSH Yard Skiing Snow Man inflate?

It features a high-performance waterproof fan supported by a CE and UL-certified adapter, along with a 10-foot power cord, ensuring quick inflation and continuous airflow.

Why might the built-in LED lights on the GOOSH Yard Skiing Snow Man fail to operate?

Ensure the power source is active and the LED wiring is intact. If the lights remain off, inspect the connections and, if needed, contact GOOSH customer support for assistance.

What should I do if the GOOSH Yard Skiing Snow Man does not inflate properly?

First, check that the blower is connected and functioning, the 10-foot power cord is securely plugged in, and that the bottom zipper is fully closed to prevent air loss.



## References

- [User Manual](#)

### Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.