



# GOOSKY T8 Transmitter Instruction Manual

[Home](#) » [GOOSKY](#) » GOOSKY T8 Transmitter Instruction Manual 

## Contents

- 1 GOOSKY T8 Transmitter
- 2 Product Information
- 3 Product Usage Instructions
- 4 Overview
- 5 Specification
- 6 Dimension
- 7 Battery Replacement
- 8 Introduction to flight control binding
- 9 Indicator light
- 10 Interchangeable
- 11 Documents / Resources
  - 11.1 References
- 12 Related Posts

**GOOSKY**

**GOOSKY T8 Transmitter**



## Product Information

The product is a remote-control device manufactured by Goosky Technology. The device is designed to be used with a specific series of products. The device has two models, Model 1 and Model 2. The device has a remote control power light (red) that indicates the power status of the device. The device has throttle, orientation, flying ring, front-back, left-right controls. The device also has an audio port and a 5V port.

## Product Usage Instructions


1. Before using the remote control device, read the instruction manual carefully to gain relevant knowledge and precautions.
2. Ensure that the device is compatible with the product series you intend to use it with.
3. Turn on the remote control device by pressing the power button.
4. The remote control power light (red) will indicate the power status of the device. If the light is on, it means the device is powered on.
5. The device has throttle, orientation, flying ring, front-back, left-right controls. Use these controls to operate the product.
6. The device has an audio port and a 5V port. These ports can be used to connect external audio devices or charge the device respectively.
7. When you are done using the device, turn it off and store it properly for future use.

Thank you for choosing Goosky Technology series products. Before entering the remote control world, you must be told a lot of relevant knowledge and precautions to ensure that you can be more comfortable in the learning process. Before starting the operation, please read this manual carefully. We believe it will be of great help to you. Please keep this manual properly for future reference.

## Overview


Remote Control Power Light(Red)


(MODEL 2)

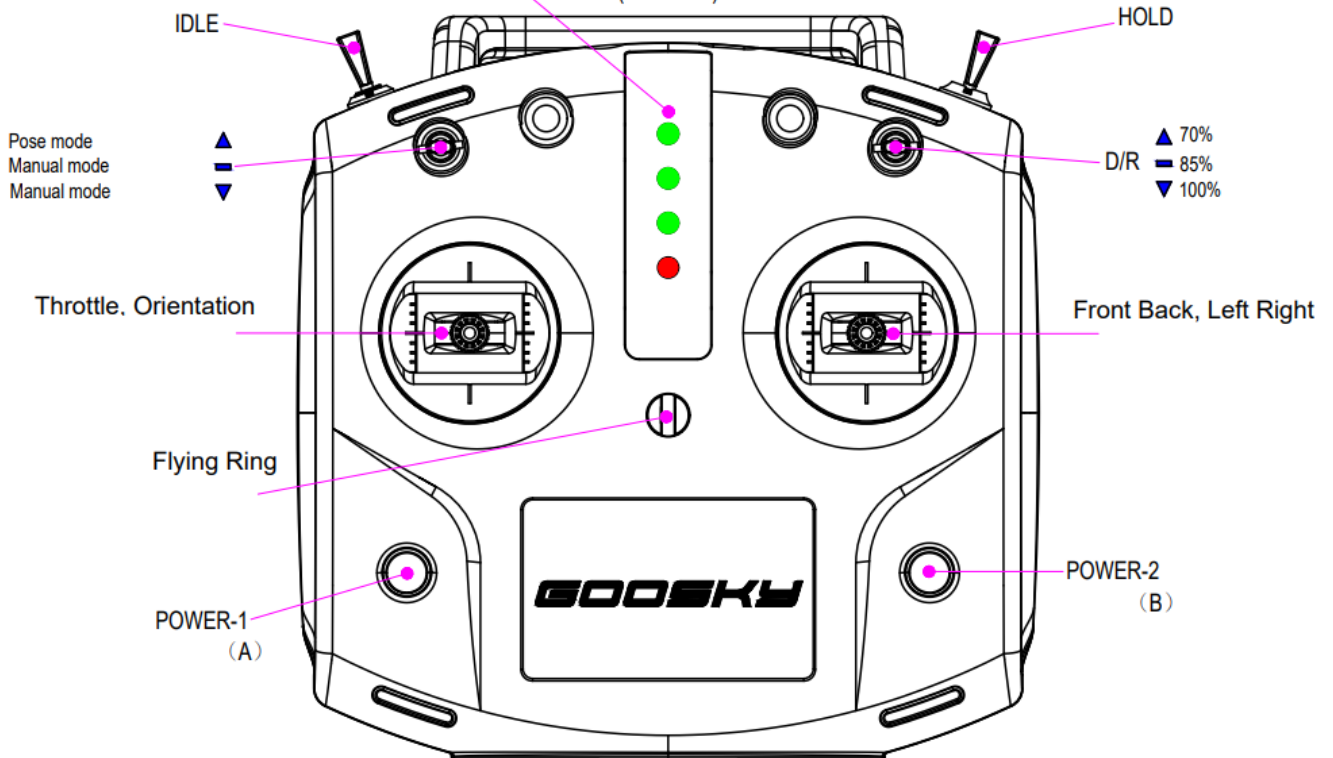

Remote Control Power Light(Red)

(MODEL 1)


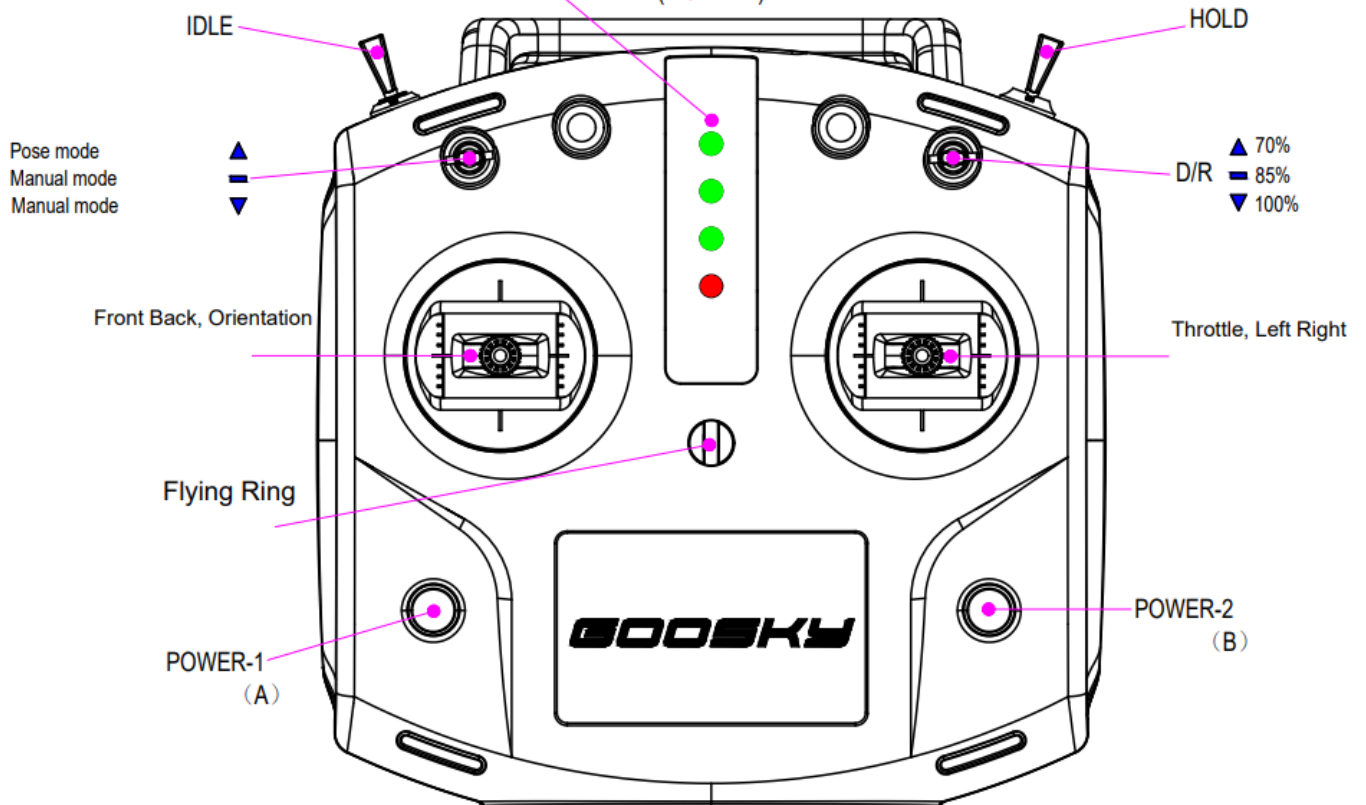


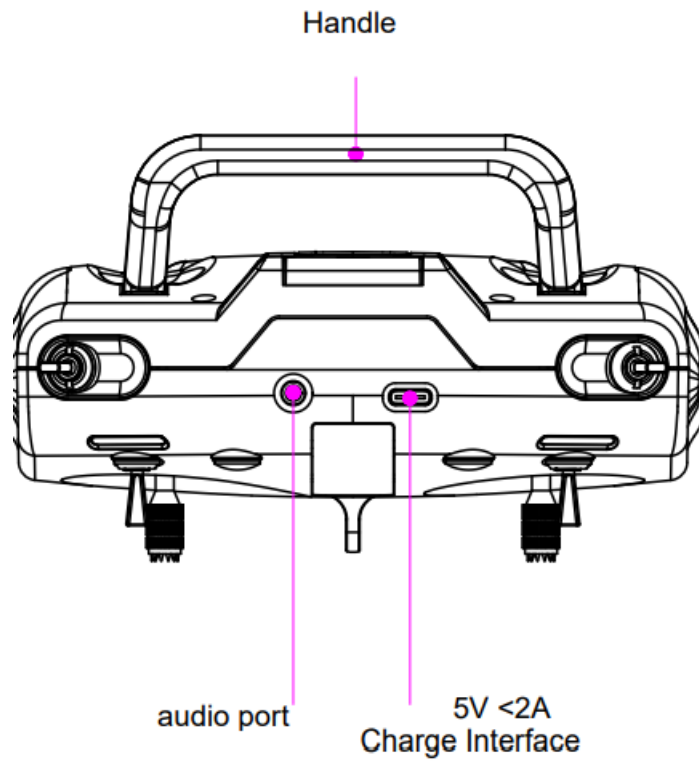


## Specification

- **(Product Model)** T8
- **(Diameters):** L153\*W93\*H154
- **(Radio Frequency):** 2.404GHz–2.4475 GHz (Transmit Power) < 20 dBm
- **(Weight):** 335g
- **(Modulation Mode):** 2FSK
- **(Spread Spectrum Mode):** s-FHSS
- **(Working Voltage):** 3.7V
- **(Remote Distance):** 300m
- **(Charge Interface):** TYPE-C
- **(Low Voltage Alarm):** 3.35V
- **(Battery Type):** Lithium Polyer Battery
- **(Battery Capacity):** 2800mAh 3.7V
- **(Coach Interface):** PPM

## Dimension

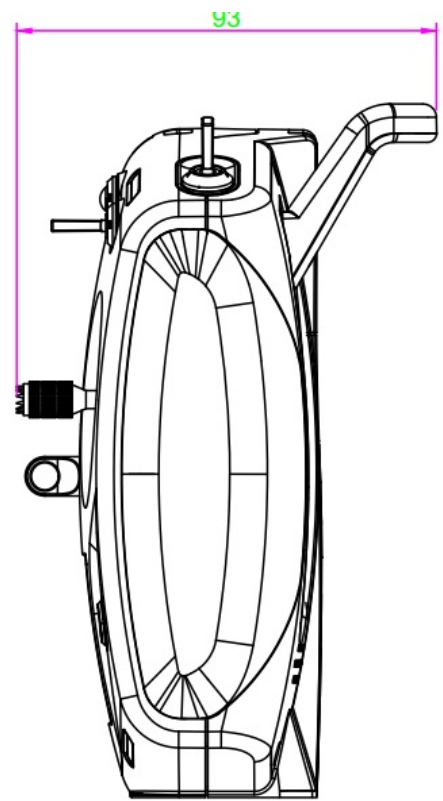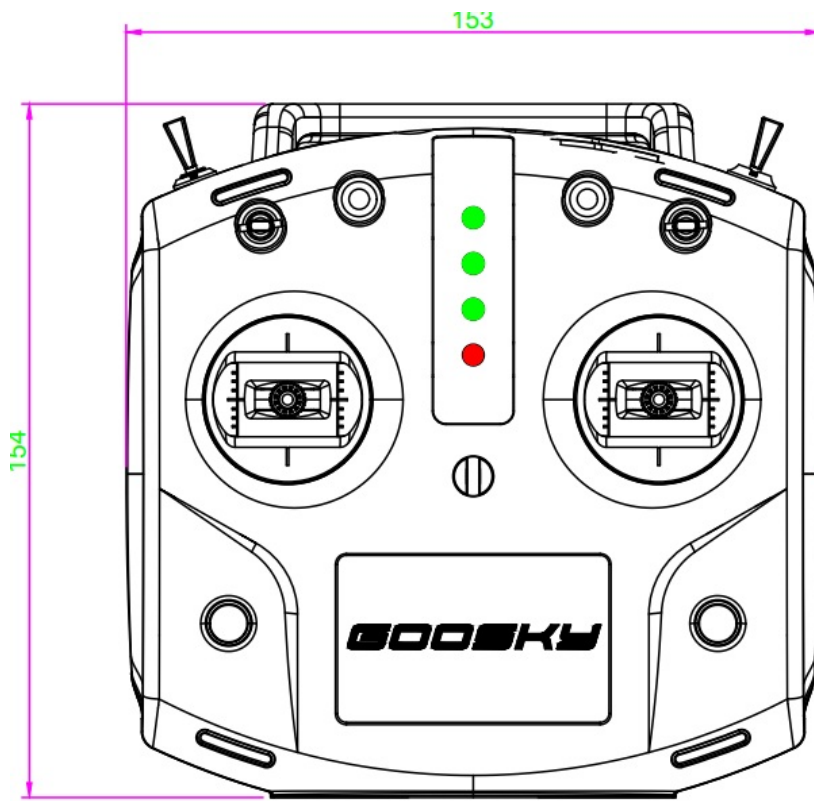


## Battery Replacement

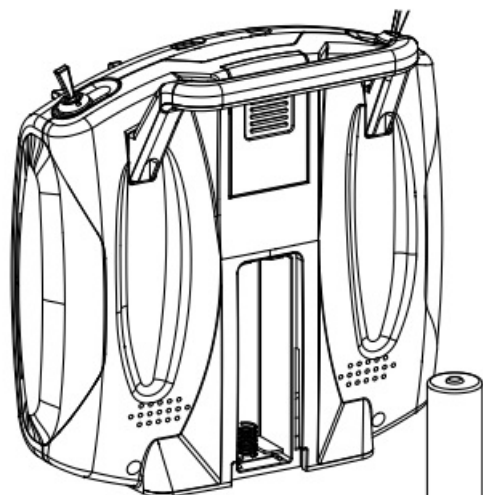

Push down

Push down the battery compartment cover, take out the 18650 lithium battery, and remove the battery protective film;

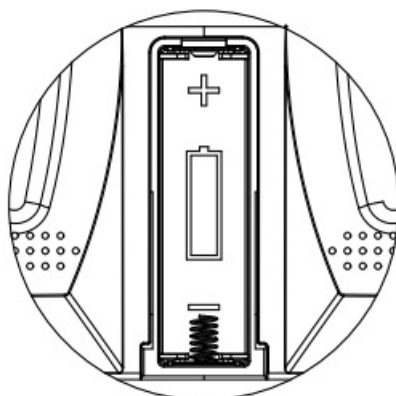

Protruding end



Flat end




The protruding end (+) pole and the plane end (-) pole of the battery shall be installed into the battery compartment according to the marked direction in the battery compartment;

**Turn on and off the remote control**



Remote Control Power Light(Red)

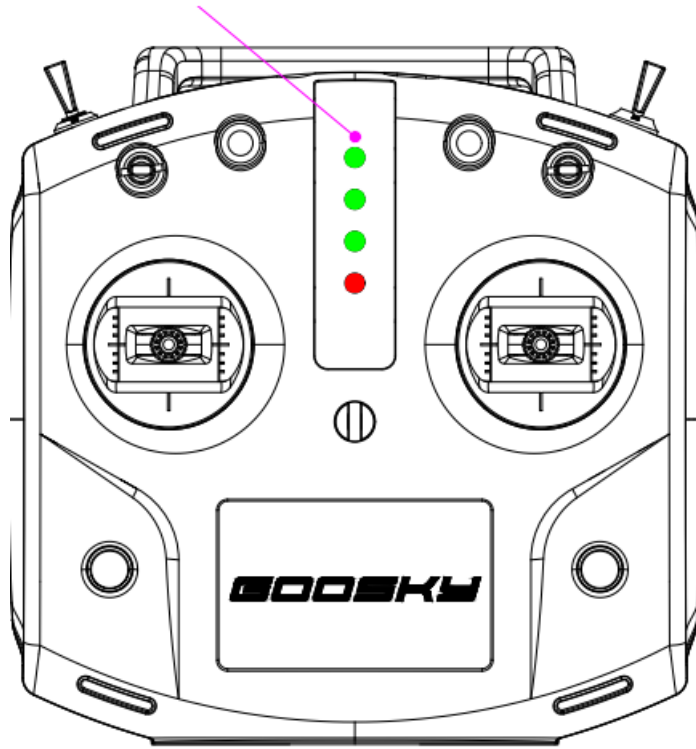

(Introduction to indicator light)	
	75%-100%
	50%-75%
	25%-50%
	0%-25%

Turn on the GOOSKY T8 transmitter, press the BIND button for 3 times after the helicopter is powered on. The blue light flashes quickly. Keep the transmitter less than one meter away from the flight control. The flight control passes self-detection when the blue light is solid on. Then the binding is done.


1. When only the red light of the power indicator is always on, it should be charged in time to avoid affecting the use;
2. It is recommended to store 75% of the battery power and replenish the battery power every 3 months to avoid over discharge of lithium battery;

## Interchangeable

**Mode1 and mode2 are interchangeable**




(MODEL 2)

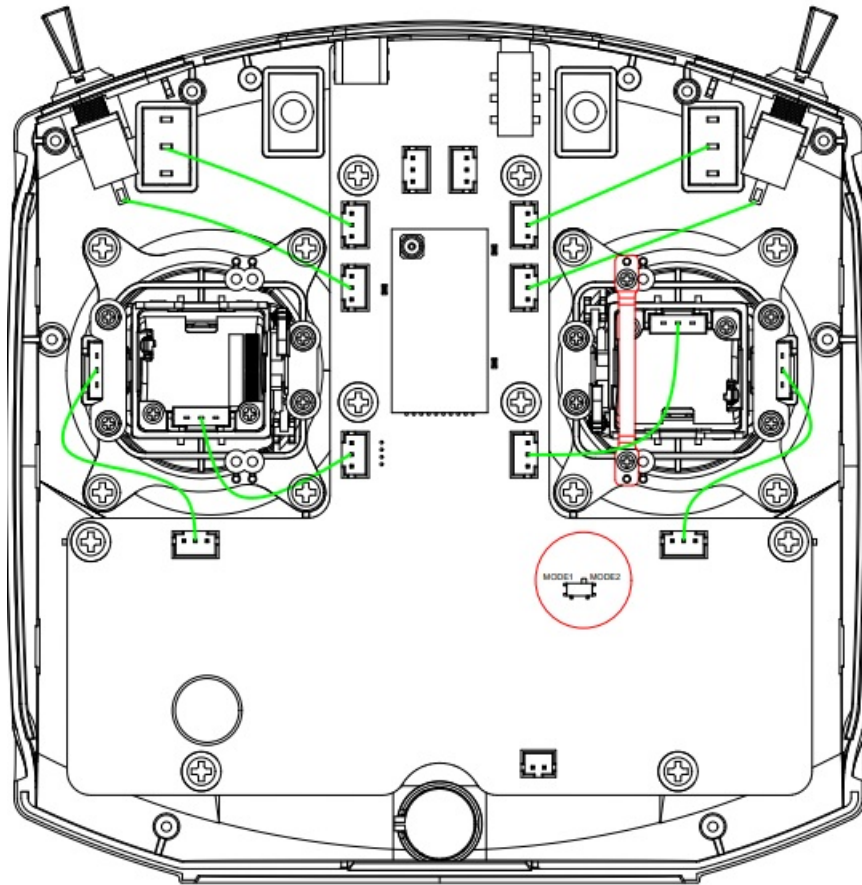


MODE1 MODE2



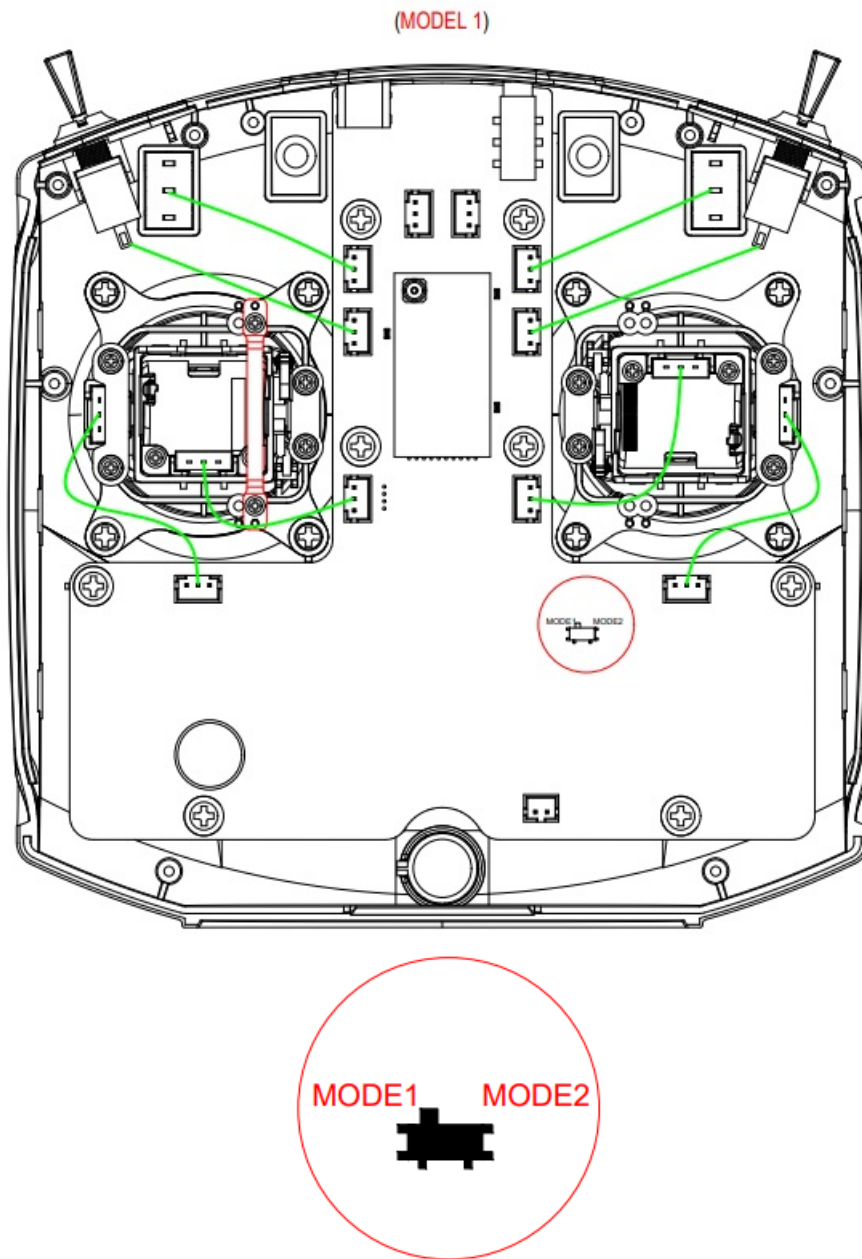


**CAUTION:** Disassemble the left and right assembly seats of the remote control, and unplug the connecting wire plug;

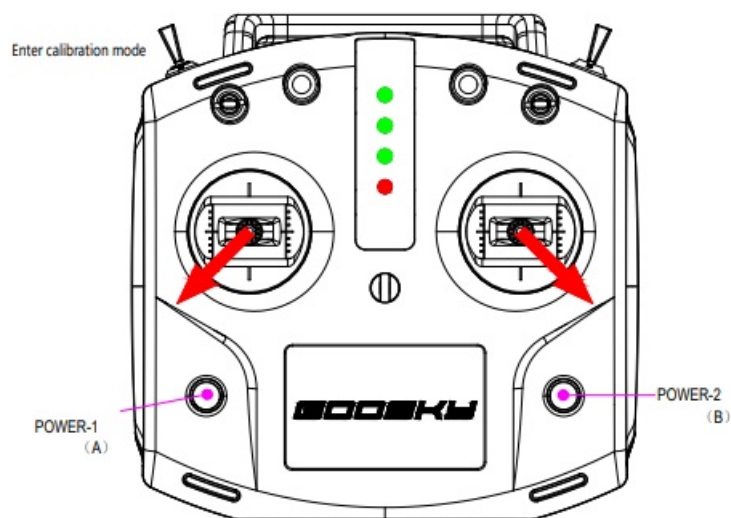

1. The remote control is turned off;

2. Turn the two rocker arms to the outside figure 8, as shown in the arrow direction, and turn on the power of the remote control at the same time (turn on);
3. At this time, the remote control will send out (Beep) sound and enter the calibration mode;

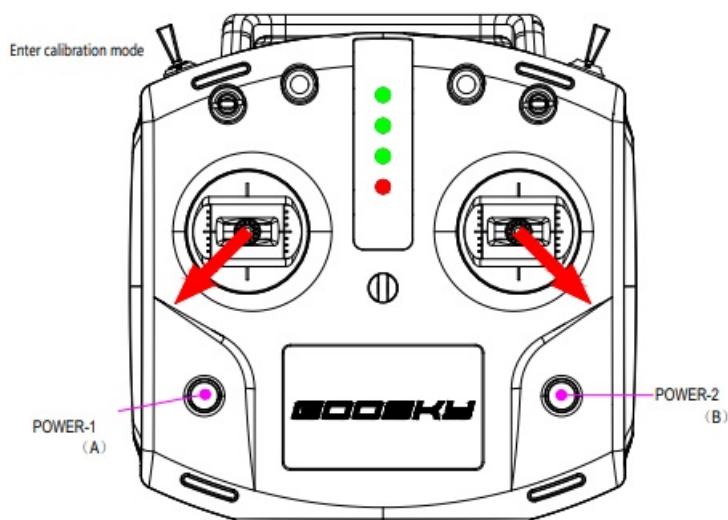

4. Turn the left and right rocker rods along the red line for two circles at the maximum range, then put the accelerator rocker rod at the lowest position, and the lifting rocker rod will naturally return to the center;
5. The remote control emits (didi) sound, calibration is successful, and exit;

Zhongshan Goosky Technology Innovation Co., Ltd. [www.goo-sky.com](http://www.goo-sky.com)  
[WWW.GOO.SKY.COM](http://WWW.GOO.SKY.COM)

## Documents / Resources

	<p><a href="#">GOOSKY T8 Transmitter</a> [pdf] Instruction Manual  T8 Transmitter, T8, Transmitter</p>
--	--

## References

- [Home](#)