




## gosuna WP3-4 Mini Smart Plug, WiFi Outlet Socket Instruction Manual

[Home](#) » [gosuna](#) » gosuna WP3-4 Mini Smart Plug, WiFi Outlet Socket Instruction Manual 



### Smart Plug Instruction WP3

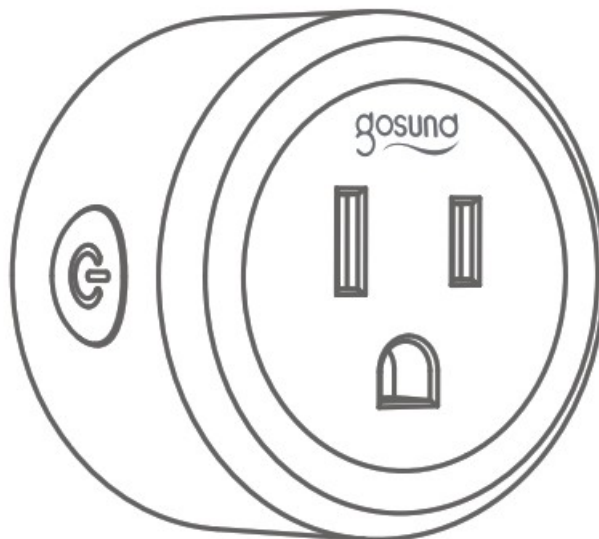

**2.4G** Wi-Fi  
Ready



**5G** Wi-Fi  
Not supported

Since the device only supports 2.4G Wi-Fi connection, please ensure that the mobile phone and the device are connected to 2.4G Wi-Fi simultaneously.

## Contents


- 1 Parts Included
- 2 At a Glance
- 3 Parameters
- 4 Main Features
- 5 How to Download the Gosund App
- 6 How to Pair with the Gosund App
- 7 Reset
- 8 Warnings and Precautions
- 9 Documents / Resources
- 10 Related Posts

## Parts Included

Smart Plug	x 1
User Manual	x 1
Binding Voice Assistants Guide	x 1

## At a Glance

- ①. ON/OFF Button
- ②. Indicator Light
- ③. Flame Resistant Material

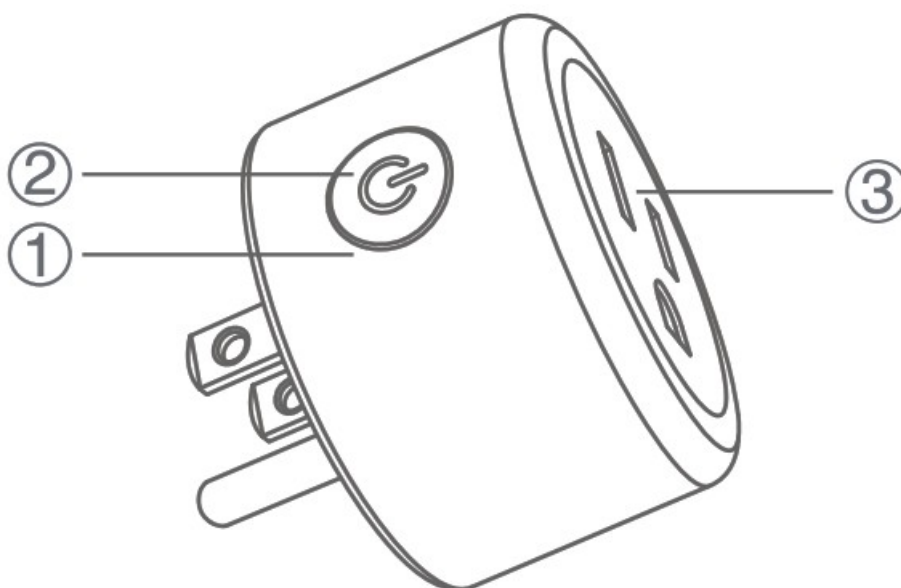

## Parameters

Model: WP3  
Input: 120V~, 60Hz 10A  
Rated Power: 1200W Max.

## Main Features



Voice  
Control



APP  
Control



Scheduled  
Control



Family  
Sharing



Group  
Control



No Hub  
Required



Mini Size



V0 Fireproof  
Materials

## How to Download the Gosund App

**Option 1** Search for “Gosund” in the Apple APP Store or Google Play.

**Option 2** Scan the QR code to enter the download page.



<https://smartapp.tuya.com/gosundsmart>

## How to Pair with the Gosund App

1. Open the “Gosund” APP and create your Gosund account.
2. Turn on the plug and put it close to the router when pairing.
3. Press and hold the ON/OFF button for 5 seconds and release it when the plug starts blinking fast to enter the network pairing mode.

You can add a device in two ways.

**Option 1.** Tap “+” on the upper right corner and select “Auto Scan”.

**Option 2.** Tap “+” on the upper right corner to select “Add Manually”, and then select “Socket (Wi-Fi)”.

Follow the App instructions to complete the operation.

## Reset

Turn on the power, hold the Switch/Pairing button for 5 seconds, and let it go, when the socket starts blinking fast, the reset process is successful.

When the socket is in a new network environment, you need to restore the factory settings, and then reconnect to the network.

Warnings and Precautions

Important!

Keep it out of the reach of children and pets.  
Do not use this product in a humid environment or outdoors. It's for indoor use only.  
Do not place this product near heating devices, such as microwave ovens, stoves, or radiators.  
Protect the product from extreme temperatures, direct sunlight, strong jolts, high humidity, moisture, flammable gases, vapors and solvents.  
Do not disassemble, modify, or repair your device, and ask help from the authorized professionals for device malfunction.  
Do not use the device when it is no longer working properly or visibly damaged.  
Do not store the device for extended periods in poor ambient conditions.  
Do not insert your device to another one.  
Never use aggressive detergents such as alcohol or other chemical solutions because these could damage the casing or even impair the functioning of the product.  
**Note:** The image shown in the manual is indicative only. If there is inconsistent between the image and the actual product, the actual product shall govern.



4.02.000.0449 V2.0

Documents / Resources

	<p><a href="#">gosuna WP3-4 Mini Smart Plug, WiFi Outlet Socket</a> [pdf] Instruction Manual</p> <p>WP3-4 Mini Smart Plug WiFi Outlet Socket, WP3-4, Mini Smart Plug WiFi Outlet Socket, Smart Plug WiFi Outlet Socket, Plug Plug WiFi Outlet Socket, Plug WiFi Outlet Socket, WiFi Outlet Socket, Outlet Socket, Socket</p>
---	--