



[Home](#) » [GPX](#) » **GPX PJ505 v3411-01 Beam Plus Projector With Bluetooth User Guide** 

Contents [[hide](#)]

- [1 GPX PJ505 v3411-01 Beam Plus Projector With Bluetooth](#)
- [2 Product Information](#)
- [3 Safety Instructions & Warnings](#)
- [4 OVERVIEW](#)
- [5 Projector](#)
- [6 REMOTE](#)
- [7 Projector Setup](#)
- [8 Menu Options](#)
- [9 Connecting to Other Devices](#)
- [10 Warranty](#)
- [11 FAQ](#)
- [12 Documents / Resources](#)
 - [12.1 References](#)



GPX PJ505 v3411-01 Beam Plus Projector With Bluetooth



Specifications:

- **Model:** PJ505 v3411-01
- **Brand:** Beam+
- **Connectivity:** Bluetooth

Product Information

The Beam+ Projector with Bluetooth is a versatile projector designed to provide high-quality entertainment and presentation capabilities. With features such as HDMI and USB ports, as well as Bluetooth connectivity, this projector offers a range of options for connecting to various devices.

Safety Instructions & Warnings:

It is important to follow safety instructions and warnings provided in the user manual to ensure safe operation of the projector. Avoid making any changes or modifications to the unit that are not approved by the manufacturer.

Projector Setup:

1. **Power:** Press the power button once to turn on the projector (indicated by a white light) and press again to turn it off (red light).
2. **Projector Placement:** Ensure the projector is placed at least 20cm away from your body for safe operation.

3. **Angle Adjustment:** Adjust the angle of the projector to achieve the desired viewing position.
4. **Viewing Options:** Explore different viewing options such as image adjustment, ceiling mount, starlight, and mood lighting.

Menu Options:

1. **Home Screen:** Access the main menu for navigation.
2. **Picture Menu:** Adjust picture settings for optimal display.
3. **Sound Menu:** Customize sound settings for an enhanced audio experience.
4. **Options Menu:** Explore additional settings and features.
5. **Bluetooth Device Menu:** Pair the projector with Bluetooth wireless speakers or sound bars.
6. **Keystone Menu:** Adjust keystone settings for proper image alignment.

Connecting to Other Devices:

1. **Pairing to Bluetooth Wireless Speakers or Sound Bar:** Follow the instructions to connect external audio devices.
2. **HDMI:** Connect HDMI-compatible devices for video input.
3. **External Audio:** Utilize the headphone jack for external audio output.
4. **USB Storage Devices:** Connect USB storage devices for media playback.
5. **Smartphone:** Connect your smartphone for screen mirroring or content sharing.

For the most up-to-date version of this User's Guide, go to www.gpx.com

Safety Instructions & Warnings

Important Safety Instructions

- Read these Instructions.
- Keep these Instructions.
- Heed all Warnings.
- Follow all instructions.
- Do not use this apparatus near water.

- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding – type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

FCC Warnings

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum 20cm distance between the unit and your body.

Additional Warnings and Precautions

- Do not look directly into the projector light.
- Use in well-ventilated area with ambient temperature between 41°F–104°C (5°C–40°C).
- Do not block any ventilation openings.
- To prevent risk of overheating, place the projector in an area that does not block ventilation, such as an enclosure or cabinet that might restrict airflow.
- Do not place the projector on an unstable surface, such as a loose stack of books, bed, or cushion.
- Do not cover the projector with a blanket, curtain, or similar items.
- If setting up near a wall, leave at least 10 in. (25cm) between the wall and the projector's ventilation ports.
- Use a power outlet that can be easily accessed and unplugged.
- Do not block the light coming out of the lens. The light will heat the object and may cause burns, cause it to melt or catch fire.
- When powering off the projector, allow the cooling cycle to finish before handling or disconnecting the power supply.
- Do not use the projector if it has been damaged. Damage could be (but not limited to):

- Unit has been dropped or something has been dropped on it or into it.
- Something is loose or rattling inside the unit.
- Projector has been exposed to rain or liquid.
- Power supply or power cord is damaged.
- Do not use the projector in places where flammable gases or explosives may be present.
- Do not use the projector in the following conditions:
 - Extremely hot, cold, or humid environments
 - Environments with excessive amounts of dust and dirt in the atmosphere.
 - Near appliances generating a strong electromagnetic field or heat.
 - In direct sunlight.
- If the air vents become clogged or dirty, use a vacuum or air compressor and nozzle to clean. Do not use canned air, as the gas may leave a residue inside the enclosure.
- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- **WARNING:** Shock hazard – Do Not Open.
- Caution and marking information is located at the rear or bottom of the apparatus.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain, moisture, dripping, or splashing.
- Objects filled with liquids, such as vases, shall not be placed on the apparatus.
- Do not place any objects, heavy or otherwise, on the projector.
- This product meets and complies with all Federal regulations.
- See projector enclosure for related safety markings.
- No user serviceable parts inside, do not attempt to open the unit or perform any

repair. Doing so may cause damage or injury and will void your warranty.

- Refer all repairs or replacement to qualified service personnel.
- Stop using the projector and unplug the power source immediately if you notice the following:
 - Smoke coming from the unit or power supply.
 - Strange odors or noises coming from the unit.
 - Liquid or foreign objects have gotten inside the unit.
 - Unit has been dropped and enclosure has been damaged.

WARNING: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



 
The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of un-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

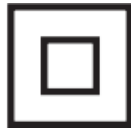

WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov. This product meets and complies with required Federal product guidelines.



OVERVIEW

FEATURE

 
- **Native Resolution:** 1280 x 720 (720p)
- Supports 480p, 720p, 1080i, 1080p
- **Aspect Ratio:** 16:9, 4:3
- **Brightness:** 110 ±10% ANSI lumens
- Bluetooth transmitter
- I/O: HDMI, USB, Audio out (3.5mm)
- Up to 140" viewable screen size
- **Display distance:** 3.6–12.5 ft. (1.1–3.8m)
- Supports mpeg1, mpeg2, mpeg4, mp3, m4a, bmp, png, and jpeg
- Built-in speaker
- Keystone angle correction and focus adjust

Includes


- Remote control: requires 2 AAA batteries (not included)
- AC/DC power adapter
- User's Guide

Projector

Features & Inputs

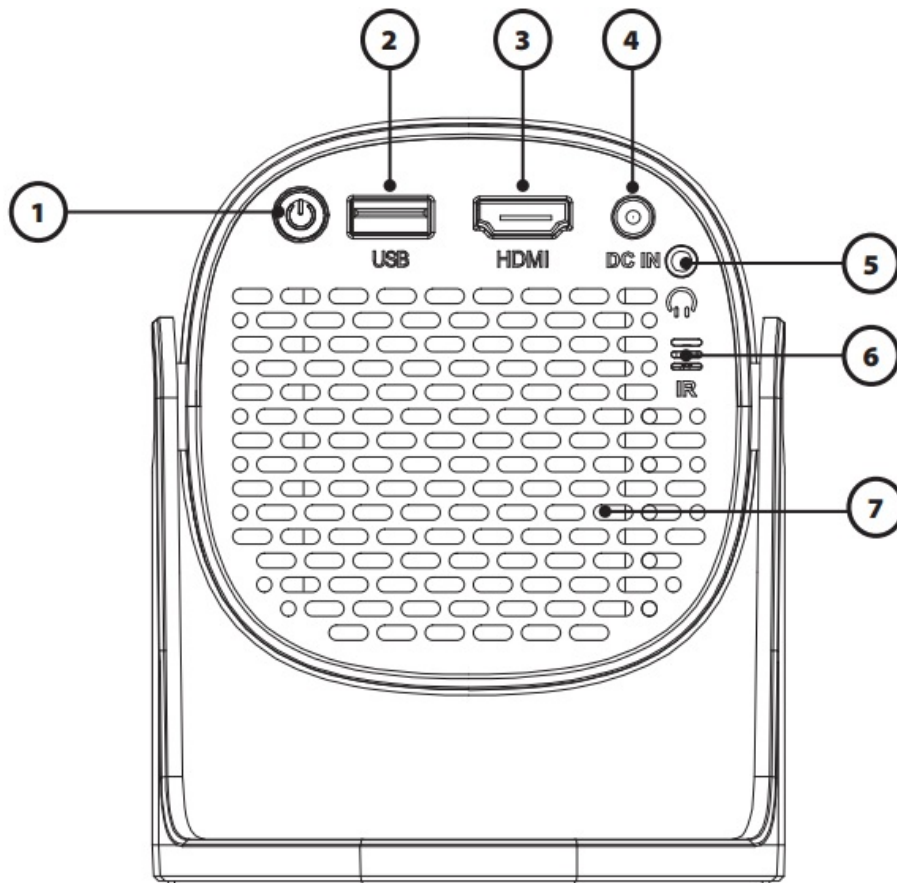

 1. Power Button – Press once to turn the projector on (Button light white color). Press again to turn the projector off. (Button light red color)
2. USB Port
3. HDMI Port
4. DC In Port
5. Headphone Jack
6. IR Sensor
7. Air Vent

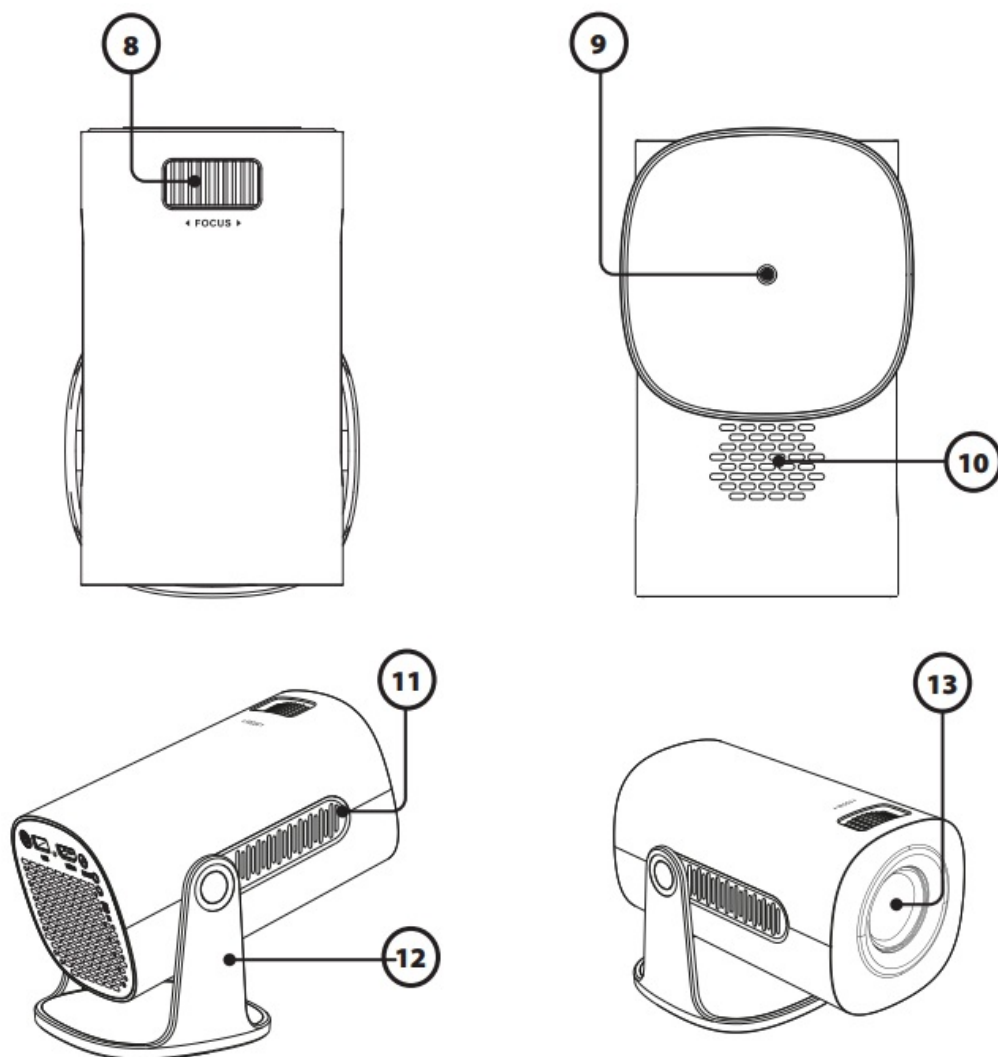

8. Focus Adjust Knob – Turn to adjust screen focus by changing the image size.

9. Ceiling Mount

10. Speaker

11. Air Intake

12. Swivel Stand

13. Lens

REMOTE

Functions

Note: This projector does not have any operation buttons on the unit itself other than the power button. It can only operate using the remote.

- **Power**

Press to power ON.

Press to power OFF.

- **Starlight**

Press to turn on starlight/galaxy projection mode.

- **–**

Press to cycle back through starlight or mood light selections.

- **+ Press** cycle forward through starlight or mood light selections.

- **Mood Lighting**

Press to turn on mood/ambient lighting.

- **Arrows/OK**

Press to navigate and confirm selections in Settings and other menu(s).

- **Menu**

Press to access projector Settings.

- **Exit/Return**

Press to exit menu(s) or return to the previous screen.

- **Home**

Press to return to the Home screen.

- **Mute**

 
Press to mute volume.

- **Volume –**

Press to decrease audio level.


- **Volume +**

Press to increase audio level.

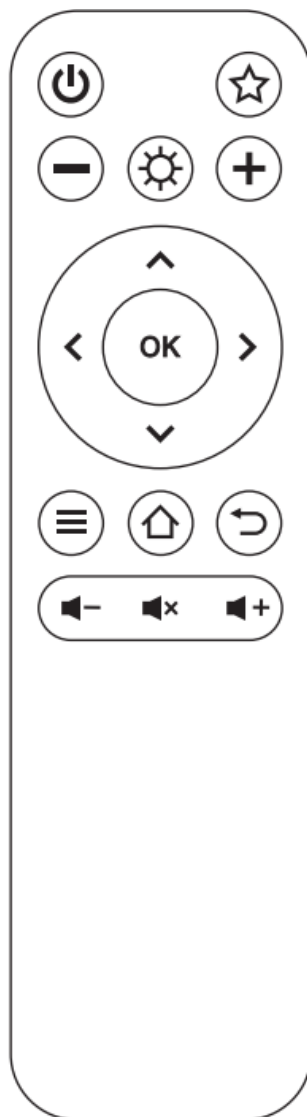

Batteries

 
Requires 2 AAA batteries (not included).

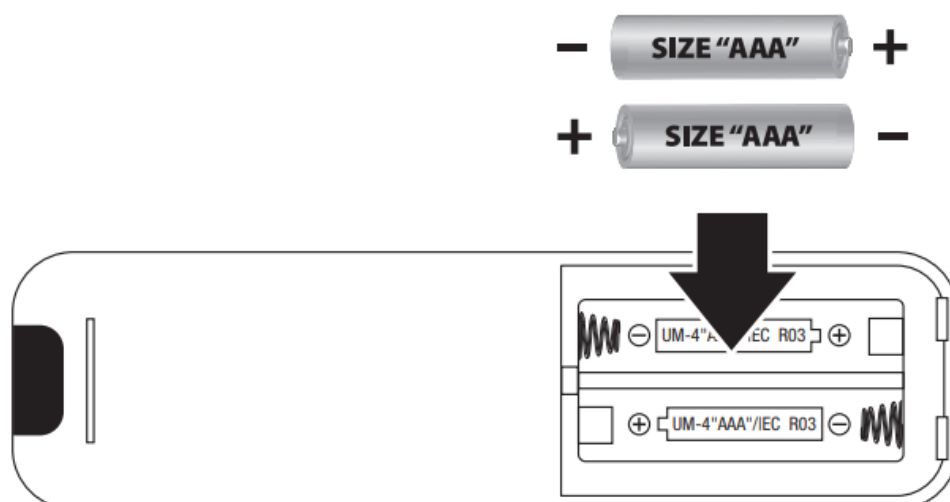

Projector Setup

Power

 Plug the AC/DC power adapter (included) into a standard wall outlet and the DC power input on the rear of the unit. After connecting power, please allow approximately 5 seconds to pass before powering the unit ON.

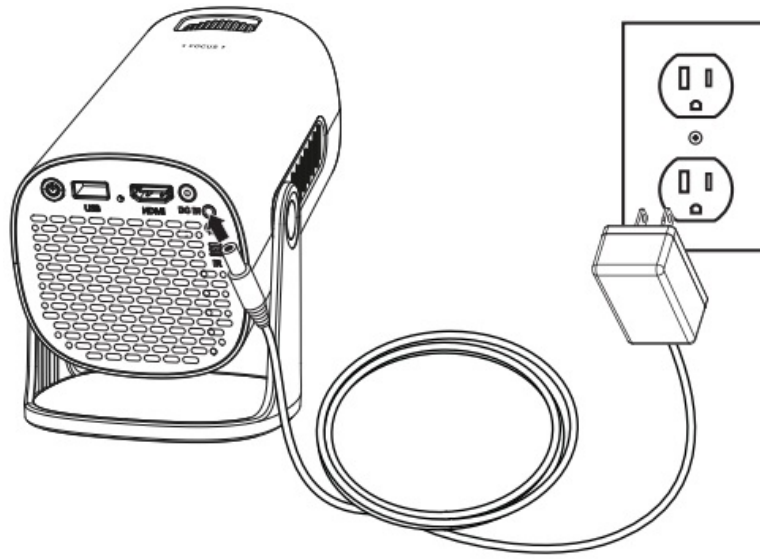


Projector Placement

For best results, place the projector in a dark room or other dimly lit area. The projector will display a screen size from 40" to 140" diagonal. Moving the projector closer to the screen will display a smaller screen size. Move the projector farther away to increase the screen size. Adjust the projector angle and distance to best suit your needs.

Angle Adjustment

 The projector features a 180-degree swivel design. You can adjust the tilt to fit the viewing angle you prefer (ex: opposite wall of plug, ceiling, etc.)

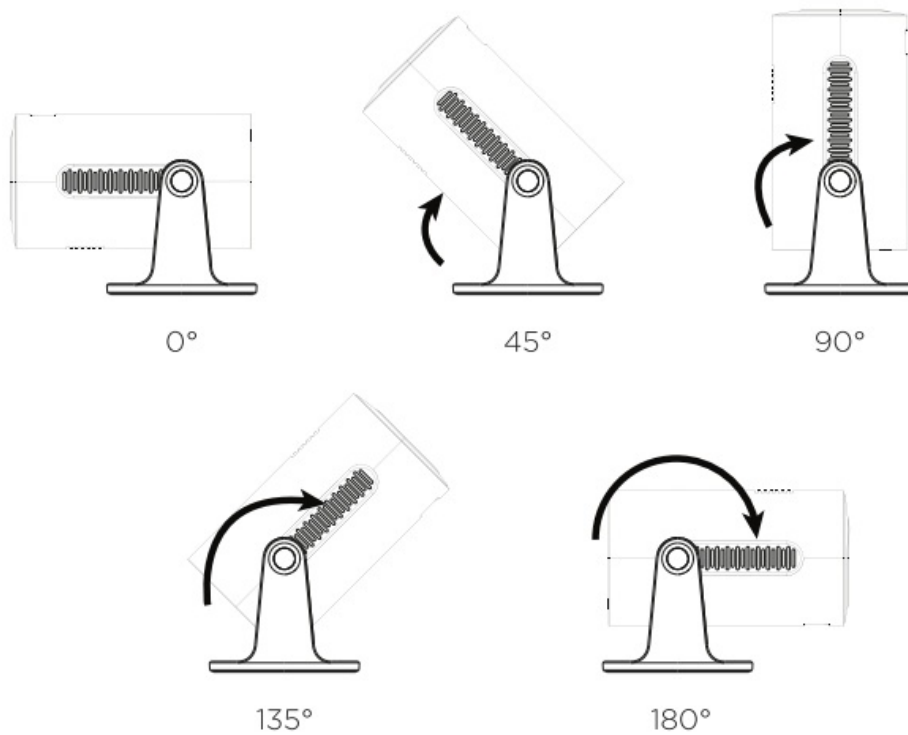

Viewing Options

The projector can be used to project onto a wall or screen. It can be mounted from a ceiling or placed on a table.

 
Be sure to aim the remote at the sensor on the front or rear of the projector. See page 6 for sensor locations on the projector. When projecting from the rear position, a special screen will be needed (not included) to display the image.




FRONT TABLE



REAR TABLE

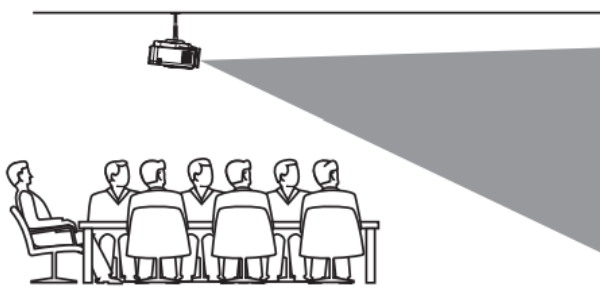


FRONT CEILING

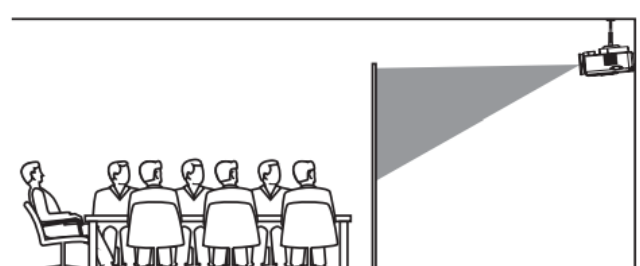 


REAR CEILING

 Image Adjustment

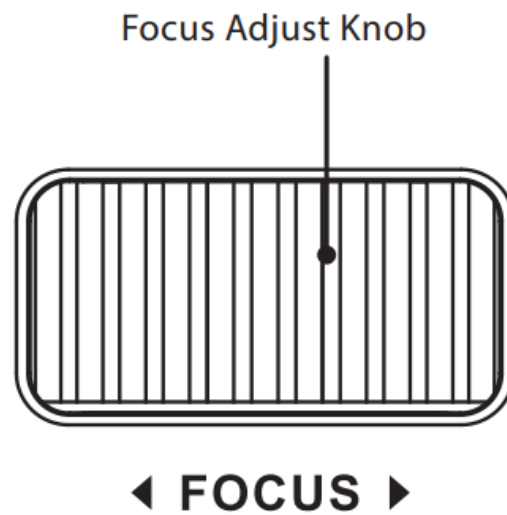


Focus Adjustment

 Increase or reduce image size to sharpen image.

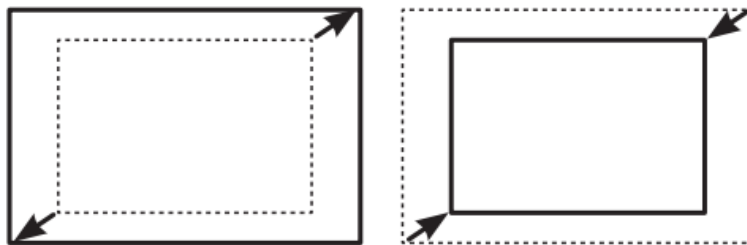

Ceiling Mount

 To mount the projector from the ceiling, you will need mounting hardware as recommended by a professional. Mounting hardware and instructions are not included. Before mounting, be sure the ceiling structure can support the weight of the projector and the mount itself. It is recommended to have this unit mounted by a professional.

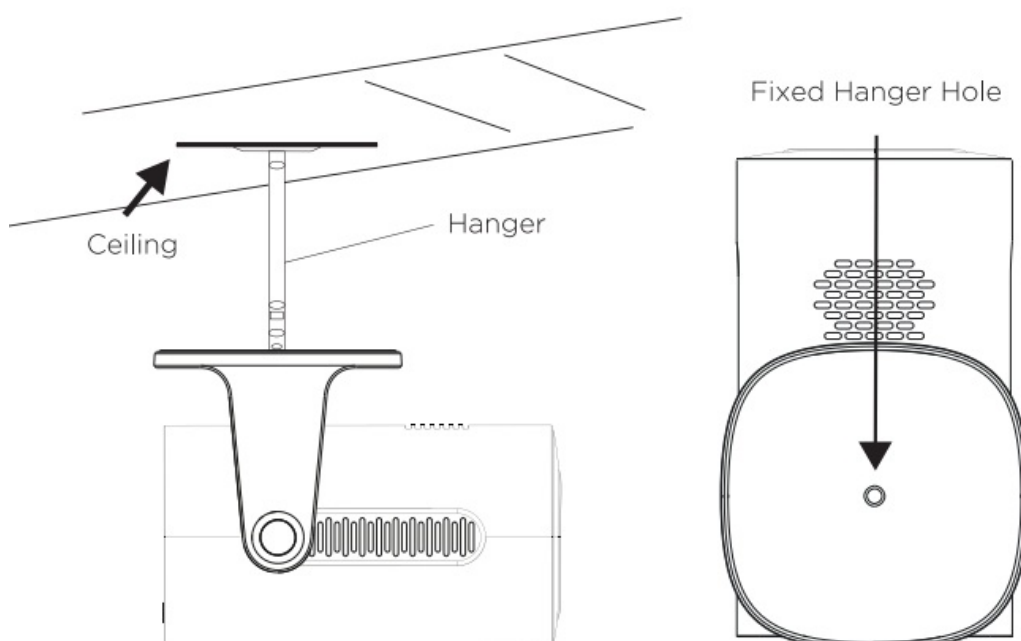


Starlight

The projector can project 6 different galaxy or starlight images. Press the Starlight button on the remote to project the starlight image. Press the + or – buttons to cycle through starlight image options.

Mood Lighting


The projector features 7 ambient mood light options. For best light dispersal, keep the lens cap on the projector when displaying mood lighting.

 Press the Mood Light button on the remote to turn on mood lighting. Press the + or – buttons to cycle through mood lighting options.

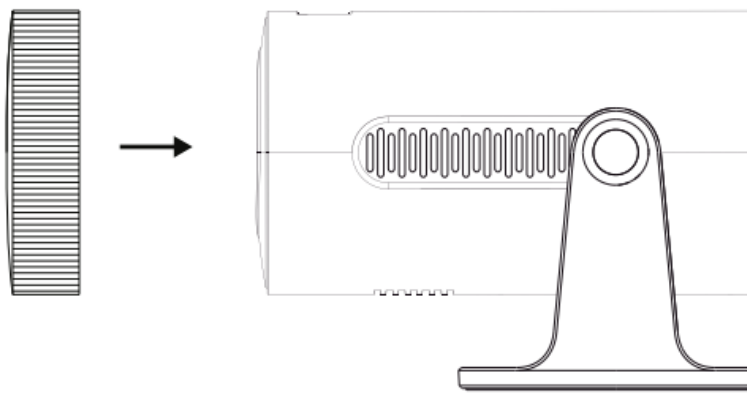


Menu Options

 Home Screen

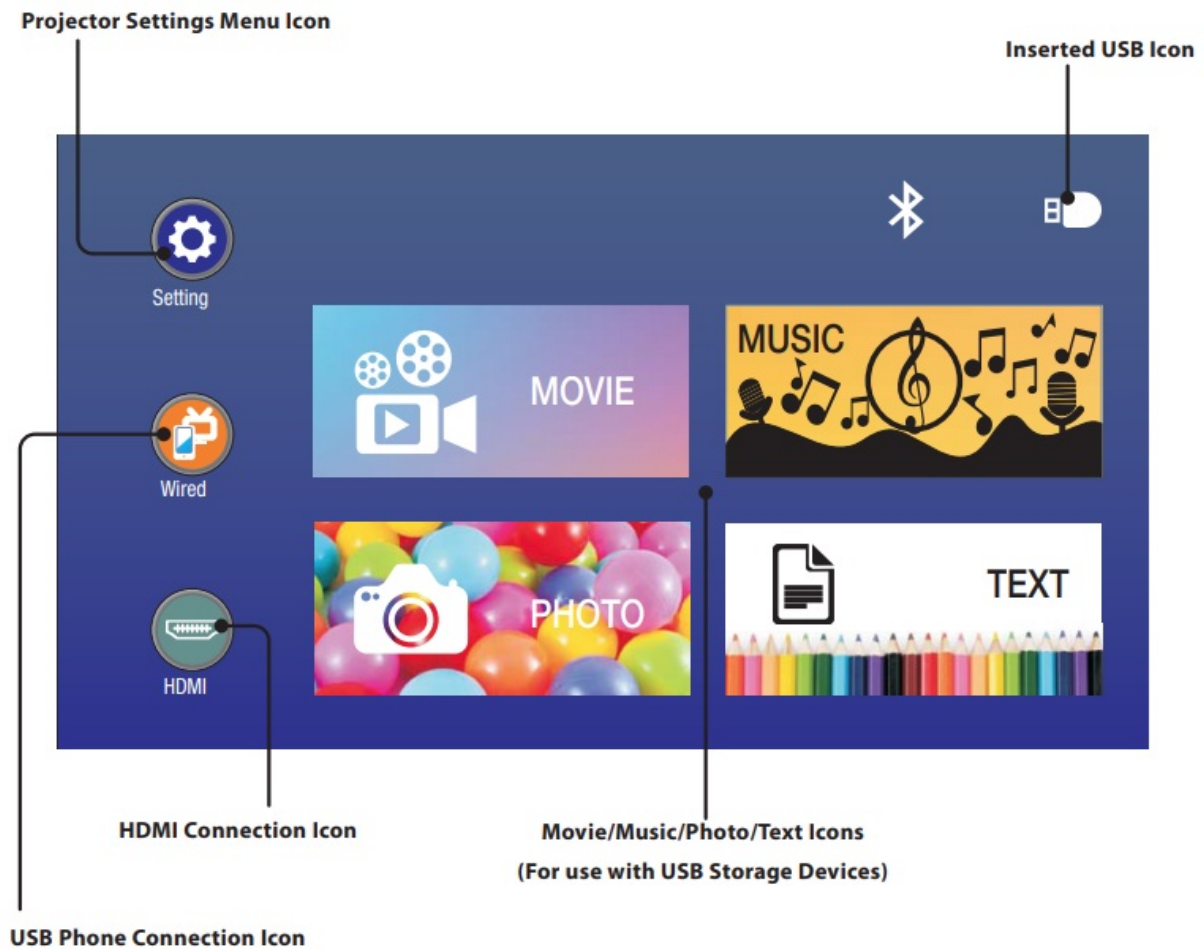

Access the projector settings menu by pressing the Menu button on the remote. Note: Not all settings are user adjustable.

 Picture Menu

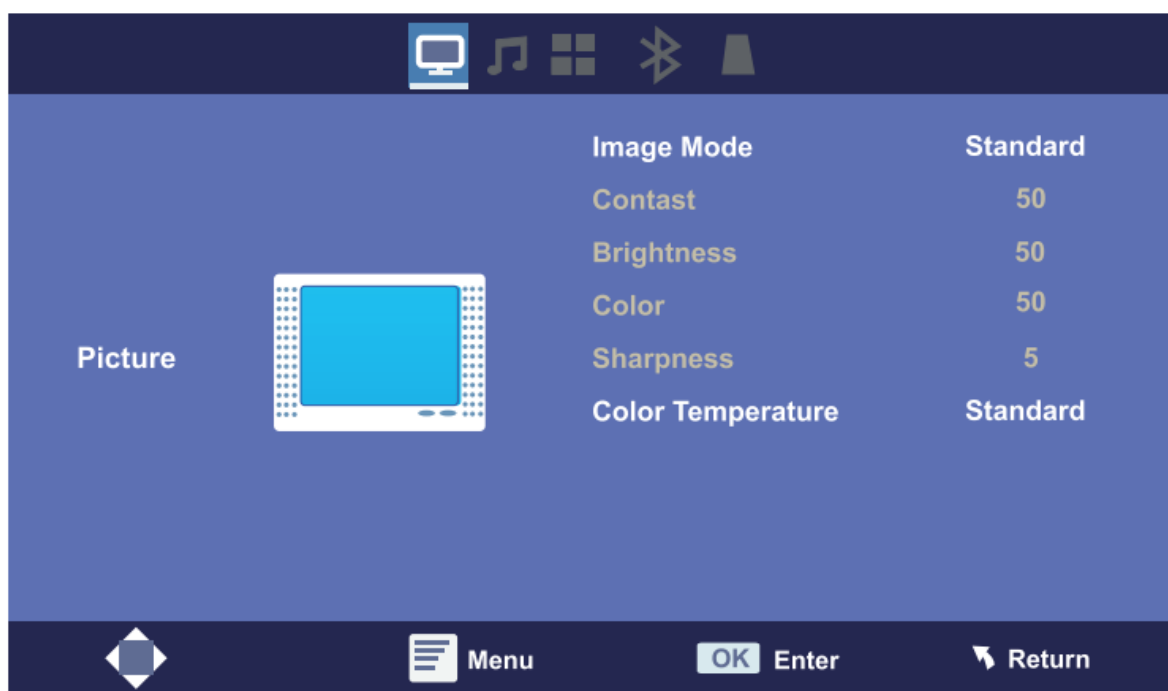

1. Image Mode

Use the Arrow Buttons on the remote to select Standard, Dynamic, Mild, or User (custom). The User setting allows you to adjust Contrast, Brightness, Color, and Sharpness.

2. Contrast

Set the contrast level between 0 and 100 using the Arrow buttons on the remote.

3. Brightness

Set the brightness level between 0 and 100 using the Arrow buttons on the remote.

4. Color

Set the color level between 0 and 100 using the Arrow buttons on the remote.

 
5. Sharpness

Set the sharpness level between 0 and 100 using the Arrow buttons on the remote.

6. Color Temperature

Select Cool, Standard, or Warm using the Arrow buttons on the remote.

Sound Menu

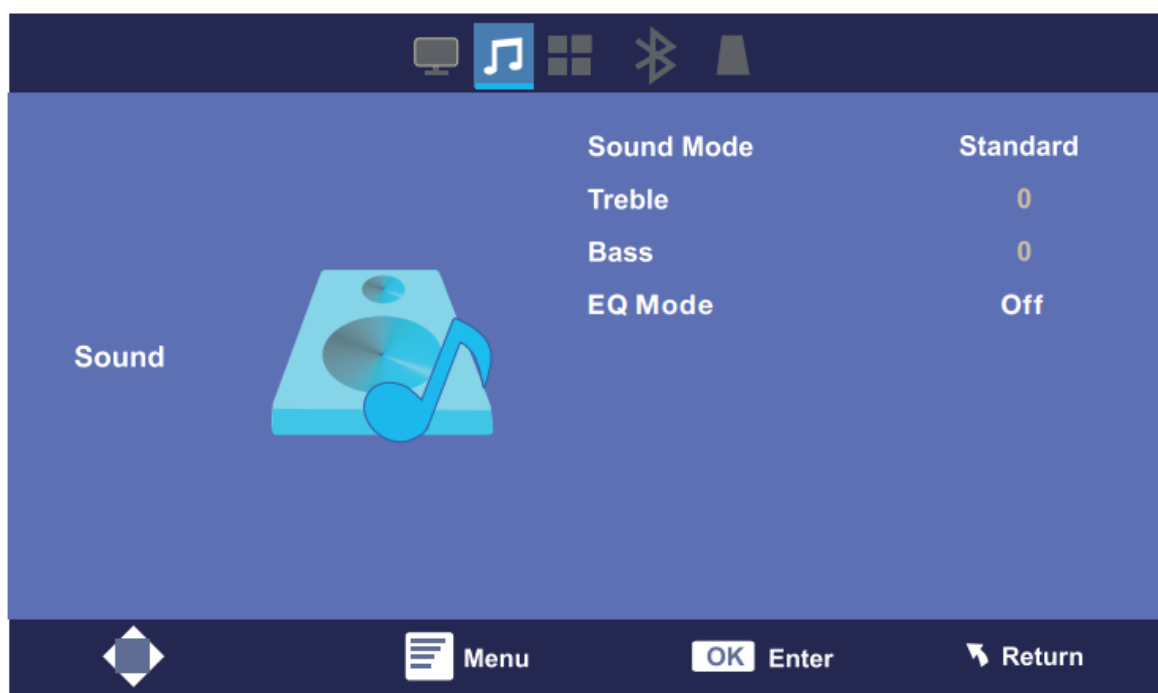

1. Sound Mode

Select Standard, Music, Movie, Sports, and User (custom). The User setting allows you to adjust the Treble and Bass levels.

2. Treble

Set the treble level between -10 and +10 using the Arrow buttons on the remote.

 
3. **Bass**

Set the bass level between -10 and +10 using the Arrow buttons on the remote.

4. **EQ Mode**

Set the EQ Mode to On or Off using the Arrow buttons on the remote.

Options Menu

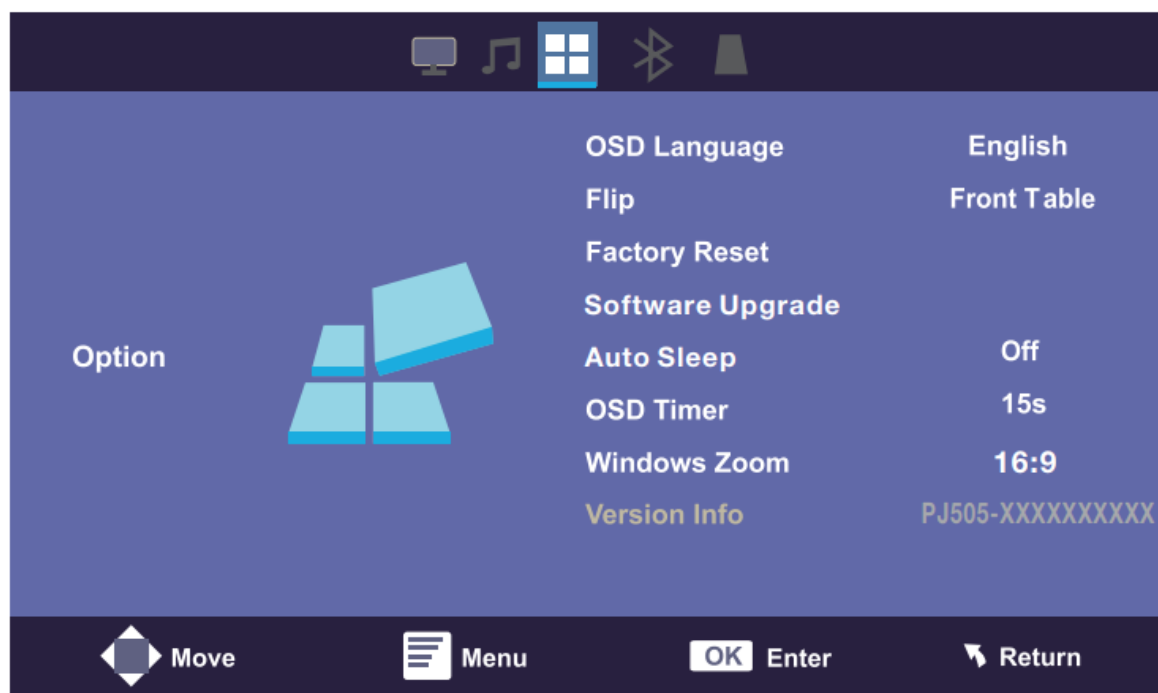

1. **OSD Language**

Select English, French, or Spanish for the On-Screen Display.

2. **Flip**

Use the Arrow buttons on the remote to select Front Table, Front Ceiling, Rear Table, or Rear Ceiling.

3. **Factory Reset**

Reset the projector and restore all default settings by selecting OK or Close. OK will return the projector to factory default settings.

4. **Software Update service only**

For service center use only.

5. **Auto Sleep**

Select the Auto Sleep Timer. Using the Arrow buttons on the remote, to select Off, 60m, 120m, or 180m.

6. **OSD Timer**

Select the length of time the OSD will appear on the screen. Using the Arrow buttons

on the remote, select Off, 5s (seconds), 10s, 15s, 20s, 25s, or 30s.

 
7. Windows Zoom

Use the Arrow buttons on the remote to select 4:3 (aspect ratio), 16:9 (aspect ratio), Zoom -, Zoom +, or Reset.

8. Version Info

Displays the current version of the projector.

Bluetooth Device Menu

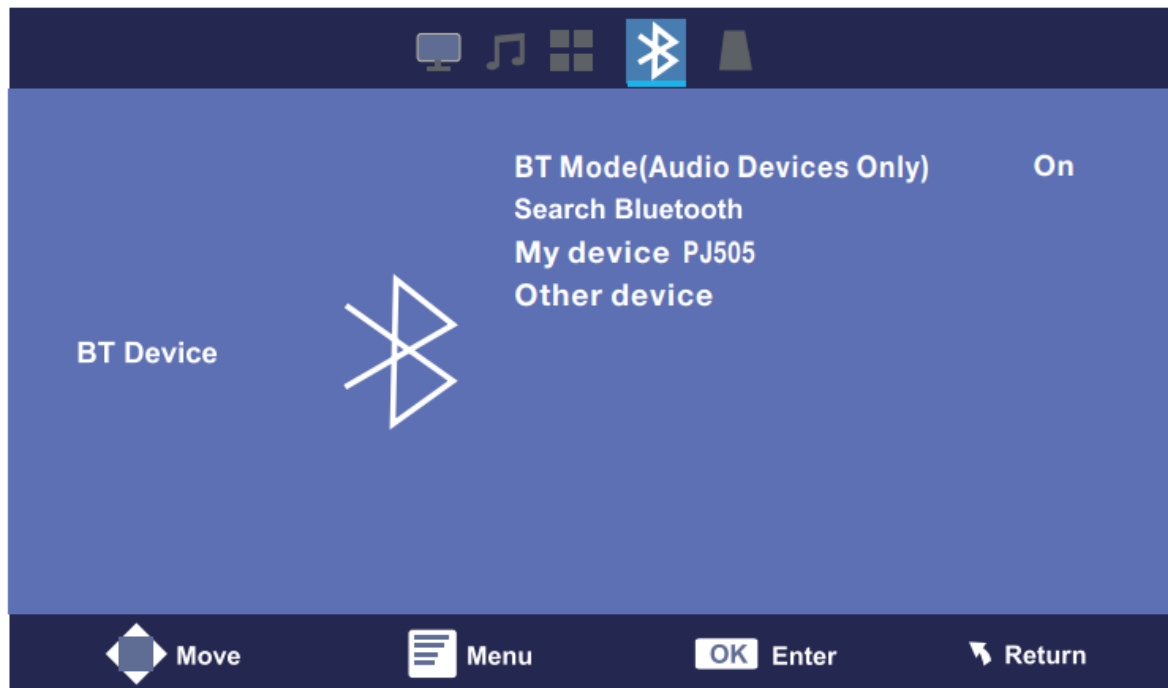

1. BT Mode

Turn the projector Bluetooth On or Off. Note: Bluetooth is off by default. Turning Bluetooth on allows you to search for Bluetooth devices.

2. Search Bluetooth

After turning Bluetooth on, press the OK button on the remote to search for nearby Bluetooth receiving devices (speakers, soundbars, etc.) Found devices will appear under either My Device or Other Device.

3. My Device

 
Bluetooth receiving devices that the projector has connected to before will appear under this heading after searching for Bluetooth devices.

4. Other Device

Bluetooth receiving devices that the projector has not connected to before will appear under this heading after searching for Bluetooth devices. When searching for

Bluetooth devices for the first time, all devices will appear under this heading.

Keystone Menu

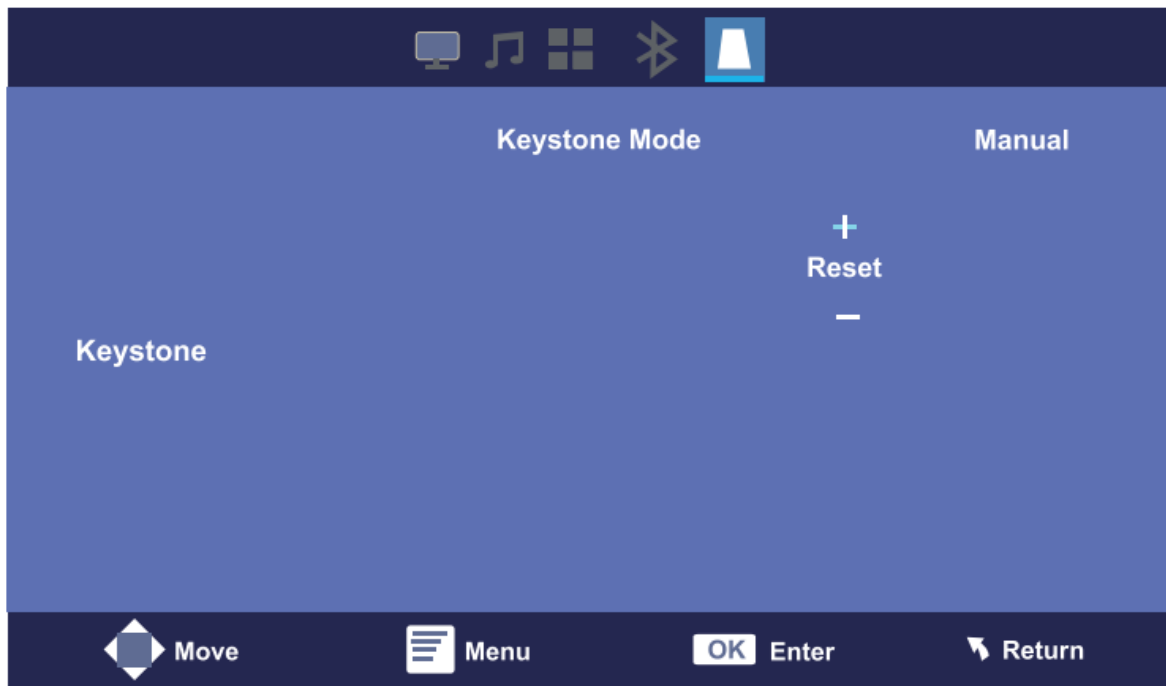


1. Keystone


Using the Arrow and OK buttons on the remote, select Manual or Auto.

- **In Manual mode:** Using the Arrow and OK buttons on the remote select the + or – settings to adjust the keystone angle. Select Reset to return to the default keystone angle.

 Keystone Adjust +

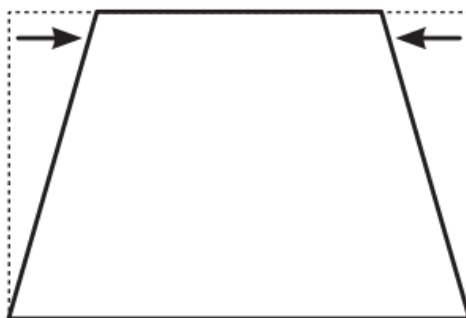

Keystone Adjust -

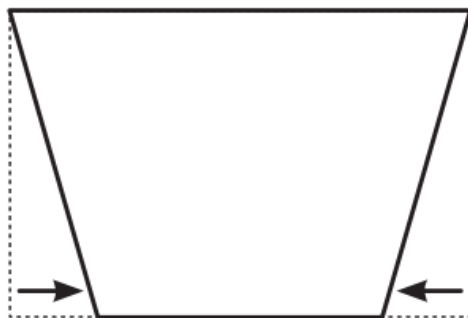 

- **In Auto mode:** Adjust the projector then let the projector calibrate and adjust the keystone angle.

Connecting to Other Devices

Pairing to Bluetooth Wireless Speakers or Sound Bar

NOTE: Bluetooth is OFF by default when the projector first powers ON. Bluetooth can be turned ON or OFF from the BT Device Menu.

1. Enable Bluetooth on the receiver (external speakers, sound bar, etc.) to which you wish to connect. Devices such as smartphones, tablets, or computers are not Bluetooth receivers and will not connect to the projector. To eliminate confusion, you should disable Bluetooth on all receivers to which you do not wish to connect.
2. Power on the projector. Press the Menu button on the remote. Use the Arrows and OK buttons on the remote to highlight and select the BT Device menu.
3. In the BT Device menu, use the Arrows and OK buttons on the remote to change the Bluetooth setting to ON.
4. Use the Arrow buttons to select Search Bluetooth and press OK to start searching for available devices.
5. Use the Arrow buttons to highlight your desired Bluetooth speaker or soundbar and press OK to select.
6. When successfully paired, the Bluetooth receiver should indicate it is connected, usually with a chime or other audible noise. Check the user manual on your Bluetooth receiver for more information.
7. When successfully connected, the projector will display the Bluetooth receiver's name on the BT Settings menu screen, and sound played from the projector will be heard through the Bluetooth receiver.

After initial pairing, the projector and the Bluetooth speakers will stay paired unless unpaired manually by the user or erased due to a reset of either device. If this occurs or you find either unit is unable to connect, repeat the above steps. To disconnect Bluetooth, enter the BT Device menu and change the Bluetooth setting to OFF.

HDMI

 
HDMI offers superior sound and picture quality and is the easiest way to play media from a computer, Blu-Ray player, or other device with an HDMI output.

Requires an HDMI cable (not included) and a device with an HDMI output.

1. Power on the projector.
2. Using an HDMI cable, connect the HDMI input on the projector to the HDMI output on

your media player or computer.

3. Use the Arrows and OK buttons on the remote to highlight and select the HDMI icon.
Use the controls on the connected device to select and play media.

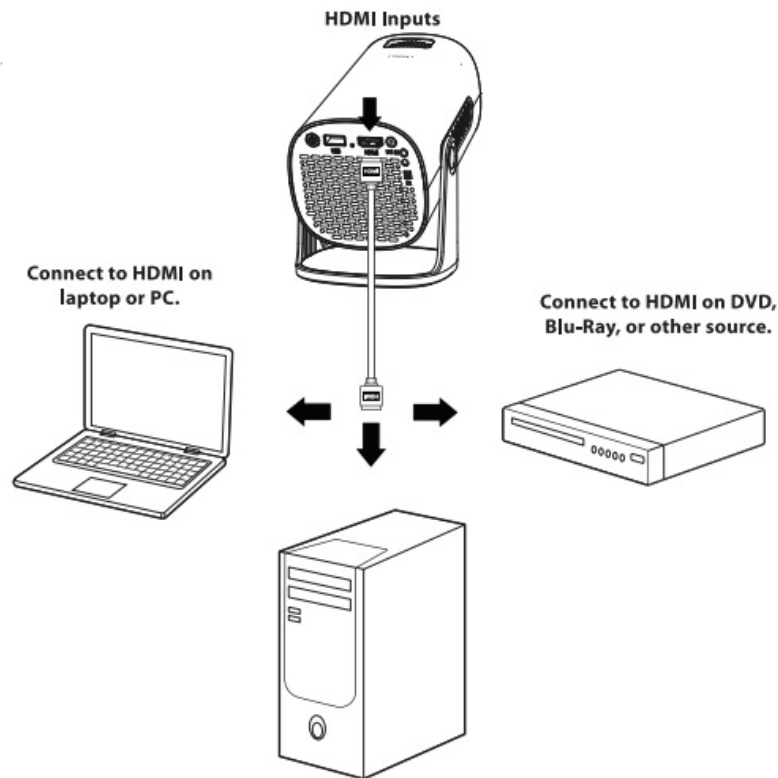

Note: Due to copyright issues, this projector does not support direct playback of Netflix, Amazon, or Disney streaming properties through a TV or laptop HDMI connection. However, you can stream these services using a streaming stick inserted into the HDMI port of the projector. When using a streaming stick, follow the user instructions included with the device.

Note: If no sound plays from the internal speaker on the projector while playing from an HDMI input source, please check the external player's digital audio settings and make sure the setting is on "PCM Stereo" mode.

External Audio

 
Requires a 3.5mm to RCA audio/video cable (not included).

Note: Speakers must have their own power supply.

1. Power on the projector.
2. Using a 3.5mm to RCA stereo cable, connect the external powered speakers to the

Headphone Jack on the projector. Note: The yellow video plug will not be needed in this setup and will not need to be connected.


3. The projector will automatically detect the connection and send audio signal to the speakers.

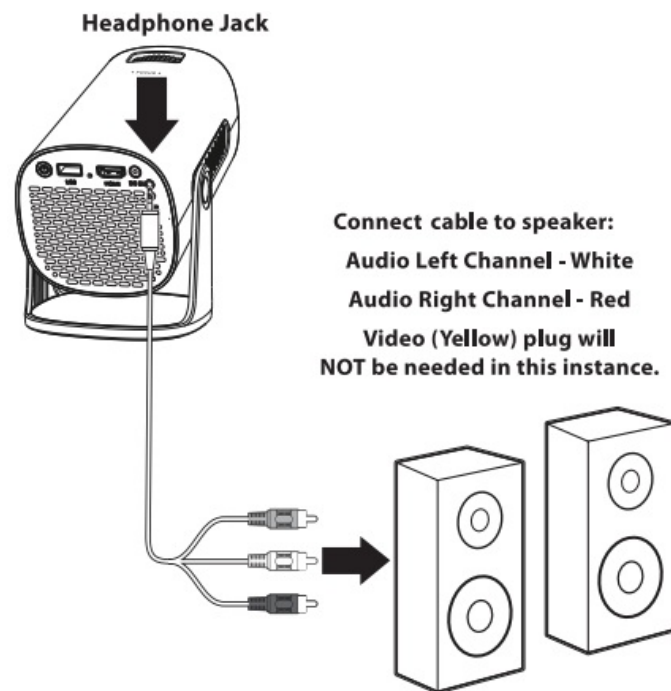

USB Storage Devices

Supports USB drives up to 512GB NTFS format. Supports mpeg1, mpeg2, mpeg4, mp3, m4a, bmp, png, and jpeg.

 
1. Power on the projector. Then, insert into the USB port and turn the unit on.
2. On the home screen, use the Arrow buttons to select Movie/Photo/Music/Text, then press the OK button to enter the menu.

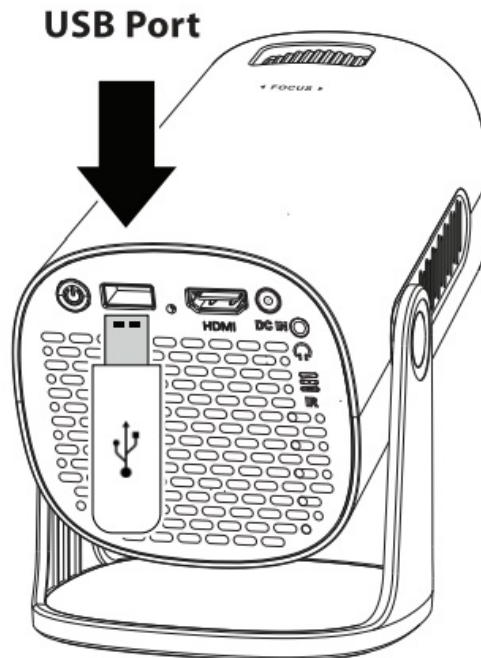

Smartphone

Supports smartphone playback with a USB charging cable connection.

 1. Power on the projector. Then, using a standard USB charging cable, plug the USB into the USB port and the other end into your phone.
2. On the home screen, use the Arrow buttons to select Wired, then press the OK button to select.

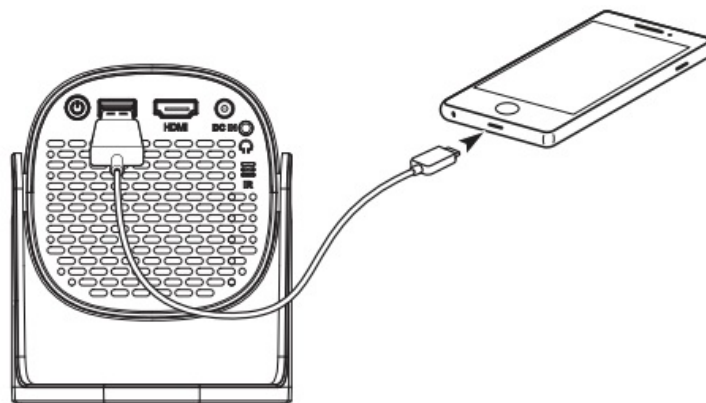

Note: Due to copyright issues, this projector does not support direct playback of Netflix, Amazon, or Disney streaming properties through a smartphone connection. However, you can play stored videos on your phone and publicly hosted online videos.

Customer Support

Contact Information

- Website: www.gpx.com
- Email Support: prodinfo@dpiinc.com
- Email Parts: partsinfo@dpiinc.com
- Phone Support: 1-[888-999-4215](tel:888-999-4215)

Warranty

For Warranty Information and the most up-to-date version of this User's Guide, go to:
www.gpx.com



International Support

To download this User's Guide in English, Spanish, and French, or to get answers to frequently asked questions, visit the support section at: www.gpx.com

Copyright © 2025 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.

Manual del Usuario en español

guide de l'utilisateur en français




FAQ

Q: How do I adjust the focus of the projector?

A: To adjust the focus, use the Focus Adjust Knob on the projector. Turn the knob to change the image size and achieve a clear focus.

Documents / Resources

	GPX PJ505 v3411-01 Beam Plus Projector With Bluetooth [pdf] User Guide 696PJ505HC, 2BABY696PJ505HC, PJ505 v3411-01 Beam Plus Projector With Bluetooth, PJ505 v3411-01, Beam Plus Projector With Bluetooth, Projector With Bluetooth, With Bluetooth, Bluetooth
---	---

References

- [User Manual](#)

GPX
2BABY696PJ505HC, 696PJ505HC, Beam Plus Projector With Bluetooth, bluetooth, GPX, PJ505 v3411-01, PJ505 v3411-01 Beam Plus Projector With Bluetooth, Projector with Bluetooth, With Bluetooth

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.