



## gracedigital GDI-EXYMHBT01 Bluetooth Remote Control User Guide

[Home](#) » [gracedigital](#) » gracedigital GDI-EXYMHBT01 Bluetooth Remote Control User Guide 

gracedigital GDI-EXYMHBT01 Bluetooth Remote Control



## Contents

 
- [1 Quick Start Instructions](#)
- [2 Mounting Instructions](#)
- [3 Control Buttons & Operations](#)
- [4 Specifications](#)
- [5 What's in the Box](#)
- [6 FCC STATEMENT](#)
- [7 RF WARNING STATEMENT](#)
- [8 PRODUCT USE AND PROTECTION](#)
- [9 SAFETY ADVISORY & WARNING](#)
- [10 CARE, MAINTENANCE & PRECAUTIONS](#)
- [11 LIMITED MANUFACTURER'S WARRANTY:](#)
- [12 Documents / Resources](#)
  - [12.1 References](#)
- [13 Related Posts](#)

## Quick Start Instructions

1. Lightly squeeze locking arms on the remote and slide to remove the remote from the mount.
2. Install CR2032 battery. Fully close battery door after installation to ensure unit is waterproof.


3. **PRESS AND HOLD** ►|| on remote to put it into Bluetooth Pairing Mode, (LED on the front of the remote will flash BLUE).
4. Go to Bluetooth Settings on your smartphone and find, ECOXGEAR-RC. Select to connect.

## Status Indicator LED

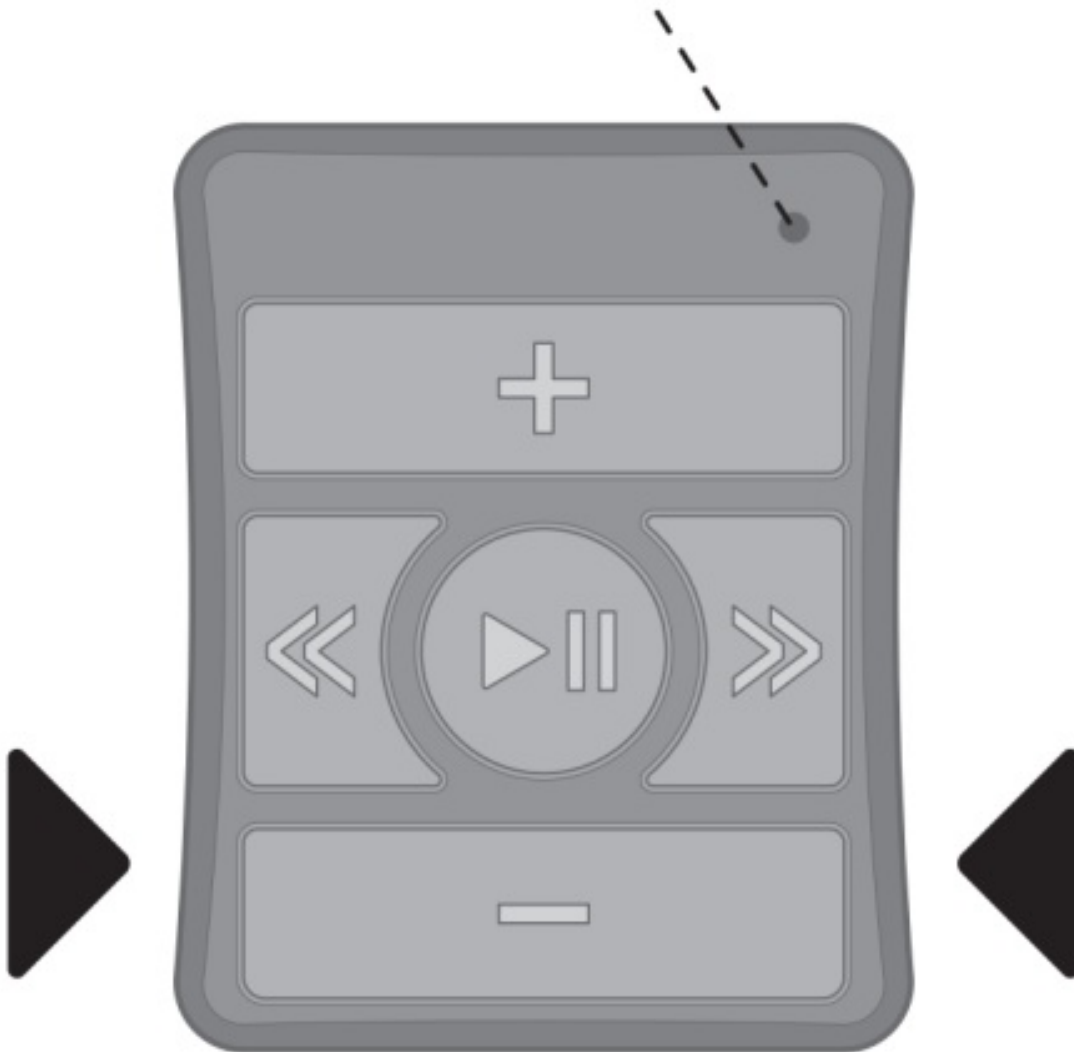

## Squeeze to Remove Remote from Mount

 5. The remote is paired. The LED will turn off.  
Now you can use the buttons on the remote to control audio functions.
6. When pressing buttons on the remote the LED will flash **GREEN**, indicating the remote is paired to your smartphone and that the button presses on the remote are communicating with the smartphone.

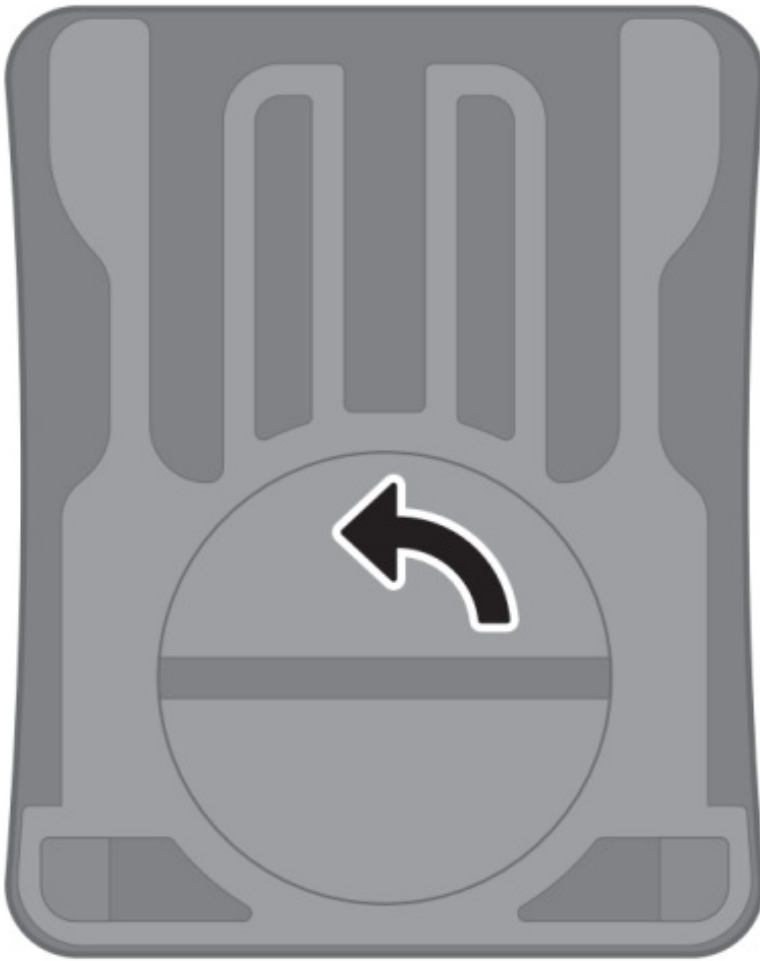

## Open Battery Door

7. Pair your smartphone to your ECOXGEAR speakers (see Bluetooth Pairing instructions in speaker user guide).

### **IMPORTANT: Maintaining Waterproofness**

Your Bluetooth Remote is only waterproof when the Battery Door is properly closed. In order to properly close the cap, turn it clockwise, making sure that the cap fits flat and flush along the edges with the back panel. If not properly closed the unit is **NOT** watertight.

**WARNING: Keep Battery Out of Reach of Children**

 
 


## Mounting Instructions

The Bluetooth Remote comes with a low-profile, quick-release mount. The provided mount can be installed in two ways:

### 1. **Provided 3M VHB adhesive tape**

Remove protective sheets on 3M tape and install tape onto the back of the mount. Then install onto desired mount location. Ensure surfaces are smooth and clean for good adhesion.

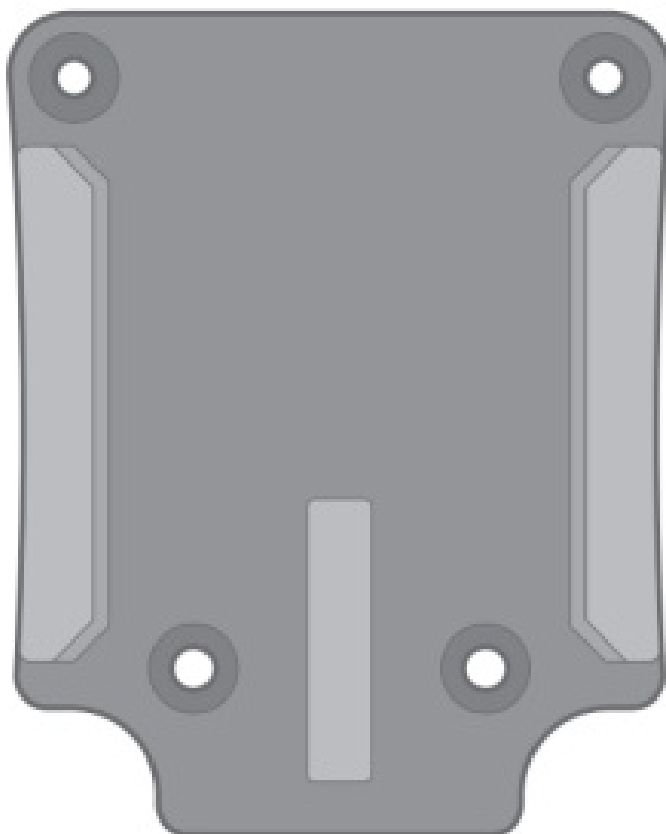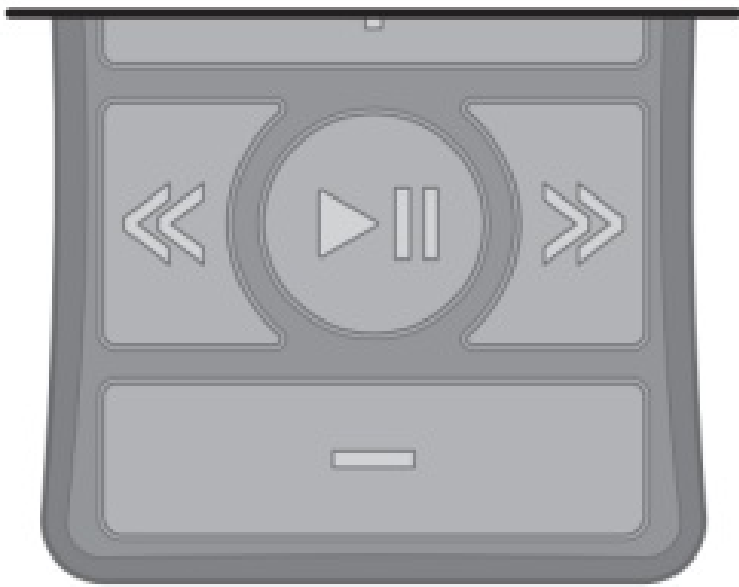

## 2. Provided self-taping screws

Use the 4pcs of the self tapping screws to install the mount onto any surface.

Once installed, slide the remote into place on the mount.

Lightly squeeze locking arms on the remote and slide to remove the remote from the mount.

## Control Buttons & Operations



### Power On

Press any button to “wake up” the remote. The LED on the front of the remote will flash **BLUE**. Once connected to your smartphone, the LED will flash GREEN with each subsequent button press.

### Play / Pause

Press ►|| once to pause and play song tracks.

### Track Selection

Press << once for previous track selection.

Press >> once to advance the track selection.

### Volume

Press + once to decrease the volume.

Press — once to increase the volume.

<<>>+—►||

### NOTES:

- After approximately 20 minutes of inactivity (no audio playing and no buttons being pressed), the remote will go into Sleep Mode to conserve battery life. Wake up the remote by pressing any button, then the remote will automatically re-pair with your phone (after approximately 1-3 seconds). Once re-paired, you can use the

buttons on the remote to control audio functions on your smartphone.

- The battery is **NOT** rechargeable. The battery should last about 9-12 months. Replace battery with CR2032 size only (available at most retail and grocery stores).
- If the battery is low, the LED will flash **RED** whenever a button is pressed.
- If the battery is very low, the LED will flash **RED** every 4 minutes.
- The Universal Bluetooth Remote and ECOXGEAR speakers can both be connected to your smartphone at the same time.

**WARNING: KEEP BATTERY OUT OF REACH OF CHILDREN**

 
## **Specifications**



2.30"



1.81"

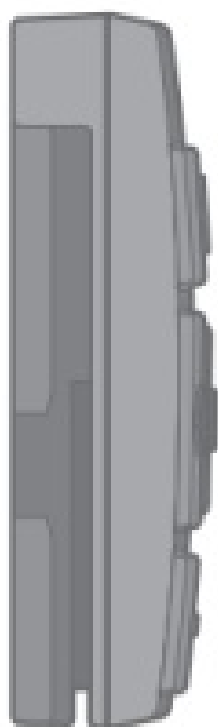

0.75"



**Unit Weight**

2 ounces

**Battery**

CR2032

**Battery Life**

Approximately 6-9 months in sleep mode; approximately 5000 button presses

**Bluetooth**

Bluetooth® Low Energy (BLE) 5.0

**BLE Range**

Up to 100 ft / 30 m

**Warranty**

1 Year

**Recommended Storage (Battery) Temperature**


59°F / 15°C

**Waterproof / Dust Rating**


IP67

**What's in the Box**

 Universal Bluetooth  
Remote

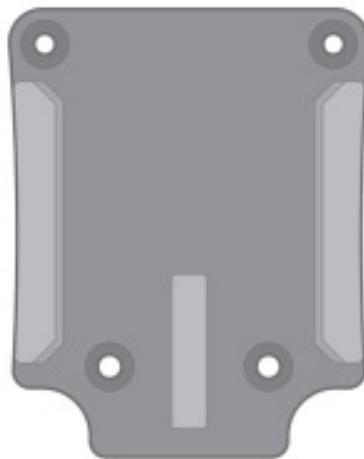

Mount

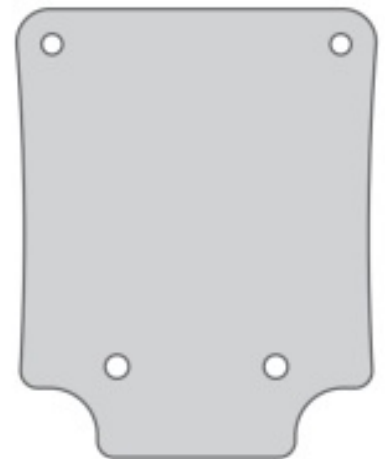 

3M VHB  
Adhesive Tape



Self-Tapping Screws (x4)



User Guide



CR2032 Battery

**FCC STATEMENT**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

**WARNING:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: reorient or relocate the receiving antenna, increase the separation between the equipment and receiver, connect the equipment into an outlet on a circuit different from that to which the receiver is connected, consult the dealer or an experienced radio/ TV technician for help.

## RF WARNING STATEMENT

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

### IC STATEMENT:

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- 1) This device may not cause interference, and
- 2) This device must accept any interference, including interference that may cause undesired operation of the device.

## PRODUCT USE AND PROTECTION

### Read and follow all instructions. Use only as intended.

The ECOXGEAR Universal Bluetooth Remote is intended to be used indoors or outdoors and in land or water environments. The remote has been tested to IP67 waterproofing standards, which means the remote can be submerged in up to 3 feet of water for 30 minutes without any damage. However, the remote is not intended for constant underwater use.

Always make sure the cap(s) / cover(s) are clean, free from sand or debris, and correctly fitted. The remote will only meet IP67 ratings if all rubber seals, gasket(s) and cover(s) / cap(s) are in place. If you notice a muffling of audio after submersion, gently shake the unit to clear excess water. If your remote is exposed to salt water, clean it thoroughly after use with fresh water.

The unit with an improperly fitted cap is **NOT** waterproof.

To prevent fire or shock, do **NOT** attempt to replace the battery if this unit is wet or you suspect water has entered the unit. In this situation, please return the unit to Grace Digital for a free assessment. If we have found that the unit has carried water, we will repair or replace the unit free of charge.

## SAFETY ADVISORY & WARNING

Read and follow all instructions. Use only as intended.

**CAUTION:** Do **NOT** open to repair. A qualified technician must carry out repair work.

**ATTENTION:** Do **NOT** replace the battery while the unit is wet. Towel dry the unit **AND** make sure all surfaces are dry **BEFORE** replacing the battery. Failure to do so may result in electrical damage to the unit and may void the warranty.

### PROPOSITION 65



**WARNING:** Cancer and Reproductive Harm – [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

**WARNING:** The battery must **NOT** be used in or near an open heat source or excessive heat.

**ATTENTION:** Do NOT dispose of in a landfill. Contact Grace Digital at [www.gracesupport.com](http://www.gracesupport.com) or a certified recycling agent to dispose of the unit.

**SAFETY:**

This product has a limited life span of use and should be replaced when it shows obvious signs of wear.

Do not modify or remove any original component parts of the remote. Doing so could cause damage to the unit allowing water to ingress. A unit with water ingress should not be charged due to potential risk of fire or shock.

Do not attempt to mount the unit except with the approved ECOXGEAR mounts. Doing so could cause damage to the unit allowing water to ingress. A unit with water ingress should not be charged due to potential risk of fire or shock.

Please exercise care and good judgment when using your ECOXGEAR remote.

**You should always**

1. Use the proper ECOXGEAR mounts if you intend to mount the unit.
2. Properly seal the ECOXGEAR prior and after each use when in humid or water environments to avoid water damage to the internal components. Salt water / air is particularly corrosive. Always make sure that the gaskets are sealed when in salt water environment and the unit properly rinsed off after use.
3. Properly clean the ECOXGEAR remote and ensure the gaskets have no sand, dirt or water on them prior to storage or removing the back cover.
4. Store your unit with all caps properly sealed to avoid long term internal moisture damage inside your unit.
5. Completely dry and clean your ECOXGEAR remote prior to attempting to replace the battery
6. Return the ECOXGEAR remote to Grace Digital if you suspect water ingress into the unit or if the unit has experienced a severe impact that may have affected the integrity of the unit to take on water.

**You should never**

1. Never use your ECOXGEAR if you have dropped it or thrown it against a hard surface which may have destroyed the integrity of the remote, housing, or gaskets. In the event of a severe impact to your unit please return the unit to Grace Digital to review for potential damage.
2. Never open the Battery Door in a water environment. This could cause water to ingress into the unit which could potentially be hazardous and cause a fire or a spark.
3. Never attempt to fix, repair your ECOXGEAR unit. Please send it back to Grace Digital for any assessments and repairs.

**CARE, MAINTENANCE & PRECAUTIONS**

1. The unit is waterproof only when the cap is properly closed.
2. Close the cap properly before use. If the unit is placed in a wet environment without the cap properly closed, water may enter into the unit and void your warranty.
3. Dry unit completely before opening the cap. Do **NOT** open the cap if wet or in a wet environment.

4. Do **NOT** apply excessive force to any surfaces of the unit when wet or in a wet environment.
5. Do **NOT** use or store the unit in places with high temperature.
6. **AVOID** prolonged exposure to ultraviolet radiation (UV sunlight) and strong magnetic fields.
7. Periodically check the rubber seal for premature wear.
8. Periodically clean the rubber with a soft moist cloth and ensure no objects such as dirt, hair, sand are on the rubber seal ring. Do NOT use any oily solvent or chemicals for cleaning.
9. Rinse off the unit with tap water after use in salt water or swimming pool.


### LIMITED MANUFACTURER'S WARRANTY:

The Universal Bluetooth Remote is covered by a 1-year limited warranty that covers defects in workmanship and / or materials for a period of 1 year from original purchase date. This warranty does not apply to any products which have been abused, neglected, modified or used for a purpose other than the one for which they were manufactured. Please refer to the above care and maintenance instructions for suggested care details. The warranty is valid only for the original owner who purchases the unit from an authorized dealer. Transfers do not qualify for warranty protection. Grace Digital reserves the right to replace any out-of-stock or discontinued product with a comparable product. Discontinued products may not be available for warranty replacement. Any contents are **NOT** covered by the limited manufacturer's warranty. Warranty terms may be revised without notification at the discretion of the manufacturer. Please visit [www.ecoxgear.com](http://www.ecoxgear.com) for additional product & warranty information.



Universal Bluetooth Remote by ECOXGEAR, a division of Grace Digital Inc., San Diego, California.  
 Designed and Engineered in the USA. Made in China.  
 Patent Pending

### Documents / Resources

	<a href="#">gracedigital GDI-EXYMHBTMT01 Bluetooth Remote Control</a> [pdf] User Guide GDIEXYMHBTMT, 2AAUI-GDIEXYMHBTMT, 2AAUIGDIEXYMHBTMT, GDI-EXYMHBTMT01 Bluetooth Remote Control, GDI-EXYMHBTMT01, Bluetooth Remote Control
---	--

### References

- [P65Warnings.ca.gov](https://www.p65warnings.ca.gov)