



Home » GRANDSTREAM » GRANDSTREAM GWN7670WM In Wall Wi-Fi 7 Access Point Installation Guide 📆

Contents [hide]

- 1 GRANDSTREAM GWN7670WM In-Wall Wi-Fi 7 Access Point
- 2 Specifications
- 3 Product Usage Instructions
- **4 PACKAGE CONTENTS**
- **5 HARDWARE INSTALLATION**
- 6 Frequently Asked Questions
- 7 Documents / Resources
 - 7.1 References



GRANDSTREAM GWN7670WM In-Wall Wi-Fi 7 Access Point



Specifications

• Manufacturer: Grandstream Networks, Inc.

• Model: GWN7670WM

• Type: In-wall Wi-Fi 7 Access Point

• Ethernet Port: NET/2.5G Ethernet RJ45 port (2.5 Gbps) supporting PoE/PoE+

Product Usage Instructions

OVERVIEW

- The GWN7670WM is a new generation enterprise-grade in-wall Wi-Fi 7 access point, ideal for small-to-medium-sized businesses to build next-generation Wi-Fi networks.
- It has a stylish appearance and a sprayable shell, which easily matches various decoration styles and perfectly integrates into the space. It offers dual-band 2×2:2 MU-MIMO with DL/UL OFDMA technology and a sophisticated antenna design for maximum network throughput and expanded Wi-Fi coverage range.
- With 4096 QAM modulation, Wi-Fi 7 achieves a significant increase in data transfer rates.
- MLO technology optimises spectrum resource utilisation to ensure a smooth experience for every user. To ensure easy installation and management, the GWN7670WM uses a controller-less distributed network management design in which


the controller is embedded within the product's Web user interface.

- The GWN7670WM is also supported by GDMS Networking and GWN Manager,
 Grandstream's cloud and on-premise Wi-Fi management platform.
- It is the ideal Wi-Fi AP for voice-over-Wi-Fi deployments and offers a seamless connection with Grandstream's Wi-Fi-capable IP phones.
- With support for advanced QoS, low-latency real- time applications, mesh networks, captive portals, BT location with BLE 5.3, 256 concurrent clients per AP and 1 x 2.5 Gigabit network ports with PoE+, GWN7670WM is an ideal Wi-Fi access point for medium wireless network deployments with medium-to-high user density.


PRECAUTIONS

- Do not attempt to open, disassemble, or modify the device.
- Do not expose this device to temperatures outside the range of 0 °C to 45 °C for operating and -30 °C to 60 °C for storage.
- Do not expose the GWN7670WM to environments outside of the following humidity range: 10-90% RH (non-condensing).
- Do not power cycle your GWN7670WM during system boot up or firmware upgrade.
 You may corrupt firmware images and cause the unit to malfunction.

PACKAGE CONTENTS

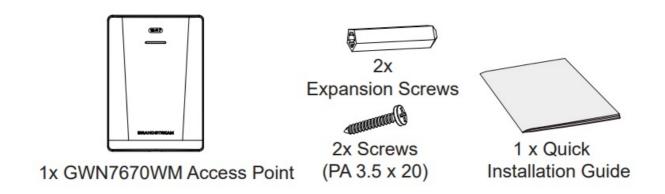

GWN7670WM PORTS

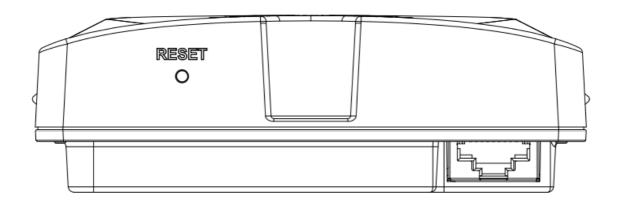


Port	Description
NET/2.5G (PoE+)	Ethernet RJ45 port (2.5 Gbps) supporting PoE/PoE+.
RESET	Factory reset the pinhole. Press for 7 seconds to reset factory default settings.

POWERING AND CONNECTING THE GWN7670WM


GWN7670WM can only be powered on using a PoE/PoE+ switch using the fol-lowing steps:

- Step 1: Plug a RJ45 Ethernet cable into the NET/2.5G (2.5G) network port of GWN7670WM.
- Step 2: Plug the other end into the uplink port of the power over Ethernet (PoE/PoE+) switch.

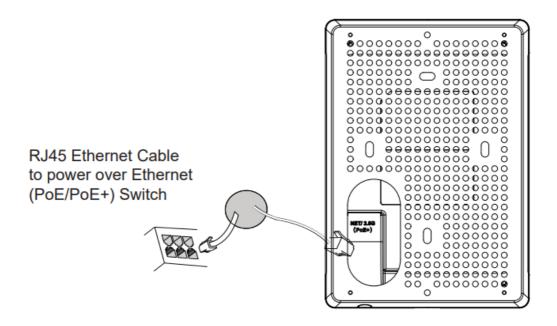

HARDWARE INSTALLATION

The GWN7670WM can be installed on the wall using one of two methods: Embedded Wall Installation (Rear Shell Not Required)

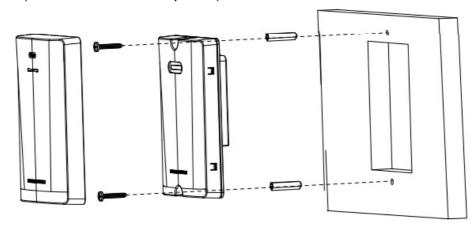


- Use a measuring tape to measure the distance between the two wall mount slots on the back of the GWN7670WM access point. Mark the screw hole positions on the wall with a pencil.
- 2. Drill the holes in the marked spots and secure the GWN7670WM to the wall using expansion screws.
- 3. Attach the front cover to complete the installation.

Wall or Electrical Box Installation (Rear Shell Required)

 Use a measuring tape to measure the distance between the two wall mount slots on the back of the GWN7670WM rear shell, and mark the mounting screw holes on the wall with a pencil.


- 2. Drill holes at the marked positions, then secure the GWN7670WM rear shell to the wall or electrical box using expansion screws.
- 3. Use screws to mount the GWN7670WM main body onto the rear shell.
- 4. Attach the front cover to the GWN7670WM body to complete the installation.

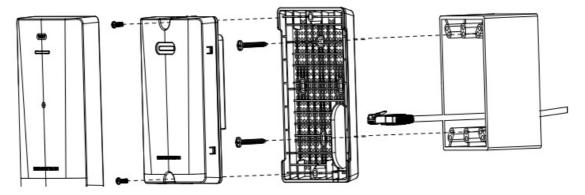

CONNECT TO GWN7670WM DEFAULT Wi-Fi NETWORK

GWN7670WM can be used as standalone access point out of box, or after factory reset with Wi-Fi enabled by default. After powering the GWN7670WM and connecting it to the network, GWN7670WM will broadcast a default SSID based on its MAC address GWN[MAC's last 6 digits] and a random password.

 Note: GWN7670WM's default SSID and password information are printed on the MAC tag of the unit.

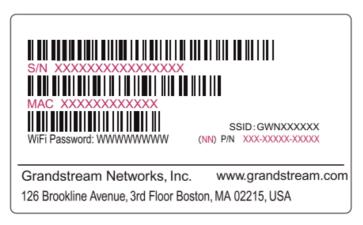

ACCESSING THE CONFIGURATION INTERFACE

A computer connected to the GWN7670WM's SSID, or the same network as the GWN7670WM, can discover and access its configuration interface using one of the following methods:

- Method 1: Discover GWN7670WM using its MAC Address
 - 1. Locate the MAC address on the MAC tag of the unit, which is on the underside of the device or the package.

- From a computer connected to the same network as the GWN7670WM, type in the following address using the GWN7670WM's MAC address in your browser: https://gwn_<mac>.local
 - Example: If a GWN7670WM has the MAC address EC:74:D7:8C:4D: F8, this
 unit can be accessed by typing https://gwn_ec74d78c4df8.local on the
 browser.
- Method 2: Discover GWN7670WM using the GWN Discovery Tool
 - 1. Download and install the GWN Discovery Tool from the following link: https://www.grandstream.com/tools/GWNDiscoveryTool.zip.
 - 2. Open the GWNDiscovery Tool, and click on Scan.
 - 3. The tool will discover all GWN76XX Access Points connected to the network, showing their MAC and IP addresses.
 - Click on Manage Device to be redirected directly to the GWN7670WM's configuration interface, or type in manually the displayed IP address on your browser.
 - 5. Entyour er username and password to log in. (The default administrator username is "admin" and the default random password can be found on the sticker on the GWN7670WM).



Notes:

- Make sure that the GWN7670WM is not already paired with another GWN76xx Access Point as a slave, GWN70xx Router Series or GWN. Cloud, otherwise, the configuration interface cannot be accessed
- If the GWN7670WM is already paired, make sure to unpair it first, or do a factory reset.

- It is the customer's responsibility to ensure compliance with local regulations for frequency bands, transmit power and others.
- To manage GWN7670WM over the cloud, please refer to https://www.gdms.cloud.
- For certification information, please refer to User Manuals:
 http://www.grandstream.com

Common part

- This equipment complies with radiation exposure limits set forth for an uncontrolled environment.
- This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.

U.S. FCC Part 15 Regulatory Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, under part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used according to the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems

Canada Regulatory Information

- Radio equipment
- Operation of 5150-5250 MHz is restricted to indoor use only.
- This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).
 Operation is subject to the following two conditions:
 - 1. This device may not cause interference.
 - 2. This device must accept any interference, including interference that may cause undesired operation of the device.

EU Regulatory Information

Operation of 5150-5350 MHz is restricted to indoor use only. Support Frequency Bands and Power:

- BIE 2402-2480 MHz < 20 dBm;
- WLAN 2412-2472 MHz < 20 dBm;
- RLAN 5150-5250 MHz < 23 dBm;
- RLAN 5250-5350 MHz < 23 dBm; RLAN 5470-5725 MHz < 30 dBm. RLAN 5725-5850
 MHz < 14 dBm.

The simplified EU declaration of conformity referred to in Article 10(9) shall be provided as follows: Hereby, [Grandstream Networks, Inc.] declares that the radio equipment type [GWN7670WM] complies with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.grandstream.com

Refer to online documents and the FAQS for more detailed information:

https://www.grandstream.com/our-products

Frequently Asked Questions

Q: Can I power on the GWN7670WM without using a PoE/PoE+ switch?

A: No, the GWN7670WM can only be powered on using a PoE/PoE+ switch.

Q: How can I reset the GWN7670WM to factory default settings?

A: Press and hold the reset pinhole for 7 seconds to reset to factory default settings.

Documents / Resources



GRANDSTREAM GWN7670WM In Wall Wi-Fi 7 Access Point [pdf] Install ation Guide

YZZGWN7670WM, GWN7670WM In Wall Wi-Fi 7 Access Point, GWN767 0WM, In Wall Wi-Fi 7 Access Point, Wi-Fi 7 Access Point, Access Point, P oint



GRANDSTREAM GWN7670WM In Wall Wi-Fi 7 Access Point [pdf] Instruction Manual

GWN7670WM, GWN7670WM In Wall Wi-Fi 7 Access Point, GWN7670W M, In Wall Wi-Fi 7 Access Point, Wi-Fi 7 Access Point, Access Point

References

- User Manual
- GRANDSTREAM
- Access Point, GRANDSTREAM, GWN7670WM, GWN7670WM In Wall Wi-Fi 7 Access Point, In Wall Wi-Fi 7 Access Point, Point, Wi-Fi 7 Access Point, YZZGWN7670WM

Leave a comment

Your email address will not be published. Required fields are marked*

Comment *		
Name		
Email		
Website		
Save my name, email, and website in this browser for the next time I com	nment.	
Post Comment		
Search:		
e.g. whirlpool wrf535swhz	Search	

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.