

  
GRECI  
G412-1  
AUTOMATIC  
BUBBLE  
MACHINE



## Grechi G412-1 Automatic Bubble Machine User Manual

[Home](#) » [Grechi](#) » Grechi G412-1 Automatic Bubble Machine User Manual 

### Contents

- [1 Grechi G412-1 Automatic Bubble Machine](#)
- [2 INTRODUCTION](#)
- [3 SPECIFICATIONS](#)
- [4 WHAT'S IN THE BOX](#)
- [5 FEATURES](#)
- [6 SETUP GUIDE](#)
- [7 CARE & MAINTENANCE](#)
- [8 TROUBLESHOOTING](#)
- [9 PROS & CONS](#)
- [10 Pros:](#)
- [11 Cons:](#)
- [12 WARRANTY](#)
- [13 FREQUENTLY ASKED QUESTIONS](#)
- [14 VIDEO – PRODUCT OVERVIEW](#)
- [15 References](#)
- [16 Related Posts](#)



**Grechi G412-1 Automatic Bubble Machine**



## INTRODUCTION

The Grechi G412-1 Automatic Bubble Machine is a fun toy that is made to make both kids and adults happy. This bubble machine makes blowing bubbles easy and fun. It's great for birthday parties, parties outside, or just plain fun. The price of only \$15.99 makes it a cheap way to make any event more fun. The bubble machine needs two AA batteries to work, and kids over 18 months old should not use it. The G412-1 from Shangte is a popular choice for both indoor and outdoor use because it is built to last and is easy to use. This bubble machine will keep everyone happy with its never-ending stream of bubbles, whether you are having a party, playing in the backyard, or just enjoying a sunny day.

## SPECIFICATIONS

<b>Brand</b>	Grechi
<b>Model Number</b>	G412-1
<b>Product Name</b>	Automatic Bubble Machine
<b>Price</b>	\$15.99
<b>Product Dimensions</b>	8.66 x 3.14 x 6.1 inches
<b>Item Weight</b>	15.2 ounces
<b>Country of Origin</b>	China
<b>Manufacturer Recommended Age</b>	18 months and up
<b>Batteries</b>	2 AA batteries required
<b>Manufacturer</b>	Shangte

## WHAT'S IN THE BOX

- Automatic Bubble Machine
- User Manual

## FEATURES

- **Fun Dinosaur Shape:** It has a cute dinosaur shape that kids will love, which will make bath time more fun and interesting.
- **Automatic Bubble Making:** The machine makes more than 1,000 bubbles per minute, giving your child a fun bubbly time.
- **Twelve Classic Children's Songs:** This feature plays twelve happy, classic children's songs that you can turn on or off whenever you want to keep your child happy and calm.
- **Easy to Use:** To start the bubbles and music, just mix the shower gel with water, flip the lid, and press a button. This makes it easy for parents.
- **Strong Suction Cups:** The bubble machine has 3 strong suction cups that hold it firmly to bathtubs, glass, or any other smooth surface while it's being used.
- **Safe for Babies:** The bath toy is made of high-quality ABS plastic that is safe for babies. It is durable and gentle on sensitive skin, which makes it great for kids.



- **Battery Operated:** Two AA batteries (not included) are needed for the toy to work, which makes it easy to take it with you and use it in different places.



- **Splash-Resistant:** The toy is made to handle splashes of water and makes sure that it holds up. It works and is safe even when it's wet, so it's great for the bath or pool.
- **Very useful for many things:** Great for bathtubs, swimming pools, showers, and even bathroom walls that are smooth.
- **Promotes Fun in the Bath:** The bubbles, music, and dinosaur theme make bath time fun and something kids look forward to.
- **Interactive Play:** The machine stimulates your hearing (songs) and sight (bubbles), which is fun and good for your growth.
- **At 15.2 ounces:** It's not too heavy for parents to carry and move around, making it movable and useful.
- **Small Size:** The toy is 8.66 inches long, 3.14 inches wide, and 6.1 inches high, so it doesn't take up too much space.
- **Sealed Battery Compartment:** Silicone is used to seal the battery compartment so that water doesn't get in. This makes sure that the device works safely and for a long time.
- **Great Gift Idea:** The dinosaur bubble bath toy is a popular gift idea, especially for kids 18 months and up. It's also great for Christmas or birthdays.

## SETUP GUIDE

- **Unbox the Toy:** Carefully take the bubble machine out of its box and look inside to see if any parts are broken or missing.
- **Putting Batteries In:** Open the compartment for the batteries and put in two AA batteries (not included), making sure they are inserted correctly by following the polarity markings in the container.

### Way 1:

**Step 1:** Notch to take out the container from the outside to the bottom.



**Step 2:** Add 30% showergel and 70% water



**Step 3:** Attach the dinosaur bubble machine to the wall



**Step 4:** Press the button, Start enjoying bubble bath



### Way 2:

**Step 1:** Pour the bath gel and water into the bottle.



**Step 2:** Direct introduction of liquid into toys



**Step 3:** Attach the dinosaur bubble machine to the wall



**Step 4:** Press the button, Start enjoying bubble bath



- **Mix Solution:** To make the bubble solution, mix two-thirds of the shower gel with one-third of the water. This makes a safe and effective bubble mixture.
- **Flip the Lid:** To add the bubble solution to the bubble blower's tank, open the lid.
- **Protect the Toy:** Put the toy in the water or on a smooth, flat surface like the bathroom wall or glass. Before you use them, make sure the suction cups are dry and clean.
- **Press the Button to Start:** If you press the button once, the bubbles and music will start at the same time. Make sure the machine starts to bubble.
- **Switch Songs:** To change the music, press the button again to pause it and then press it again to play a different song.
- **Change Settings:** Pressing more than one button at a time lets you choose whether the music or bubbles play, or both can be turned off.
- **Make sure it's safe:** Make sure the machine is always tightly attached so it doesn't fall or tip over while it's being used.
- **Check the Battery Life:** Make sure to check the battery life often and change the AA batteries when the music or bubbles stop working.
- **Making sure the suction cups are clean and free of soap scum before each use** is important to make sure

they stick well to the surface.

- **Test the Functions:** Once the solution is in and the toy is in place, press the button to make sure the bubbles and sound are working right.
- **Position for Best Bubble Flow:** Put the toy where it can blow bubbles well, like in the middle of the bathroom or shower.
- **Use in Pool or Shower:** The bubble machine can also be used in the shower or in a diving pool, but it needs to be set up on a smooth, dry surface.
- **To keep the machine safe:** Turn it off after use, take out the batteries, and store it somewhere dry to keep it from getting damaged by water.

## CARE & MAINTENANCE

- **Clean Suction Cups Often:** Use warm water to wash the suction cups and get rid of any dirt or soap residue. This will make sure they stick tightly to smooth surfaces.
- **Dry After Use:** Make sure the toy is completely dry after every bath so that water doesn't build up and cause it to work less well or rust.
- **Change Batteries as Necessary:** If the bubbles or music start to sound weak, you'll need to put in new AA batteries to keep the device working.
- **Avoid Hard Cleaners:** Do not use abrasive or hard chemicals to clean the toy. They could damage the surface or make it less effective.
- **Check for Damage:** Look over the toy often for any damage that you can see, especially in the battery box, suction cups, and bubble mechanism.
- **How to Store It:** Keep the bubble machine in a dry, cool place when not in use to keep it from breaking from too much heat or wetness.
- **Don't Overfill:** Don't put too much solution in the bubble tank; doing so could break the machine or spill the extra solution.
- **Clear Out the Bubble Tank:** The bubble tank should be cleared out every so often to make sure there is no soap scum or bubble residue left over that could get stuck in the machinery.
- **Avoid Submerging:** Do not fully submerge the bubble machine in water; it is made to work in wet situations, but not at full depth.
- **Check the Battery Compartment Seal:** Make sure the battery compartment seal is still in place to keep water out, which can damage the electrical parts.
- **Replace Parts as Necessary:** If a machine part breaks or wears out, you should get new parts from the maker.
- **Follow These Steps to Make Sure the Bubble Solution is Safe for Your Child and the Toy:** Use light, non-toxic soap or baby shower gel.
- **Avoid Rough Handling:** To make the toy last longer, handle it gently, especially the parts that stick to surfaces and make bubbles.
- **Store After Use:** Put the toy away in a dry place after each bath so it doesn't stay wet for too long, which could cause mold or bugs to grow.
- **Regular Function Check:** Make sure the machine is still running well by checking its functions, such as the sound and bubble output, from time to time.

## TROUBLESHOOTING

Problem	Possible Causes	Solution
Bubbles not blowing	No batteries or dead batteries	Replace with fresh AA batteries.
Weak bubble output	Low-quality bubble solution	Use a high-quality bubble solution.
Machine not turning on	Battery compartment issue	Check if batteries are installed correctly.
Bubbles are small	Not enough bubble solution in the tray	Add more bubble solution to the tray.
Bubbles are popping too soon	Windy conditions	Use the machine indoors or in sheltered areas.
Excessive noise during operation	Loose parts or motor malfunction	Check for loose parts and tighten screws.
Machine stops suddenly	Battery drain or overheating	Allow the machine to cool down and replace batteries.
Poor bubble performance	Contaminated bubble solution	Clean the bubble tray and use fresh solution.
Bubble solution spills	Overfilled solution tray	Ensure the tray is filled to the marked line.
Not enough bubbles produced	Clogged nozzle or fan	Clean the nozzle and check for obstructions.
Spitting bubbles	Incorrect bubble solution or low power	Use the correct solution and fresh batteries.
Machine feels hot during use	Overuse or overheating	Let the machine cool down before use.
Battery corrosion	Old batteries or improper storage	Clean the battery compartment and use new batteries.
Machine is leaking bubble solution	Cracked or damaged tray	Replace the bubble tray if damaged.
Unable to turn off	Remote control or switch malfunction	Ensure the switch is fully in the off position.

## PROS & CONS

### Pros:

1. Affordable and budget-friendly option for bubble fun.
2. Easy to use, making it ideal for young children.
3. Lightweight and portable, perfect for travel.
4. Quiet operation, ensuring it won't disturb playtime.
5. Durable construction for long-lasting enjoyment.

### Cons:

1. Limited to use with 2 AA batteries, requiring frequent replacements.
2. Bubbles may not last as long in windy conditions.
3. Smaller bubble output compared to larger machines.

4. Only compatible with standard bubble solution (may need to buy separately).
5. Requires supervision for younger children due to small parts.

## WARRANTY

The Grechi G412-1 Automatic Bubble Machine comes with a **1-year limited warranty**, ensuring peace of mind for your purchase. This warranty covers manufacturing defects under normal use, but does not cover damage caused by misuse or accidents.

## FREQUENTLY ASKED QUESTIONS

What is the price of the Grechi G412-1 Automatic Bubble Machine?

The Grechi G412-1 Automatic Bubble Machine is priced at \$15.99, making it an affordable choice for bubble fun.

What are the product dimensions of the Grechi G412-1 Automatic Bubble Machine?

The Grechi G412-1 Automatic Bubble Machine has dimensions of 8.66 x 3.14 x 6.1 inches, making it compact and easy to use.

What is the item weight of the Grechi G412-1 Automatic Bubble Machine?

The Grechi G412-1 Automatic Bubble Machine weighs 15.2 ounces, ensuring it is light enough for easy handling.

What is the recommended age for the Grechi G412-1 Automatic Bubble Machine?

The Grechi G412-1 Automatic Bubble Machine is recommended for children aged 18 months and up, offering safe and enjoyable bubble fun for young ones.

What type of batteries does the Grechi G412-1 Automatic Bubble Machine require?

The Grechi G412-1 Automatic Bubble Machine requires 2 AA batteries to operate, making it easy to power.

What is the manufacturer of the Grechi G412-1 Automatic Bubble Machine?

The Grechi G412-1 Automatic Bubble Machine is manufactured by Shangte, known for producing fun and innovative products for kids.

How many bubbles does the Grechi G412-1 Automatic Bubble Machine produce?

While specific bubble output is not mentioned, the Grechi G412-1 Automatic Bubble Machine is designed to generate a continuous stream of bubbles, perfect for outdoor play.

Is the Grechi G412-1 Automatic Bubble Machine easy to use?

Grechi G412-1 Automatic Bubble Machine is easy to operate, requiring just 2 AA batteries to get started and simple controls for bubble fun.

## VIDEO – PRODUCT OVERVIEW



<https://www.manuals.plus/wp-content/uploads/2024/11/Grechi-G412-1-Automatic-Bubble-Machine-User-Manual.mp4>

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.