

GREE YAP1F IR Remote Control User Guide


[Home](#) » [Gree](#) » GREE YAP1F IR Remote Control User Guide 

Contents

- [1 GREE YAP1F IR Remote Control](#)
- [2 ICONS DISPLAYED](#)
- [3 BUTTON FUNCTION](#)
- [4 SYSTEM MAINTENANCE](#)
- [5 FAQs](#)
- [6 SERVICES](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)



GREE YAP1F IR Remote Control

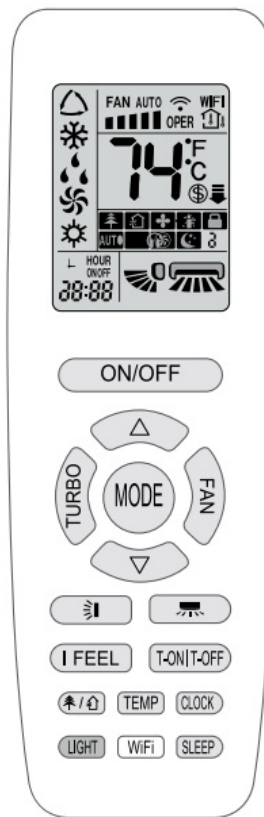

Installer: DO NOT THROW AWAY! Provide this guide to the end-user with your Contact Card attached to the back.

ICONS DISPLAYED



COOL



DRY



HEAT



POWER



SET TEMP

NOTE: Some functions not available on all models. Please read the complete owner's manual carefully before operation.

BUTTON FUNCTION

ON/OFF

Press to power the unit on or off.

FAN

Press to select fan speed (Auto, Low, Medium, High or Turbo). Auto is default.

MODE

Press to select and adjust each mode.

 HEAT  COOL  DRY
 FAN ONLY  AUTO

△

Press to raise settings including temperature and time.

I FEEL

Press to have the unit control temperature sensed at remote.

TURBO

Press to boost cooling or heating airflow. Quickest way to reach preset temperature.



Press to lower settings including temperature and time.

TEMP

Press to select temperature display: indoor or desired room temperature (Adjust desired temperature with “△” and “▽” buttons.)

SLEEP

Press to select SLEEP mode, offering custom comfort control while sleeping. See Owner’s Manual for more details.

WiFi

Press “WiFi” button to turn on or turn off WiFi function. WiFi module will restore to factory default setting.

CLOCK

Press to display time of day.

LIGHT

Press to turn lights on the unit’s Front Panel Display. Press again to turn off.

T-ON T-OFF

Press to start or stop the timer. (Adjust with “△” and “▽” buttons.) See Owner’s Manual for more details.



Press to adjust swing louver left & right.




Press to adjust swing louver up & down.

SYSTEM MAINTENANCE

CLEAN INDOOR UNIT’S AIR FILTER 1 X MONTH

Save energy by preventing indoor coils from being plugged with dirt and lint. To remove the filter, gently push forward on the handle tabs, then lift the filter out of place. Rinse or vacuum – do not scrub filter with a brush or place in the dishwasher. Damage could occur.

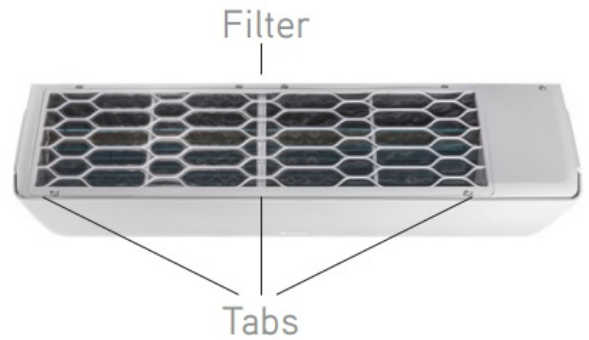

AUTO CLEAN FUNCTION, INDOOR UNIT

Under unit OFF status, hold “MODE” and “FAN” buttons simultaneously for 5s to turn Auto Cleaning on or off. When Auto Clean is on the indoor unit displays “CL” and the unit will heat up and cool quickly. You may hear the sound of flowing liquid or thermal expansion or contraction. Make sure the room is well ventilated at this time as the unit may blow cool or warm air, this is normal.

FAQs

- **Why does the fan continue to run even when the unit is not cooling or heating?**

To maintain consistent temperatures and minimize energy-loss from constant starts & stops, the fan keeps air flowing past the sensor.

- **What temperature is displayed on the remote controller?**

The remote always displays your desired indoor temperature. (You may view current indoor temperatures, as well as desired temperature, on the indoor unit's Front Panel Display.)

- **How can I operate the unit without the remote?**

Lift the front panel section on the indoor unit and locate the AUX button on the right-hand side. Press the button to turn the unit ON or OFF. (Not all functions will be available.)

- **How can I change the temperature display from Celsius to Fahrenheit?**

Turn the unit OFF, then press “ ” and “MODE” buttons on the remote simultaneously to switch between °C and °F .

SERVICES

For 6 month servicing, please call the installing contractor.

Installer: Attach your business card here.




For Additional Owner Information, scan QR Code.



For more information, visit GREECOMFORT.COM

Specifications are subject to change without notice. Manufacturer reserves the right to discontinue, or change at any time, specifications, or designs without notice or without incurring obligations. ©2022. All rights reserved.

Documents / Resources

	<p>GREE YAP1F IR Remote Control [pdf] User Guide YAP1F, IR Remote Control, Remote Control, IR Remote, Remote</p>
---	--