



GREEN LION LINT Y Lint Remover User Manual

[Home](#) » [GREEN LION](#) » GREEN LION LINT Y Lint Remover User Manual 

Contents

- [1 GREEN LION LINT Y Lint Remover](#)
- [2 GENERAL SAFETY INSTRUCTIONS](#)
- [3 PRODUCT PARTS](#)
- [4 CHARGING THE LINT REMOVER](#)
- [5 USAGE](#)
- [6 CLEANING OPERATIONS](#)
- [7 FAQs](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)



GREEN LION LINT Y Lint Remover



FOR A CORRECT AND SAFE USE OF THE APPLIANCE

- ONLY FOR HOME USE. ATTENTION! READ THE INSTRUCTIONS GIVEN IN THIS HANDBOOK VERY CAREFULLY.
- IT SHOULD BE PUT ASIDE FOR FURTHER CONSULTATION DURING THE ENTIRE LIFECYCLE OF THE PRODUCT SINCE IT GIVES IMPORTANT INDICATIONS ON THE PRODUCT'S FUNCTIONS AND SAFETY DURING INSTALLATION, USE AND MAINTENANCE.

GENERAL SAFETY INSTRUCTIONS

DANGER FOR CHILDREN

- A POWER DEVICE IS NOT A TOY. AFTER USE, STORE IT OUT OF REACH OF CHILDREN. KEEP PACKING MATERIAL (PLASTIC BAGS, CARTON, ETC.) OUT OF REACH OF CHILDREN.
- THIS APPLIANCE IS INTENDED FOR USE BY CHILDREN 8 YEARS OF AGE OR OLDER AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES, OR LACK OF EXPERIENCE AND KNOWLEDGE, SUPERVISED OR INSTRUCTED BY ADULTS RESPONSIBLE FOR THEIR SAFETY. THIS APPLIANCE IS NOT INTENDED FOR USE BY PERSONS (INCLUDING CHILDREN) WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES, OR LACK OF EXPERIENCE AND KNOWLEDGE, UNLESS THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE BY A PERSON RESPONSIBLE FOR THEIR SAFETY AND HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE BY A PERSON RESPONSIBLE FOR THEIR SAFETY.
- CHILDREN SHOULD BE SUPERVISED TO MAKE SURE THEY DO NOT PLAY WITH THE APPLIANCE.

RISK OF INJURY!

- PAY UTMOST ATTENTION IN CASE THE APPLIANCE IS USED IN PRESENCE OF CHILDREN.

- NEVER LEAVE THE APPLIANCE UNATTENDED WHILE WORKING.
- TO AVOID INJURIES, DO NOT INTRODUCE YOUR HANDS IN THE MACHINE WHILE IT IS OPERATING AND KEEP AWAY HAIR, CLOTHES AND OTHER OBJECTS.
- NEVER TOUCH THE MOVING PARTS OF THE APPLIANCE AND ALWAYS WAIT FOR THE APPLIANCE TO STOP COMPLETELY.
- DO NOT CLEAN WHILE THE APPLIANCE IS WORKING. DO NOT USE ANY SHARP OBJECT TO REMOVE POSSIBLE FOREIGN OBJECTS.
- THE CLEANING MUST NOT BE CARRIED OUT BY UNSUPERVISED CHILDREN.
- DO NOT LEAVE THE APPLIANCE EXPOSED TO ATMOSPHERIC AGENTS (RAIN, FROST, SUN, ETC.).
- **NEVER USE THE APPLIANCE:**
 - WITH WET OR MOIST HANDS;
 - IF IT HAS FALLEN AND HAS OBVIOUS RUPTURES OR MALFUNCTIONS
- REPAIRS SHOULD ONLY BE CARRIED OUT BY A QUALIFIED TECHNICIAN.
- REPAIRING THE APPLIANCE BY YOURSELF CAN BE EXTREMELY DANGEROUS.
- CLEAN THE APPLIANCE USING A DAMP CLOTH. DO NOT USE SOLVENTS OR ABRASIVE DETERGENTS.
- THE APPLIANCE IS DESIGNED FOR DOMESTIC USE.

BATTERY WARNINGS

- CHARGING MUST BE SUPERVISED BY AN ADULT
- DO NOT IMMERSE ITEM OR BATTERIES/BATTERY PACKS/ ACCUMULATORS IN WATER
- DO NOT EXPOSE BATTERIES/BATTERY PACKS/ACCUMULATORS TO HEAT OR FIRE
- IF LIQUID SPILLED FROM BATTERIES/BATTERIES/BATTERY PACKS/ACCUMULATORS COMES INTO CONTACT WITH CLOTHING OR SKIN, IMMEDIATELY WASH THE PART WITH CLEAN WATER AND SEEK MEDICAL ADVICE
- STOP USING BATTERIES/BATTERIES/BATTERY PACKS/ ACCUMULATORS IMMEDIATELY IF YOU NOTICE ANY ABNORMALITIES
- AVOID CONTACT OF BATTERIES/BATTERY PACKS/ ACCUMULATORS WITH METAL OBJECTS, SUCH AS KEYS OR COINS
- BATTERIES/BATTERY PACKS/ACCUMULATORS MAY EXPLODE OR RELEASE TOXIC SUBSTANCES. RISK OF FIRE OR BURNS. DO NOT OPEN, CRUSH, MODIFY, DISASSEMBLE, PUNCTURE, HEAT OR BURN;
- A BATTERY PACK IS TO BE UNDERSTOOD AS A SINGLE UNIT WHICH MUST NOT BE TORN, OPENED OR, IN ANY CASE, TAMPERED WITH;
- DO NOT PUT BATTERIES/BATTERY PACKS/RECHARGEABLE BATTERIES IN YOUR MOUTH. IF SWALLOWED, PROMPTLY CONTACT YOUR DOCTOR OR LOCAL POISON CONTROL CENTER.
- DO NOT CAUSE SHORT CIRCUITS, TO AVOID BURNS OR FIRE
- IN CASE OF SWELLING OF BATTERIES/BATTERY PACKS/ ACCUMULATORS, DISCONTINUE USE AND DISPOSE OF THE DEVICES IN ACCORDANCE WITH APPLICABLE REGULATIONS NOTE: THE PRODUCT CONTAINS A NON-REMOVABLE BATTERY THAT CANNOT BE REMOVED.

DANGER: DAMAGE AND/OR SPILLS!

FAILURE TO OBSERVE THE FOLLOWING WARNINGS ABOVE COULD RESULT IN RISK OF ELECTRIC SHOCK, DAMAGE/OUTFLOW OF LIQUID, OVERHEATING, EXPLOSION OR FIRE AND CAUSE SERIOUS

PERSONAL INJURY AND/OR PROPERTY DAMAGE. TREATMENT OF BATTERIES/ACCUMULATORS AT END OF LIFE. THE BATTERY/ACCUMULATOR/BATTERY AND ELECTRICAL AND ELECTRONIC EQUIPMENT, IF ANY, SHOULD NOT BE DISPOSED OF AS MUNICIPAL WASTE BUT IN ACCORDANCE WITH DIRECTIVES 2002/96/CE, 2006/66/CE AND NATIONAL TRANSPOSING LAWS FOR END-OF-LIFE PRODUCT DISPOSAL AND SHOULD BE SUBJECT TO SEPARATE COLLECTION TO AVOID DAMAGE TO THE ENVIRONMENT. TO REMOVE THE BATTERY, REFER TO THE SPECIFICATIONS

SPECIAL SAFETY INSTRUCTIONS

- The device can only be used to remove lint from clothing, fabrics, etc. Do not wear clothing when removing lint. Do not attempt to cut body hair or hair of pets with the device.
- Always turn off the device before cleaning it.
- The blades are extremely sharp!
- Be careful not to cut yourself when cleaning the device.
- The device can only be used with the blade guard mounted.
- Be sure not to bend or dent the blade guard, as this may prevent the blades from rotating.

PRODUCT PARTS



1. LINT TRAY
2. PERFORATED FERRULE
3. BLADES
4. HAND GRIP
5. USB CHARGING PORT

CHARGING THE LINT REMOVER

- Plug one end of the supplied USB charging cable into the charging socket on the device and connect the other end of the cable to a USB charger, pc, or any USB port. The charging indicator will light up.
- Charge the appliance for about 3 hours. The device can operate for about 1 hour on a full charge.

- Disconnect the USB charging cable once charging is complete.

USAGE

Place the garment on a flat surface and remove any creases. If the garment is very thin or delicate, you can fold it twice using an ironing board and remove any creases.

- Turn on the appliance by pressing the on/off button.
- Gently place the cutting disc on the garments and move the appliance up and down. Do not press the device against clothing to avoid damaging the blade guard.
- Empty the trimmer when it is about $\frac{3}{4}$ full of its contents.
- **CAUTION.** Test the device before using it, using a part of the garment that is less visible when worn.
- Be careful when using the device near buttons, zippers, seams and prints.

CLEANING OPERATIONS

- Turn off the device.
- Turn the head counterclockwise.
- Empty the blade guard.
- Clean the blade guard with a brush (cleaning brush not included).
- Replace the protective cover.
- Always charge the device before storing it if it is not used for an extended period.



Recharge the battery at least once every three months, regardless of the use of the appliance.

FAQs

How does a lint remover work?

Lint removers, also known as fabric shavers, use rotating blades beneath a protective screen to safely trim and remove lint, fuzz, and pills from fabrics. As you glide the device over the material, the blades cut off the unwanted fibers, collecting them in a detachable compartment for easy disposal.

Are lint removers safe for all fabrics?

Most lint removers are designed to be safe for a variety of fabrics, including cotton, wool, and synthetic blends.

However, it's essential to use them gently on delicate materials like silk to prevent potential damage. Always test the device on a small, inconspicuous area first to ensure compatibility.

What features should I look for when purchasing a lint remover?

When selecting a lint remover, consider the following features:

- **Power Source:** Decide between battery-operated, rechargeable, or plug-in models based on your convenience.
- **Blade Quality:** Opt for stainless steel blades for durability and efficient lint removal.
- **Adjustable Settings:** Some devices offer variable speed settings or adjustable heights to accommodate different fabric types.
- **Ease of Cleaning:** A removable lint compartment simplifies the cleaning process.

Documents / Resources

 <p>USER MANUAL</p> <p>LINT Y LINT REMOVER</p>	<p>GREEN LION LINT Y Lint Remover [pdf] User Manual</p> <p>LINT Y, LINT Y Lint Remover, Lint Remover, Remover</p>
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.