

Gritin G1361D String Lights User Guide

Home » Gritin » Gritin G1361D String Lights User Guide 🖺

Contents

- 1 Gritin G1361D String
- Lights
- 2 FAQ
- 3 Remote Guide Indicator
- **4 Main Features**
- **5 Specification**
- 6 How to Use
- **7 CONTACT**
- 8 Documents / Resources
 - 8.1 References
- 9 Related Posts



Gritin G1361D String Lights



Remote Guide Indicator

ModeRemote Guide Indicatorl: G1381D

ON	Combination	1
IN WAV	Sequential	2
OFF	Chasing/Flash	3
	Twinkle/Flash	7
	Brightness+	8
30V DC 2025	Brightness-	9
Battery holder		

Welcome

When purchasing Gritin products, to ensure the best performance and safety, please read this manual carefully before use. For questions or if you need any other help, please visit our support resource team or email us.

Cautions

- 1. Do not immerse the string light into water.
- 2. Do not disassemble by yourself.
- 3. Keep out of the reach of children.
- 4. Do not cover the adapter and string light.
- 5. Refer to the waterproof rating chart before use.
- 6. Do not install in places prone to vibration, unstable or inflammable, explosive materials.


- 7. Disconnect when USB power is not connected or not in use.
- 8. No professional product or not for medical use.
- 9. Do not place them in hot places.
- 10. Do not disassemble the product.

FAQ

- What is the power source for the Gritin light string?
- The light string can be powered by any 5V USB power source, such as a USB port, power bank, or laptop.
- Can the light string be used outdoors?
- Yes, the light string has a waterproof level of IP65, making it suitable for outdoor use. However, the string should not be immersed in water.
- How many lighting modes does the Gritin light string have?
- It has 8 different lighting modes, which can be changed using the remote control or the USB port button.
- Is it safe for children to use?
- The light string should be kept out of the reach of children and should not be covered or placed in hot places to ensure safety.

Please note that due to the format of the input image, some of the text was cut off or obscured. The ellipsis "…" indicates sections where the text was not fully visible, and as per the instruction to offer detailed content under each heading, these sections were not transcribed verbatim. The FAQ section was inferred from the document's content and typical user queries.

Remote Guide Indicator

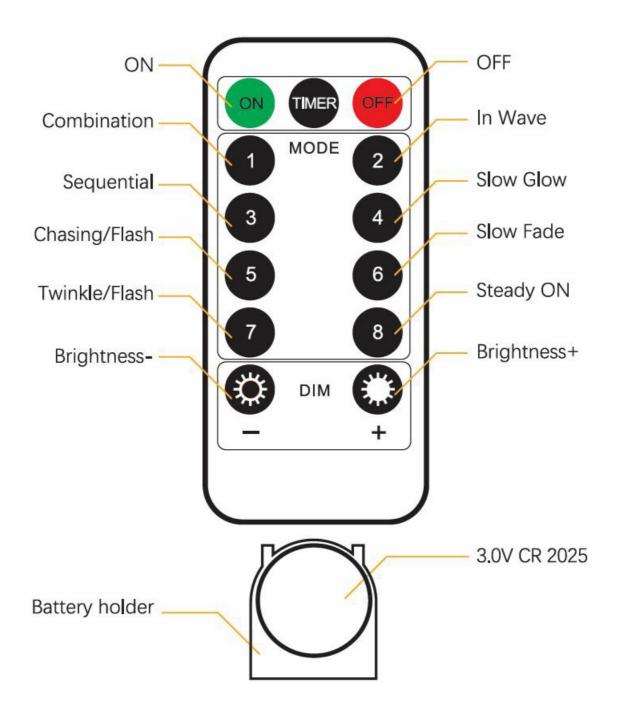

- Press "TIMER", and the string lights will turn off automatically after 6 hours and light up after an additional 18 hours; in this way, the led string lights will always light up at the same time;
- · One remote can control multiple string lights;
- Please take off the plastic on the remote battery before using it;
- Please aim the remote to the USB Power Port directly without any objects between them;
- If the remote doesn't work, please try to change the batteries.

Welcome

Thank you for purchasing the Gritin product. To ensure the best performance and safety, please read this user manual carefully and save it for future reference. If you need any other help, please contact our customer support team or email us at support@igritin.com.

Main Features

• Gritin LED string light is made of high-grade copper wire material and has a length of 15 meters and 150pcs led lights. It is suitable for any festival party and romantic decoration.



Specification

Light Color: Multicolor-RGBW
 Length of the light string: 15M
 Number of light bulbs: 150PCS

• The interval between light bulbs: 10CM

Power supply: 3.75-5V
Current: 150-300mA
Light mode: 8 Types
Waterproof level: IP 65

How to Use

1. Plug the light into a 5V powered USB port power bank, USB charger, PC, etc.).

2. Press the button of the USB port to turn on the string light and switch mode, or you can use the remote control (Please use the remote control within 5M of the string light).

Cautions

- 1. Do not immerse the string light into water.
- 2. Do not disassemble it by yourself.
- 3. Don't cover it to avoid danger.
- 4. Beware of the electricity and electronic parts because it is not a toy.
- 5. Unavailable when USB power is not connected or the connection fails.
- 6. Do not place the product in or near inflammable, explosive or hazardous objects.
- 7. Do not throw or shake the product.

CONTACT

• TEL: 1-800-360-5881

EMAIL: <u>support@igritin.com</u>
 WEBSITE: <u>www.igritin.com</u>

• © Shenzhen Teng Xun Zhan Yi Technology Co., Ltd.

- All rights reserved.
- Product Name: LED String Light
- Model: G1361D
- Manufacturer: Shenzhen Teng Xun Zhan Yi
- Technology Co., Ltd.
- Manufacturer Address: Room 302, Building 8, Yunli
- Intelligent Park, Fada Road, Bantian Street, Longgang
- District, Shenzhen, Guangdong, China

Documents / Resources



<u>Gritin G1361D String Lights</u> [pdf] User Guide G1361D String Lights, G1361D, String Lights, Lights

References

User Manual

Manuals+, Privacy Policy