



GROOVE 220MK2 Wireless Sound and Light Party System User Manual

[Home](#) » [groove](#) » GROOVE 220MK2 Wireless Sound and Light Party System User Manual 

Contents

- [1 GROOVE 220MK2 Wireless Sound and Light Party System](#)
- [2 Introduction](#)
- [3 Technical Specifications](#)
- [4 IMPORTANT SAFETY INSTRUCTIONS](#)
- [5 Features](#)
- [6 Configuration Panel](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

GROOVE

GROOVE 220MK2 Wireless Sound and Light Party System



Introduction

Thanks for your Purchase of iDance Groove 220mk2, Please read the manual with attention before use This product meets the essential requirements of Directive 2014/53/EU. This product complies with the requirements of Europe Manufactured by iDance <http://www.idanceintl.com/documentation/declarationofconformity/> Unplug this apparatus during lightning storms or when unused for long periods of time. 2014/53/EU

WARNING: TO REDUCE THE RISK OF FIRE OR SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE

CAUTION: TO REDUCE THE RISK OF FIRE OR SHOCK, DO NOT REMOVE THE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL TO REDUCE THE RISK OF FIRE OR SHOCK, DO NOT REMOVE THE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL

The lightning flash with the arrowhead symbol inside an equilateral triangle is intended to alert user of the presence of uninsulated "hazardous voltage" within the product's enclosure, which may be of sufficient magnitude to induce a risk of electric shock to the person The exclamation mark inside an equilateral triangle is intended to alert the user of the presence of the important operating and maintenance (servicing) instructions in the literature accompanying the product Please do not attempt to open the back cover or power adapter as opening or removing the covers may expose you to dangerous voltage or other hazards, and it will also cause the restricted servicing to be disabled: There are no user servicing components inside This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of Industry Canada. These limits are designed to provide reasonable protection against harmful interference in a residential installation The undersigned, iDance co declares that the radio equipment of the Groove 220mk2 type complies with the 2014/53/EU directive.

Note

- The lightning flash with the arrowhead symbol inside an equilateral triangle is intended to alert user of the presence of uninsulated “hazardous voltage” within the product’s enclosure, which may be of sufficient magnitude to induce a risk of electric shock to person
- Please do not attempt to open the back cover or power adapter as opening or removing the covers may expose you to dangerous voltage or other hazards, and it will also cause the restricted servicing to be disabled
- There are no user servicing components inside.
- This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of Industry Canada
- These limits are designed to provide reasonable protection against harmful interference in a residential installation.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture does not operate normally, or has been dropped
- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus
- The battery shall not be exposed to excessive heat such as sunshine, fire or the like
- The MAINS plugs used as the disconnect device, which shall remain readily operable
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. /
- Consult the dealer or an experienced radio/TV technician for assistance.

Technical Specifications

English
Technical Specifications
Speaker size: 8"
Musical Max Power: 200 Watts
RMS Power: 8 Watts
Power consumption: 8 Watts
Speaker Impedance 3 ohms
S/N Ratio: 70 dB
Frequency: 30Hz~20kHz
Charging Time: 4 to 8 hours
Playing Time: 2-4h
Bluetooth Version: 5.0
Bluetooth Frequency: 2.4 GHZ
Input: 5v/ 1A
Output (V,A): 3.7V 1.5A
Battery Type: 18650 lithium
Battery Capacity: 3.7V 2400 mah
Dimensions: 375 Height x 260 Wide 200 Depth in mm
Net Weight: 1.85 kgs

1 pc GROOVE 220mk2**What is included in the Box**

- 1 pc Wireless Microphone
- 1 pc Remote Control
- 1 pc USB Charging cable to connect to your phone charger (not included)
- 1 pc Instruction Manual


IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions
- Keep these instructions. Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth
- Do not block any ventilation openings.
- Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including

amplifiers) that produce heat. the safety of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong.

- The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus
- Only use attachments and accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. Portable Cart Warning

Features

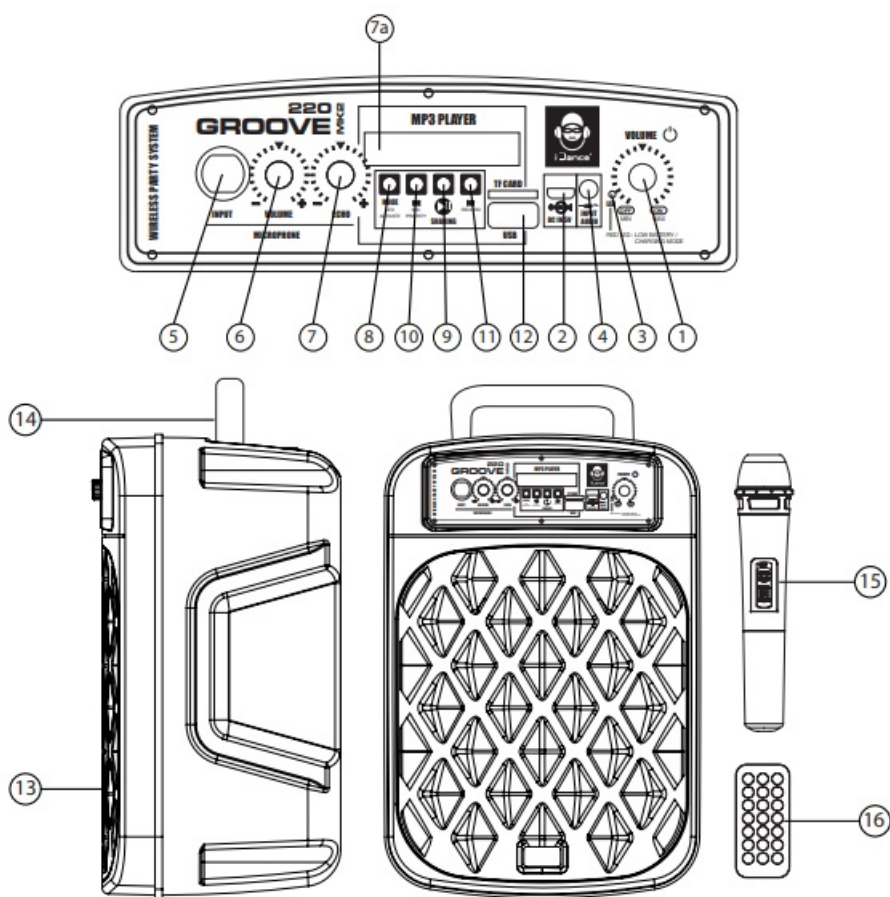

Configuration Panel

1	Power Switch and Master Volume Control
2	AC Adaptor dock to connect to the included Power Supply
3	red led to indicate the battery status.
3	Red Led is on when unit is low battery and charging


3	Red led is OFF when unit is fully charged
4	AUX IN - Audio input to connect your external source
5	MIC input - 6.35mm Jack input to connect your dynamic microphone
6	Microphone Volume Control
7	Echo effect Volume Control for the mic input
7A	Digital Display
8	MODE button: Bluetooth, AUX IN, USB MP3 Player
8	Press to select your different audio sources
8	Hold button to power on /off the leds into the woofer
9	PLAY / SHARING mode - Press to Play/Pause
9	press button for 3 seconds to access to SHARING MODE: Same smart Device can play to 2 of the same speaker using the bluetooth
10	PREV - go to previous song
10	Hold the button 2 seconds to decrease the volume of the MP3 Player
11	NEXT- go to next song
11	Hold the button 2 seconds to decrease the volume of the MP3 Player
12	USB/ TF port - Read MP3 files up to 32G capacity (FAT32)
13	DISCO LIGHT with RGB Leds in the woofer
14	XXL handle for Easy transport
15	Wireless Microphone
16	Remote control

	the Bluetooth 's pairing name is: " iDance GROOVE 220mk2 "
	If your device cannot search for "iDance Groove 220mk2", please ensure that the speaker is in Bluetooth mode. If still have Bluetooth connection problems, please switch off both Bluetooth device and Bluetooth speaker. Then start again, to scan for Bluetooth device.
— — — —	<u>If you want to convert the other device Bluetooth, please</u> disconnect the playing device from the Bluetooth speaker (disconnect tone "beep" sound), and then connect the next device.
	To Disconnect the bluetooth mode, you must disconnect the bluetooth pairing on the current used smart device

	SHARING mode
	SHARING mode, Same Audio Source to 2x iDance Speakers (same item number)
	Turn on the 2 units together at the same time
	Then, connect one of them to your bluetooth smart device, you will be able to play the same smart device to 2x GROOVE 220mk2 in wireless mode.
	USB MP3 Player
	Insert MP3 music files into USB and plug in the USB port, the machine will play the music files automatically.
	The unit is designed to play MP3 and WAV audio files contained in a USB key. If the files are not in MP3 or WAV format, the files cannot be read successfully.
	Trouble Shooting
	The unit is not Starting
	the sound is distorted
	Charge it for a least 4 hours
	the audio sound is cutting from your bluetooth
	unpair and repair your smart device
	USB / TF card is not playing
	check if you only have audio files on these mass storage device
	unplug USB / TF card, and and replug them

	check if you only have audio files on these mass storage device
	unplug USB / TF card, and and replug them
	if the problem still persist, refer to an appointed service agent, and DO NOT OPEN the speaker cover
	Microphone or guitar are not playing
	Check the volume or the connexion, be sure your microphone is Powered on
	if the unit is not starting, fully charge for 6 hours, using the included power supply adaptor
	Design and specifications are subject to change without notice
	iDance is a registered trademark in Europe and other countries
	all other product or company names are trademarks or registered trademarks of their respective owners.
	Copyrights iDance International Limited, all rights reserved

Documents / Resources

	GROOVE 220MK2 Wireless Sound and Light Party System [pdf] User Manual 220MK2 Wireless Sound and Light Party System, 220MK2, Wireless Sound and Light Party System
---	--

References

- [🌐 Create Virtual Experiences | Linden Lab](#)
- [🎧 Home | iDance](#)
- [🎧 Home | iDance](#)